



# Portable Power Bank

For your Tiny Traveler

WP ITM. TTPBB / TTPBW



Care & Use Instruction for TTPBB / TTPBW

**Important, retain for future reference:  
Read carefully**

BC

# TABLE OF CONTENTS

1. Introduction .....	3
2. Technical Specifications .....	4
3. Feature Overview .....	5
4. Package Contents.....	5
5. Checking The Battery Level .....	6
6. Charging Your Baby Cam .....	7
7. Charging Your Power Bank .....	8
8. Power Button Functionality .....	10
9. Warning .....	10
10. Warranty .....	12
11. General Information .....	14

 
 
 
## 1. INTRODUCTION

Thank you for purchasing the Tiny Traveler™ Portable Power Bank. Designed by our family with your family in mind. Tiny Traveler™ is set out to create simplified tech to keep your little ones safer. The Portable Power Bank is essential for making your on-the-go charging free of wires and hassle. It's packed with features such as compact design, easy attachment and rechargeable battery. Whether it's a quick run to the grocery store, driving to the park or road trips, you'll be able to take your Tiny Traveler wherever you go. Please read all of the operating instructions carefully before using your Portable Power Bank. Improper use will void the manufacturer's warranty. Welcome to the Tiny Traveler™ family!

## 2. TECHNICAL SPECIFICATIONS


<b>Product Dimensions:</b>	4.09 x 3.72 x 1.14 in (104 x 94.5 x 29 mm)
<b>Product Weight</b>	0.45 lbs (206g)
<b>Battery Capacity:</b>	5000mAh 3.6V 18Wh
<b>USB-C Input:</b>	5V 2A
<b>Micro-USB Input:</b>	5V 2A
<b>Interchangeable Micro-USB / USB-C Output</b>	5V 2.4A
<b>USB-C Output:</b>	5V 2.4A
<b>Operating Temperature:</b>	-10°C~40°C (14°F~104°F)
<b>Storage Temperature:</b>	0°C~35°C (32°F~95°F)
<b>Charging Temperature:</b>	0°C~40°C (32°F~104°F)
<b>Charging Time:</b>	1.5 hours

### 3. FEATURE OVERVIEW

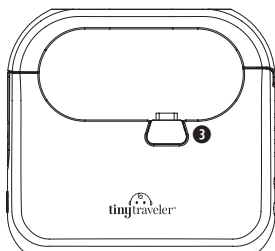

- ❶ Lock / Unlock Switch
- ❷ Power Button
- ❸ Micro-USB Connector (Pre-installed) / USB-C Connector
- ❹ LED Indicators
- ❺ Micro-USB Input
- ❻ USB-C Output / Input

### 4. PACKAGE CONTENTS

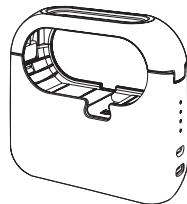

Tiny Traveler™  
Portable Power Bank



 
Micro-USB  
Connector



USB-C  
Connector



33" USB to USB-C  
Charging Cable

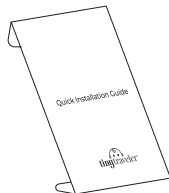

Quick Installation  
Guide

## 5. CHECKING THE BATTERY LEVEL

### Battery Level

Connect your device to the Power Bank to check the current battery capacity. Once the device is connected, the Power Bank will automatically begin charging the device.

<b>LED Status</b>	No Light ○ ○ ○ ○	1 Solid Light ● ○ ○ ○	2 Solid Lights ● ● ○ ○	3 Solid Lights ● ● ● ○	4 Solid Lights ● ● ● ●
<b>Battery Capacity:</b>	Fully Discharged	0-25%	25-50%	50-75%	75-99%


### Charging

When charging, the LED Indicators will flash in succession to indicate the current charge level. All lights will stay on solid when the Power Bank is fully charged


<b>LED Status</b>	1 Flashing Light ● ○ ○ ○	1 Solid Light ● ○ ○ ○	2 Solid Lights ● ● ○ ○	3 Solid Lights ● ● ● ○	4 Solid Lights ● ● ● ●
<b>Battery Capacity:</b>	0-25%	25-50%	50-75%	75-99%	Full

## 6. CHARGING YOUR BABY CAM


1. Slide the switch down and press the button below to unlatch the housing of the Power Bank.

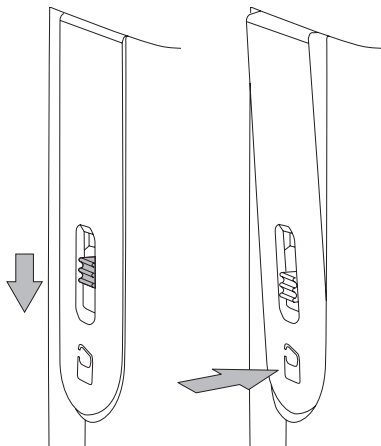


2. Make sure the inserted connector is compatible with your baby cam. Replace the original Micro-USB Connector with the USB-C Connector provided for baby cams with USB-C input ports.

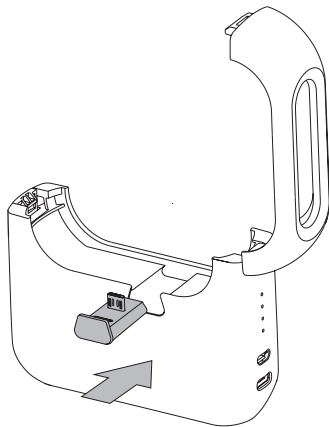

3. Attach your baby cam onto the Power Bank using the connector.

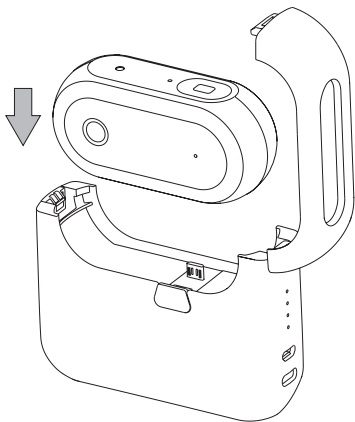

4. Close the housing of the Power Bank to begin charging.

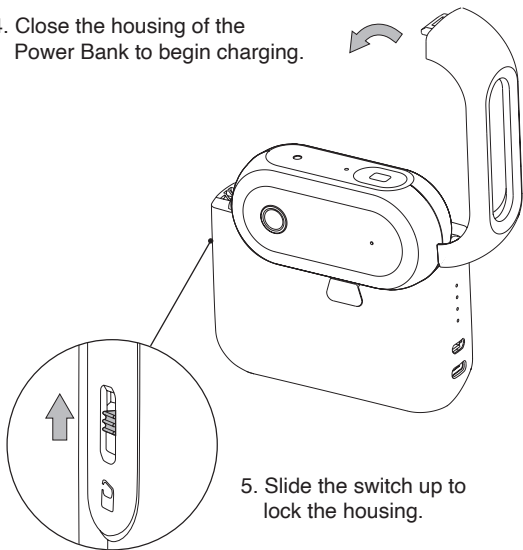

5. Slide the switch up to lock the housing.

**Caution:** The Power Bank should not be used to charge a device when the Power Bank is being used with the baby cam. If you want to use the Power Bank to charge an additional device, we recommend disconnecting the baby cam.



## 7. CHARGING THE POWER BANK

### USB to USB-C Charging Cable



1. Plug the USB end of the charging cable included into a USB port on a computer or 2A USB wall adapter (not included).
2. Connect the USB-C end of the charging cable to the USB-C input port on the Power Bank.
3. Disconnect the Power Bank when it is fully charged. Store the Power Bank in a safe place when not in use.

### USB to Micro-USB Charging Cable (not included)





1. Plug the USB end of the charging cable (not included) into a USB port on a computer or 2A USB wall adapter (not included).
2. Connect the Micro-USB end of the charging cable to the Micro-USB input port on the Power Bank.
3. Disconnect the Power Bank when it is fully charged. Store the Power Bank in a safe place when not in use.

We recommend using the USB to USB-C Cable provided in this package or the USB to Micro-USB Cable that comes with your baby cam as your charging cable.

**NOTES:** Fully charge the Power Bank before first use. To preserve the battery life and performance, check the battery status regularly, charge when needed. Recharge every 2-3 months if Power Bank is not being used.

In order to reduce the risk of fire or electric shock, an adapter shall be chosen that is suitable for the application and is certified as a Class 2 or LPS power supply or power adapter.

## 8. POWER BUTTON FUNCTIONALITY

Action	Behavior
Press  once	Turn on the Power Bank and LED Indicators.
Press  twice	Turn off the Power Bank and LED Indicators.

## 9. WARNING

### INSTRUCTIONS PERTAINING TO RISK OF FIRE, ELECTRIC SHOCK, OR INJURY TO PERSONS

- Do not allow this product to become wet. Exposure to excessive moisture will damage the unit.
- Do not immerse the product in water.
- Do not operate the product in explosive atmospheres, such as in the presence of flammable liquid, gas or dust.
- Do not modify or disassemble this product.
- Do not store in locations where the temperature may exceed 95°F (35°C).
- Under extreme heat conditions, battery leakage may occur. Avoid contact with your skin. In case of skin or eye contact, rinse immediately with clean water and seek medical attention.
- If battery leakage occurs, take it to your local battery recycling center for disposal. Do not attempt to use.

### BATTERY DISPOSAL

The battery is self-contained and not consumer replaceable. The battery must be disposed of properly when it no longer holds a charge. Proper charging practices will increase the life of the product. For information on battery recycling, call toll-free 800-822-8837.

For information regarding air travel safety with batteries, please check the U.S. Department of Transportation prior to travel at <http://phmsa.dot.gov/safetravel/batteries> or contact your airline if traveling from a country outside the U.S.

**NOTE:** The Portable Power Bank gives 18 Watt hours of power.

## IMPORTANT SAFETY INSTRUCTIONS

**WARNING** - When using this product, basic precautions should always be followed, including the following:

- a. Read all the instructions before using the product.
- b. To reduce the risk of injury, close supervision is necessary when the product is used near children. Children should not operate this device unless under strict supervision by a person responsible for their safety.
- c. Do not put fingers or hands into the product.
- d. Do not use any attachments not sold by Tiny Traveler™, failure to do so may result in a risk of fire, electric shock, or injury to persons.
- e. To reduce risk of damage to the electric plug and cord, pull from the base rather than pulling the cord when disconnecting the Portable Power Bank.
- f. Do not use the Portable Power Bank that is damaged or modified. Damaged or modified Portable Power Bank may exhibit unpredictable behavior resulting in fire, explosion or risk of injury.
- g. Do not operate the Portable Power Bank with a damaged cord or plug, or a damaged output cable.
- h. Do not disassemble the Portable Power Bank; take it to a qualified service person when service or repair is required. Incorrect reassembly may result in a risk of fire or electric shock.
- i. To reduce the risk of electric shock, unplug the Portable Power Bank from the outlet before attempting any instructed servicing.
- j. The device shall be stored indoors and protected from the elements.
- k. For Indoor Charging Use only, not intended to be charged outdoors.
- l. When in use, steps should be taken to reduce the exposure to rain, sleet, snow, and the like.
- m. Do not overcharge the internal battery.
- n. This product is suitable for use in home, motorhome, travel trailer, office, household workshop or garage. Do not operate in dusty or high humidity areas.
- o. Do not expose the Portable Power Bank to fire or excessive temperature. Exposure to fire or temperature above 100°C (212°F) may cause explosion.
- p. Do not use the Portable Power Bank in excess of its output rating. Overload outputs above rating may result in a risk of fire or injury to persons.

## 10. WARRANTY

### **Tiny Traveler™ Limited Warranty**

Tiny Traveler™ warrants, to the original purchaser, that its products are free from defects in material and workmanship for 1 year from the date of original purchase. Where permitted by law, Tiny Traveler™'s liability shall be limited to that set forth in this limited express warranty. This limited express warranty shall be the exclusive remedy of the purchaser and Tiny Traveler™ makes no other warranty of any kind aside from the limited express warranty stated above.

**NOTE:** Warranty only applies for North American customers of purchases made in North America. Register your Tiny Traveler™ products at [www.mytinytraveler.com](http://www.mytinytraveler.com) within 30 days of purchase to redeem your 1-year warranty.

### **Conditions of Warranty**

If during the 1-year warranty period your new product is found to be defective, Tiny Traveler™ will repair such defect, or replace the product, without charge for parts or labor subject to the following condition:

1. All repairs must be performed by Tiny Traveler™.
2. All warranty claims must be accompanied by a copy of the sales receipt or bill of sale.
3. The equipment must not have been altered or damaged through negligence, accident, improper operation, or failure to follow the product instructions for installation, use, or care.
4. The replacement of parts is excluded from the warranty when replacement is necessary due to normal wear and tear.
5. Repair or replacement parts supplied by Tiny Traveler™ under this warranty are protected only for the unexpired portion of the original warranty.
6. This is a “repair or replace” warranty only, and does not cover the costs incurred for the installation, removal or reinstallation of the product, or damage to any mobile phone, electronic device or vehicle.

**Owner's responsibilities:**

Tiny Traveler™ will make every effort to provide warranty service within a reasonable period of time. SHOULD YOU HAVE ANY QUESTIONS ABOUT SERVICE RECEIVED OR IF YOU WOULD LIKE ASSISTANCE IN OBTAINING SERVICE, PLEASE CALL TOLL FREE 1.866.294.9244 DURING REGULAR BUSINESS HOURS, MONDAY THROUGH FRIDAY 8:00 AM TO 5:00 PM (Pacific Standard Time). For customer service and technical support, please call us at 1.866.294.9244 or email us at [info@mytinytraveler.com](mailto:info@mytinytraveler.com).

**NOTE:** Toll Free # is for North America Customers ONLY.

If at that time it is determined that a replacement unit is needed, the support representative will issue a Return Authorization and instruct on how to get a new unit. Tiny Traveler™ makes no other warranty of any kind aside from the limited express warranty stated herein.

DISCLAIMER OF WARRANTIES, INCLUDING WARRANTY OF MERCHANTABILITY AND WARRANTY OF FITNESS FOR PARTICULAR PURPOSE: EXCEPT AS SPECIFICALLY SET FORTH HEREIN, NO WARRANTY OR REPRESENTATION, EXPRESS OR IMPLIED, IS MADE AS TO THE PORTABLE POWER BANK. TINY TRAVELER™ AND/OR ITS AFFILIATES EXPRESSLY DISCLAIMS, WITHOUT LIMITATION, ANY STATUTORY WARRANTIES AND ALL IMPLIED WARRANTIES, INCLUDING ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE.

Tiny Traveler™ and/or its affiliates are not responsible for a user's intended or actual use of the Portable Power Bank. In no event shall Tiny Traveler™ and/or its affiliates have any liability for any losses (whether direct or indirect, in contract, tort or otherwise) incurred in connection with the Portable Power Bank, including but not limited to damaged property, personal injury and/or loss of life. Neither shall Tiny Traveler™ and/or its affiliates have any liability for any decision, action taken based on relying on the stability or performance of the Portable Power Bank. Tiny Traveler™ and/or its affiliates, the manufacturer, distributor and seller shall not be liable for any injury, loss or damage, incidental or consequential, arising out of the use or intended use of the product.

## 11. GENERAL INFORMATION

### Customer Service/Contact

IF YOU ARE EXPERIENCING ANY ISSUES WITH THE PRODUCT DURING OPERATION, DO NOT RETURN THE PRODUCT TO THE STORE. CONTACT TINY TRAVELER™ DIRECTLY FOR INSTRUCTIONS ON HOW TO RETURN / EXCHANGE THE PRODUCT.

### FCC Compliance Statement:

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation.

**WARNING:** Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications or change to this equipment. Such modifications or change could void the user's authority to operate the equipment.

**NOTE:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

## **CHOKING HAZARD**

The Portable Power Bank contains small parts. Adult installation is required. Exercise care when unpacking and assembling the product. This product is not a toy. At no time should children be allowed to play with it. It should only be operated by adults who have read the safety and operating instructions listed in this manual.

Tiny Traveler™ Portable Power Bank for your Tiny Traveler

Model: TTPBB/TTPBW

Responsible Party:

Tiny Traveler™

2975 Red Hill Ave., Ste. 100, Costa Mesa, CA 92626

Tel: 1-866-294-9244



A Horizon Brands Company  
2975 Red Hill Ave., Ste. 100,  
Costa Mesa, CA 92626, U.S.A.  
1.866.294.9244

[info@mytinytraveler.com](mailto:info@mytinytraveler.com)

© 2023 ADC Solutions Auto, LLC.

All rights reserved.

**[www.mytinytraveler.com](http://www.mytinytraveler.com)**



**@mytinytraveler**

ML-TTPB\_V1