



**Bielay**

**INSTRUCTION MANUAL**

**warmness**  
electric blanket

[bielay.com](http://bielay.com)

# Instruction Manual

**Bielay**

## Contents

Important Instructions and Safety Tips . . . . .	2
Warnings . . . . .	3
Cleaning and Maintenance. . . . .	7
Fitting Instructions . . . . .	9
Using Your Blanket. . . . .	10
After Sales Support. . . . .	12
Your Guarantee. . . . .	13

# Important Instructions and Safety Tips

The Bielay logo consists of the word "Bielay" in a blue, sans-serif font, centered within a white circle. The circle is set against a dark blue background that features a subtle pattern of white stars and a faint silhouette of a city skyline at the bottom of the page.

**Instructions for correct and safe use.**

**RETAIN FOR FUTURE USE.**

**READ THE INSTRUCTIONS BEFORE USE.**

**Safety instructions:**

The use of any electrical appliance requires the user to follow some common-sense safety rules. Failure to comply can cause damage to the appliance.

- Unpack the Electric Blanket (“Blanket”) and ensure it has not been damaged during transportation or opening.
- When the Blanket is folded, crumpled or used abnormally the Blanket can overheat which will activate the permanent protection function. This cannot be repaired at home and should be returned. Please email us: [info@bielay.com](mailto:info@bielay.com).
- If the power voltage is lower than recommend, the temperature of the Blanket rises slowly. This situation is not a malfunction of the Blanket. Users should pay attention and check power voltage level.
- Use only as an underblanket

# Warnings

Bielay

**To prevent damage or malfunction, please observe the following while using the Electric Blanket. Failing to do so will void our guarantee:**

- Do not use folded or rucked. (Fig.1). **Never turn the Blanket on while folded or creased.**
- Ensure the Blanket is flat when in use. (Fig.2)
- Do not use pins on the appliance. Do not scratch with sharp devices. Do not attempt to secure the Blanket with pins or other metal objects (Fig.3)
- Use the Blanket under the body only. Do not wrap the body with the blanket or use in any other way. (Fig.4)



- Do not use with a helpless person, an infant, or person insensitive to heat. (Fig.5)
- Do not turn on the Blanket when there is any folded bedding or heavy objects on it, so as not to cause the Blanket to overheat. (Fig.6)
- Do not expose the Blanket to direct sunlight. Do not iron the Blanket. Avoid any damage to the insulation of the heating wires. (Fig.7)

# Warnings

Bielay

- Do not use together with any other heating appliances (such as foot warmer, hot-water bottle). (Fig.8)



- Do not use with anything that can start a fire on the bed such as cigarettes, sparks etc, which can lead to fire. (Fig.9)
- Switch off the Blanket power supply when not in use. (Fig.10)



- Do not dry clean. (Fig.11)
- Not to be used by very young children (0-3 years). (Fig.12).
- Children under the age of three are not to use this Blanket due to their inability to react to overheating.
- This Blanket is not to be used by young children over the age of three unless the controls have been pre-set by a parent or guardian and using the appliance under supervision.

# Warnings

**Bielay**

- Please dispose of in the correct manner and separately from domestic waste.
- Do not unplug the power plug by pulling on the power cord and **do not move the Blanket by pulling on the power cord.**
- Only operate and control using the switch unit or controller.
- The Blanket is not to be used in hospitals.
- **Do not attempt to repair the Blanket by yourself.**
- The power cord of the Blanket cannot be changed or repaired. If the cord is damaged, the appliance must be disposed of.
- If used on an adjustable bed, please check the Blanket or cord cannot become trapped and the cord is not stretched.
- Children should not use the Blanket unless their parents or guardian have already set it up in advance, or unless the child has been adequately instructed on how to use it safely.
- Children should not be allowed to treat the blanket as a toy.
- Do not use when crumpled.
- Do not tuck under the mattress.
- For indoor use only.

# Warnings

The logo for Bielay, consisting of the word "Bielay" in a blue, sans-serif font inside a white circle.

- Do not insert pins.
- If the heating wire has been cut, do not attempt to repair it by yourself. Please contact us and we can help.
- For all night, and or prolonged use, please set the switch button to “1” only. Do not set above “1”.
- Do not try to repair a fuse link or thermal link. The appliance must be returned to us or sent to a professional if the link has ruptured.

**Users must observe all the above points. Improper use of the Blanket can lead to fire, body injury or property loss.**

# Cleaning and Maintenance

The Bielay logo consists of the brand name "Bielay" in a white, sans-serif font, centered within a white circle. This circle is set against a dark blue background that features a subtle pattern of white stars and soft, light blue clouds.

**Please note the Bielay Electric Blanket can be washed but NEVER DRY CLEANED.**

- **HAND WASH OR MACHINE WASH (40 degrees)**
- **BEFORE WASHING DISCONNECT THE PLUG FROM THE MAINS POWER SUPPLY.**
- Ensure the Blanket is at room temperature before cleaning.
- Prior to washing it is essential that you measure the Blanket and ensure that it has returned to approximately its original size after washing.
- Hand washing - unplug the Blanket from the power socket, disconnect the control switch and cord from the Blanket. Use a mild washing powder or detergent and warm water, soak for 5 minutes, gently wash and rinse thoroughly in clean water.
- Machine wash – unplug the Blanket from the power socket, disconnect the control switch and cord from the Blanket. Wash as **wool at 40 degrees.**
- **WARNING: DO NOT ALLOW HEAT SWITCH OR CONTROL UNIT TO GET WET DURING WASHING.**



# Cleaning and Maintenance

**Bielay**

## Drying

- Never wring the Blanket
- Please re-shape the Blanket prior to drying.
- Air dry on clothes line. **DO NOT peg on the wired area of the blanket** as it will damage the circuit.
- Please ensure the Blanket is completely dry before use.
- Tumble dry on low heat setting if required.

## Inspection prior to use

- Inspect to ensure that no wire is visible through the surface, ensure the wires have not formed loops or twisted back. Hold to the window. Check the controller, power supply cord and plug regularly for cuts or damage.


## When not in use please store as follows:

Do not place heavy items on the Blankets as this causes deep creases that may damage the wiring. The best method to store is to leave on the bed; however, you may roll or fold without creasing.

- When not in use for prolonged periods, please unplug the blanket from the mains socket.
- When storing the appliance, allow it to cool before folding.

# Fitting Instructions

**Bielay**

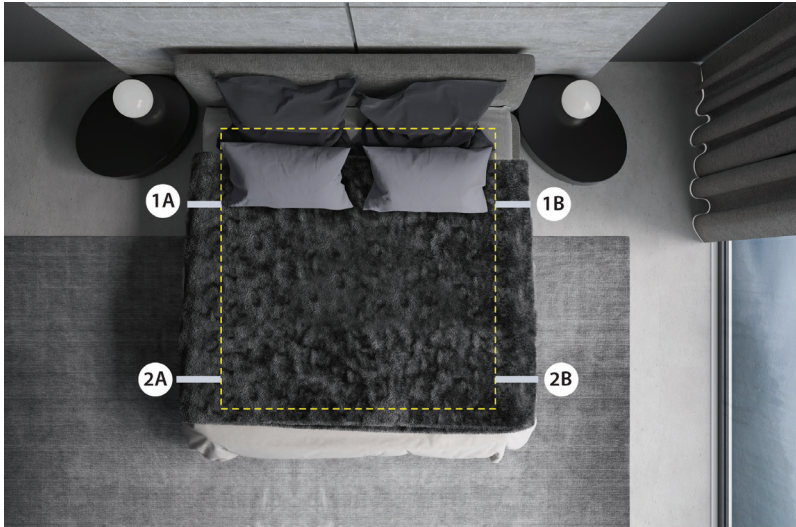

1. Use the cord at point 1A underneath the mattress to point 1B, to tighten and tie a secure knot.

2. Use the cord at point 2A underneath the mattress to point 2B, to tighten and tie a secure knot.

3. Ensure that your Blanket is positioned correctly as above.

# Using Your Blanket

**Bielay**

Once the Blanket has been fitted to the bed correctly and the power source has been connected, plug the power lead into the closest socket at the pillow end, using an extension lead if needed to ensure that the lead is not stretched.

**The Blanket is designed to preheat your bed to the desired temperature using the temperature control switch. The controls vary depending on which model chosen.**

## **Switch Control**

The Blanket has 3 heat manual setting.

### Setting the heat

The numbers on the control panel represent the following heat levels

0 = Off Position.

1 = Low Heat Position.

2 = Medium Heat Level.

3 = Hight Heat Level.

# Using Your Blanket

**Bielay**

## Time it takes

- The blanket will start to heat after a few minutes provided it is covered correctly with a duvet or blanket (this will depend on room temperature and the type of bedding used).
- **If using the blanket all night long or for extended period, please use a low heat setting of 1.**

# After Sales Support

**Bielay**

Examine the cord and Blanket on a frequent basis, for signs of wear and damage.

**Please check the following if the Blanket fails to operate:**

- The power plug and socket have not become disconnected.
- The power supply plug is correctly connected to the flex.
- Check the power supply fuse and 3 amp plug fuse.

**If the Blanket is still faulty and you have proof that the Blanket was purchased within the last 3 years, please contact the Customer Services Team. Email us at: [info@bielay.com](mailto:info@bielay.com)**

**To validate your guarantee please register your Bielay Electric Blanket by emailing us the purchase date and invoice details e.g screen shot of your invoice:**

**[info@bielay.com](mailto:info@bielay.com)**

**You can also register your guarantee at: [www.bielay.com](http://www.bielay.com)**

# Your Guarantee

The Bielay logo consists of the word "Bielay" in a white, sans-serif font, centered within a white circle. This circle is set against a dark blue background that features a subtle pattern of white stars and soft, light blue cloud-like shapes.

Please retain the retailer's receipt as proof of purchase. Staple your receipt to the back cover of this instruction booklet.

**This guarantee is only valid if the appliance has been used for domestic use only in accordance with the instructions provided.**

All Bielay products are individually tested before leaving the factory. If the fault develops within 30 days of purchase, please return to the place of purchase for a replacement.

If the fault develops after 30 days and within 3 years of original purchase, you should email the Customer Services Team: [info@bielay.com](mailto:info@bielay.com)

You will be asked to return the Blanket (packaged appropriately) to the address below together with proof of purchase and your contact details.

**82E Holland Road  
Kensington and Chelsea  
London  
W14 8BN  
United Kingdom**

All faulty Blankets (apart from the exceptions below) will be replaced and returned within 28 days.

Please register your product to validate your guarantee. Take a picture of the proof of purchase with your mobile phone, email the image. We will send confirmation of receipt within 24 hours. It's that easy. **You must register your product for the 3 year guarantee within 30 days from date of purchase.**

# Your Guarantee

**Bielay**

## **Exclusions:**

Bielay shall not be liable to replace or repair the goods under the terms of the guarantee in the following cases:

- Fault caused through accidental use, misuse, negligence or used contrary to the manufacturer's recommendations and care instructions.
- Used on the incorrect power voltage supply.
- If the appliance has been tampered with by an unqualified person.

**This guarantee does not affect your statutory rights as a customer. The guarantee does not confer any rights other than those expressed, and we shall not be liable for any indirect or consequential loss or damage.**



**Bielay**