



Thank you for purchasing your Murchison Series Watch!

Please read these instructions carefully to understand how to operate your watch.

Should you require any further information, please check out website and feel free to contact us.

Contents

Watch Specifications

2

Instructions

4

Warranty

6

Keep up to date

8

The Murchison Series

Inspired by the Pilbara region of Western Australia, the Pilbara Series was intended to be a robust wristwatch which is as at home in the rugged Pilbara landscape as it is in any boardroom – a true everyday watch, with subtle styling, and great specs.



SPECIFICATIONS

- Case Material: 316L Stainless Steel
- Case Diameter: 40mm
- Case Thickness: 11.5mm
- Lug Width: 20mm
- Movement: Sellita SW200 self winding
- Power Reserve 40 Hours
- Crystal: Sapphire
- Water Resistance: 100m/10ATM



Instructions

The Murchison Series watches are fitted with the Sellita SW200, self-winding/automatic, movement

Important– the Murchison series watches have screw down crowns in order to achieve water resistance.

The crown must be unscrewed in order to set the time.

When screwing the crown back in, apply light pressure towards the case to engage the thread, and then screw in. The crown must be fully screwed in for watch to be water resistant.

Once unscrewed the movement has 2 positions, as shown in the image below.

1) Unscrewed – when in this position, the crown can be rotated clockwise to manually wind the movement.

2) Fully pulled out - This position allows for the time to be set. Rotate crown clockwise or counter-clockwise to move hands to desired location. When the movement is in this position, the seconds hand will stop moving which allows for more accurate time setting when desired.





Warranty

We stand behind our products; your Houtman Watch timepiece watch is internationally warranted by HoutmanWatch.com.

Warranty Period:

Mechanical watches (e.g. Murchison Series, Pilbara Series): 2 years from date of shipping.

This warranty covers manufacturing and material defects, it does not cover:

- Straps, glass or batteries
- Internal or external damage from excessive wear, improper use or mishandling.
- Damage resulting from service provided from an unauthorised service agent
- Damage resulting from normal wear and tear, impact, negligence, including but not limited to chips in the sapphire, scratches, or wearing away of strap or watch finishes, lume, or coatings.
- Water damage resulting from improper use, such as exceeding watch maximum depth rating, or failure to screw-down crown.
- We reserve the right to refuse warranty claims if our inspections reveals unauthorised service, improper use, or claims against water damage if our pressure testing indicate that seals are in working order.




Keep up to date

Keep up to date on our latest news and new models; subscribe to our newsletter on our website, or follow us on social media



<https://www.facebook.com/HoutmanWatch>

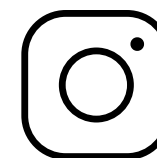

https://www.instagram.com/houtman_watch/@houtman_watch



<https://www.pinterest.com.au/houtmanwatches/@houtmanwatches>



www.Houtman.Watch