

BLAUPUNKT

Instruction Manual



Enjoy it.

BOOMBOX



Safety information

Important - Please read these instructions fully before installing or operating

Power source



- This symbol means that this unit is double insulated. An earth connection is not required.
- The appliance must be connected to a 110-240 volt 50/60Hz AC supply by means of a three pin socket.
- Unplug this apparatus during lightning storms or when unused for long periods of time - to prevent damage to this product.



- Opening or removing covers may expose you to dangerous voltages or other hazards.



- To prevent risk of fire or electric shock, avoid overloading wall outlets, extension cords, or integral convenience receptacles.

- Use suitable power sources - Plug the product into a suitable power source, as described in the operating instructions or as marked on the product.
- The supply voltage should be the same as that indicated in the technical specifications and the appliance rating plate.
- If the socket outlets in your home are not suitable for the plug supplied with this unit check with a qualified electrician for replacement.
- In order to disconnect the apparatus from the mains completely, switch off the outlet and remove the mains plug completely.



- Do not bend, stretch or pull the supply cable in order to avoid electric shock.
- When installed, the power socket must be within easy reach.
- Do not install the unit in a confined space. Allow adequate ventilation to prevent heat build-up.
- For indoor use only.

Heat build up

- During use the unit will heat up, this is not a malfunction. If the unit is used continuously at high volume levels, the unit temperature will rise considerably. Do not touch the unit to avoid potential burns.

Colour irregularity on TV screen

Colour irregularities may be seen on certain types of TV.

- If such an irregularity is seen turn off the TV, then turn on again after 15 to 30 minutes.
- If the colour irregularity is still seen place the soundbar unit further away from the TV.

Moisture and water

- Do not use this apparatus near water or moisture.
- Do not use this product near a bathtub, washbowl, kitchen sink, and laundry tub, in a wet basement, near a swimming pool, or anywhere else that water or moisture is present.

Heat sources and flames



- Batteries shall not be exposed to excessive heat such as sun, fire or the like
- To prevent risk of fire or electric shock, avoid overloading wall outlets, extension cords, or integral convenience receptacles.

Servicing and repairs

- Refer all servicing to qualified service personnel
- Servicing is required when the apparatus has been damaged in any way: such as liquid has been spilled or objects have fallen into the apparatus; the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.

For smooth operations, please read this manual carefully before using. Any content revise of the manual won't be declared again, and we are not responsible for consequence caused by fault or oversight of this manual.

FEATURES:

1. 2.0CH portable Bluetooth waterproof speaker
2. Water resistant IPX5, splash-proof, rain-proof, perfect for beach, poolside, boat and more outdoor activities;
3. Dedicated button for TWS function to achieve true wireless Bluetooth playing with double enhanced stereo sound;
4. With A2DP Bluetooth, enjoy wireless music streaming from any Bluetooth-enabled device such as your mobile phone, notebook, iPhone or iPad
5. Bluetooth operating range 10 meters;
6. With USB and Micro SD card supporting;
7. With FM radio
8. With Line-in function, suitable for PC, MID, TV and other audio devices;

 
Technical Specifications:








- Input voltage: 5V $\overline{\text{---}}$ 2A
- Frequency effect: 75Hz—12KHz
- S/N : \geq 80dB
- FM frequency : 87.5-108MHz
- Battery : 3.7V, 4500mAh
- Product size: 368x139x182mm

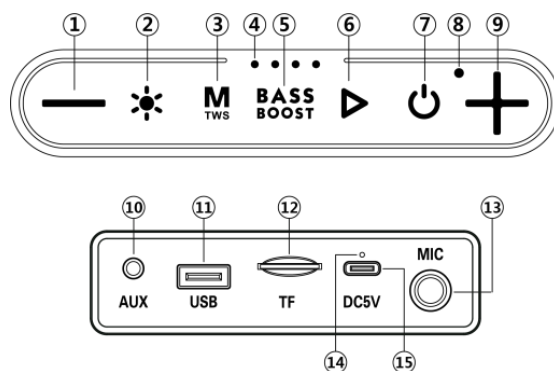Accessories:

- | | |
|------------------------|-----|
| 1. Charging Cable | 1PC |
| 2. AUX Cable | 1PC |
| 3. Remote | 1PC |
| 4. Wireless Microphone | 1PC |

Product Feature (subject to the actual product):



1. 【  】: Short press to decrease volume. Long press to play the previous songs when playing music, Long press to select the previous radio station when in FM mode.
2. 【  】: Short press to turn on the ambient light, long press to directly turn off the ambient light.
3. 【  】: Short press mode conversion: Bluetooth, FM, AUX, U disk, TF card . Long press for TWS function.
4. 【White light】: Battery indicator.
5. 【  】: Short press to switch sound effects.
6. 【  】: Short press to play/pause, and long press to automatically search for channels in FM mode. When playing a recording file, long press the play button to delete the recording. When playing music, long press the play button to quickly enter the recording file playback. In the Bluetooth mode, long press the play button to directly disconnect the Bluetooth connection.
7. 【  】: Long press to power on/off. (Press and hold for 10 seconds to restore factory settings)
8. 【Blue light】: Function indicator.
9. 【  】: Short press to increase volume. While playing music, long press to play the next music. Long press to select the next radio station when in FM mode.
10. 【 AUX 】: AUX audio input
11. 【 USB 】: Insert the U disk to play MP3 music. (Max workable capacity for USB is 64 GB, if more than 64 GB it cannot work)
12. 【 TF 】: Insert TF card to play MP3 music. (Max workable capacity for TF Card is 64 GB, if more than 64 GB it cannot work)
13. 【 MIC 】: Plug in a wired microphone and singing a song.
14. 【Charging indicator】: The red light is on when charging, the red light is off when fully charged and the green light is on.
15. 【DC 5V】: Charging jack, use a USB charging cable to connect with the charger for charging.

Bluetooth Connection Operation:

Turn on to enter Bluetooth mode. Then turn on the mobile Bluetooth and search the Bluetooth name of the speaker or find a string of digital code for pairing. If there is a prompt to pair the password, please enter "0000" and click confirm connection.

Bluetooth internal recording operation:

1. Insert TF card or U disk, then switch to Bluetooth mode
2. The mobile phone plays the accompaniment music after connecting to the bluetooth
3. Insert in a wired microphone or turn on a wireless microphone.
4. Long press the record button, the Bluetooth internal recording starts to work, and then short press the record button to finish the internal recording and start to play the internal recording file.

 
Charging Instruction:

1. To protect the performance of the battery, avoid using the machine while charging.
2. Note: The machine has no power bank function, it is forbidden to connect other devices through the USB interface.
3. Use a 5V $\overline{\text{---}}$ 2A charger connected with usb charging cable for the device to charge, the red light is on when charging, and the red light is off when fully charged, and the green light is on.

TWS connection operation:


1. When in Bluetooth mode, turn on two bluetooth speaker's device at the same time. Long press the mode button of any one of the speakers, and both speaker device will be automatic pairing successfully. And long press the mode key to disconnect the TWS interconnect function.
2. When the TWS is connected, turn on the Bluetooth function of the mobile phone. After searching for the name of the Bluetooth speaker, click the name of the Bluetooth speaker on the mobile phone to pair it. After the pairing is successful, open the player of the mobile phone to play music, and the two Bluetooth speakers will play the mobile phone synchronously selected music.
3. When the TWS is connected, and the functions of the other Bluetooth speaker will be synchronized when connected with any one of bluetooth speaker device. Long press the shutdown button of any Bluetooth speaker, and the other Bluetooth speaker will also be shut down synchronously.
4. When the TWS is connected, the optimal distance between the two Bluetooth speakers is about 5 meters.

Remoter Schematic diagram and operation instructions

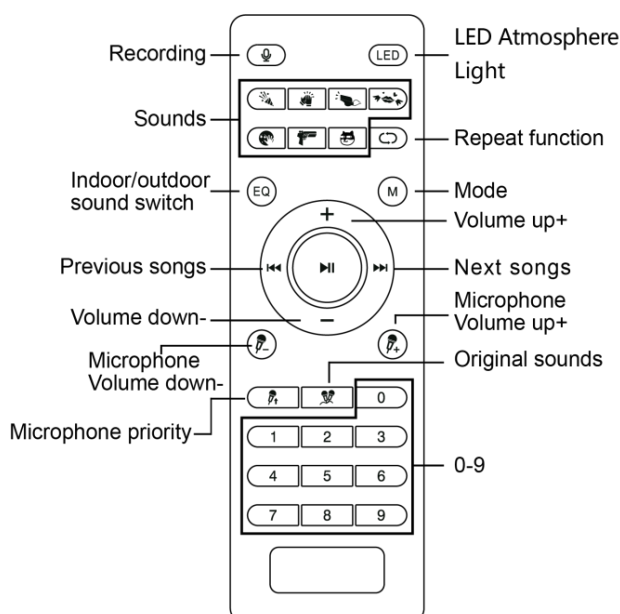

1. Under normal circumstances, the remote control should be used within the receiving range of about 6 meters and 30 degrees from the device receiving window.
2. When operating the remoter, please aim it at the receiving window of the device. There should be no obstacles between the remoter and the device.
3. If the receiving window of the device is placed under a strong light, the operation panel of the remoter may malfunction. In this case, please move the device away to avoid direct exposure.
4. When the remote has no battery, you can replace the No. 7 battery to avoid mixing old and new batteries. Please check the remote batteries regularly to see if they need to be replaced.

 Wireless microphone operation

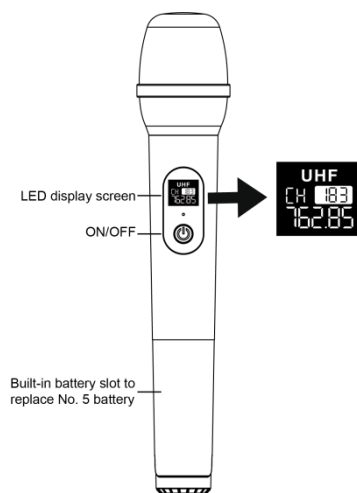

1. Long press to power ON/OFF.
2. When the microphone is not connected to the device, the display will flicker slowly. When the microphone is successfully connected to the device, the display screen will stop flashing and display a steady state. The display blinks quickly when the battery is low.
3. When the wireless microphone battery is dead, you can twist the microphone to the left, and replace the No.5 AA battery. Please pay attention to the positive and negative poles when replacing the battery.
4. Howling: Please do not put the microphone close to the speaker device. Please try to put the microphone a little bit away from or the back of the speaker device, or try to turn down the volume of microphone.
5. Low microphone volume/No microphone volume: Please make sure the microphone volume is turned up to the maximum.

Troubleshooting:

1. Automatically shut down when turned on:
The battery is low, please fully charge it before use.
2. The player automatically shuts down or restarts:
The battery is low, please fully charge it before use.
3. The charging light is not on, not charging:

Pls make sure the charging cable is plugged in properly and whether it is damaged or normal, please use a 5V $\overline{\text{---}}$ 2A charger to charge the device.

4. Bluetooth status is silent:

Pls make sure the Bluetooth is paired correctly, and the Bluetooth device is playing, and the volume is not at the minimum.

5. TF card/U disk playback is silent:

Check whether the TF card is inserted in the correct direction and in place, whether the U disk is inserted in place or in good contact; whether the music format in the TF card or U disk is correct (Note: The music in the TF card/U disk mainly supports MP3 compressed audio files and WMA lossless audio files playback); whether the device volume is adjusted to the minimum.

6. Recording doesn't work:

Whether there is space in the TF card or U disk, delete some files to reserve storage space. Recording should be in TF card mode, U disk mode and insert a wired microphone or turn on a wireless microphone.

7. The recording cannot be deleted:

Please press the record button or connect to a computer to delete it when playing the recording file.

8. The recording sound is low or there is noise:

Insert a wired microphone or turn on a wireless microphone when recording.

9. Power saving mode, automatic shutdown:

In the state of Bluetooth mode, the speaker is not connected to any Bluetooth device, and there is no operation for 15 minutes, the speaker will enter the power saving mode and automatically shut down.

WARRANTY INFORMATION 1 YEAR*

Authorized Service Center Blaupunkt Speakers

Address: Envent World Wide Pvt. Ltd.,
Khasra No- 15/15 (4-16), Village Samalkha, Tehsil Vasant Vihar,
New Delhi-110037

Whatsapp Chat Support: 8860022600

Please prepare and submit the following information during the telephone or e-mail notification to facilitate the process:

- Serial number
- Date of purchase
- A copy of proof of purchase in case of warranty

Note - Important information:

Please use the original packaging or other suitable packaging to protect the unit in transit.