

established 1924 GERMANY

TRULY WIRELESS EARBUDS





Important safety instructions

1. Use only accessories specified by manufacturer.

Warning/caution

- To avoid accidental ingestion, keep earbuds away from children and pets. The headset contains a lithium battery that can be dangerous if swallowed. If swallowed, seek medical attention immediately. When not in use, store the earbuds in a capped charging case and keep it away from children and pets.
- Do not use the earbuds at high volume for long period of time.
- To avoid hearing damage, use the earbuds at a comfortable, moderate volume.
- Turn down the volume of the device first, the put on the earbuds, then gradually increase the volume until you reach a comfortable level of hearing.
- If you are talking over this earbuds while driving, use it with
 caution and follow the applicable laws regarding the use of your
 phone and earbuds. In some places, the law has special restric
 tions on the use of such products when driving, such as the
 configuration of a single ear. Do not use the headset for other
 purposes while driving.
- If you are using earbuds when you are engaged in activities that
 require concentration, you should be aware of the safety of
 yourself and others, for example follow the relevant laws regarding
 the use of earbuds when riding a bicycle or while walking on or
 near a road, construction site or railway. You should remove the
 headphones or adjust the volume to make sure you can hear the
 surrounding sounds, including alarms and warnings.
- Children are not allowed to use earbuds.
- Do not immerse the earbuds in water or expose them to moisture for long periods of time, or wear them in water sports such as swimming, water skiing, and surfing.

- When using this product, you should follow the basic precautions as follows:
- · Read all instructions before using the charging case.
- The charging box must not be exposed to substances such as water, rain, liquid or snow.
- Using a power source or charger that is not recommended or sold by the battery manufacturer may result in a risk of fire or personal injury.
- Do not use the charging case beyond the rated output power.
- Do not use damaged or modified charging box. Damaged or modified batteries can cause unpredictable hazards such as fire, explosion, or personal injury.
- Do not overheat the product containing the battery (for example, avoid direct sunlight and keep away from fire, etc.)
- Wipe off the sweat from the earbuds and the charging case before charging.
- Do not use a damaged or modified charging box. Damaged or modified batteries can cause unpredictable hazards such as fire, explosion, or personal injury.
- Do not disassemble, squeeze or throw the charging box into a fire or at a high temperature. Exposure to fire or temperatures above 100 °C can cause an explosion.
- Only qualified service personnel should perform maintenance operations using the same spare parts.



Including widgets can cause suffocation. Not suitable for children under 3 years of age,



This product contains magnetic materials. Consult your doctor about whether it will affect implantable medical devices.

Do not modify this product without authorization.

• Use the product only under approved power supplies (such as UL, VDE, CCC) that meet local regulatory requirements.

Product Features

Speaker Driver	φ10mm
Battery specs	Earbuds : 40mAh
Charging Case	300mAh
BT Version	5.0
BT profile support	HFP/ HSP/ A2DP/ AVRCP
Bluetooth range	10 m
Frequency response	20 Hz - 20 kHz
Charging Time	Approx 1.5Hours
Charging Type	Type C

LITHIUM POLYMER BATTERY WARNINGS


This device contains a non-removable Lithium-Polymer battery. The battery must be recycled or disposed of properly. Contact your local waste management office for information on battery recycling or disposal.


In the Box

- BTW True Wireless Earbuds (L & R).
- Charging Case (x1)
- USB Type-C Charging Cable (x1).
- Instruction Manual (x1)
- Ear Tips (S, M & L)

Location of controls

Earbuds

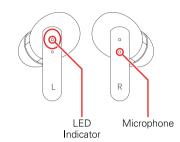

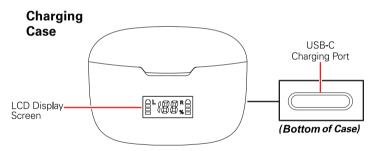


Charging the Case

Insert the small connector of the included USB-C charging cable into the charging port on theback of the charging case. Insert the larger connector into the USB port on a computer, or into a **5V/1A USB adapter** (not included) and plug into an electrical outlet.

The LCD display screen will display the case's charging progress while the case is charging, and when it is finished charging.

The LCD display screen will also indicate the case's current battery level. Please recharge the case when the battery is low.

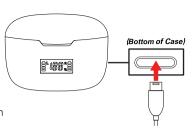


Charging the Earbuds

Use the included charging case to protect and charge your earbuds.

To charge the earbuds, open the case. Place the earbuds into the correct earbud charging ports. The earbuds will automatically power OFF and begin charging.

 The LCD display screen will display the earbuds' charging progress, and turn OFF when the earbuds are fully charged.



Function operation instructions"

Play/Pause: In stand by mode, click the left and right earbuds multi-function keys to play music directly. When playing, click the left or right earbud's multi-function keys to pause.

Reboot: When pairing successfully, the earbuds preferentially enter the connected state. After being turned on a second time, they will automatically connect to the paired device.

Switch Songs: While playing music, press and hold the left earbuds multi-function key until you hear a "deep" sound to switch to the previous song. Press and hold the right earbuds right multi-function keys for 2 seconds until you hear a "deep" sound to switch to the next song.

Calls Answering: When your phone rings, click the left or right earbuds multi-function key to answer the call

Call Hang up: After your call is complete, click the left or right earbuds multi-function key to hang up the call.

Calls Rejected: when your phone rings, hard press your left and right earbud's multi-function keys to reject the call.

Low Battery Prompt: When the battery of your earbuds is low, the low battery tone will be play once every 1 minute until your earbuds are powered off.


Volume: Three-Click the left earbuds multi-function key to gradually increase the volume, three-click, the right earbuds multi-function key to gradually decrease the volume.

Powering On/Off

Charge the case and earbuds fully before using.

Insert the earbuds into the case to automatically power them OFF. The earbuds' LED indicators will quickly flash RED when they are powering OFF. The earbuds can also be powered ON and OFF by touching + holding the earbuds '[Multi] buttons for 2s.(power ON) or 4s.(power OFF).

Note: The earbuds will automatically power OFF if they are not paired to a Bluetooth device after 3 minutes, or if the paired device is out of Bluetooth range (10 m / 30 ft) for 3 minutes.

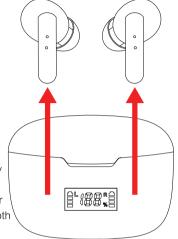


*Either earbud can be used independently.

Bluetooth Pairing

- 1. Power the earbuds ON at the same time. The LED indicators on both earbuds will flash **RED and BLUE**. After a few seconds, a tone should be heard, indicating that the earbuds have connected to each other. If the earbuds don't connect to each other see the troubleshooting section at the bottom of this page.
- 2. Open your device's Bluetooth menu and select **BLAUPUNKT-BTW** when it appears.

3. Another tone will be heard, indicating that the earbuds are successfully connected to your device. The LED indicators on both earbuds will turn OFF

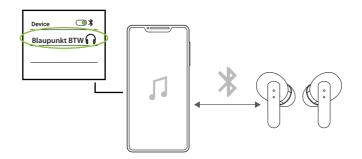

Trouble Pairing the Earbuds to Each Other? Try these steps:

- 1. Place both earbuds back into the case to power them OFF.
- 2. You may need to go into your device's Bluetooth settings and manually **"Forget"** one or both of the earbuds, and turn your device's Bluetooth OFF while the earbuds pair to each other.
- 3. Turn your device's Bluetooth back ON if necessary, and follow the **Bluetooth Pairing** steps above again.

Playing Music

Make sure the earbuds are charged and properly connected to your Bluetooth-enabled device.

Playback, volume and phone functions can be controlled with your paired device or with the earbuds, as indicated below:

Storage & Maintenance

If you are not using the earbuds, it is recommended that they must stored in the charging case and placed in a safe, dry location, away from sources of water, light, heat, and dust. They are best stored in an airtight box or bag (not included).

If the earbuds or case is dirty, wipe it down with a **clean microfiber cloth**. Do not clean with water or any sort of cleaning liquid or detergent.

©:8860022600 Whatsapp Only

Warranty Information 1 Year

If you have issue with our product please contact our Blaupunkt Authorized Service Centre

Address: Envent World Wide Pvt Ltd.

Khasra. No- 15/15(4-16), Village Samalkha, Tehsil Vasant Vihar, New Delhi- 110037

Please prepare & submit the following information during the telephone or e-mail notification to facilitate the process.

- -Serial Number
- -Date of purchase
- -A copy of proof of purchase in case of warranty

Note-Important Information

Please use the original packaging or other suitable packaging to protect the unit in transit.