



BTW300 XTREME MOKHSA MAXBUDS ANC



Congratulations and Willkommen! You are now part of the Blaupunkt family.

You have chosen German iconic brands premium earbuds and have become a part of an elite group that enjoys and appreciates the finest audio experience.

To get the best performance from your Blaupunkt audio product please read this manual carefully and follow the instructions. This will ensure you get the most out of your Blaupunkt product. Keep the manual safely and refer to it when in doubt.

> JUST ONE SCAN CAN!



One QR Code to access everything - Warranty, Blue Points, Manuals, Service and all you will ever need.

Instructions for Use

Power On/Off

Open the charging case and the earbuds will turn on automatically, to turn the earbuds off, put the earbuds back into the charging case and close the lid.

Open the charging case and search for "BTW65" on your bluetooth device.After the first bluetooth connection is established, the earbuds will reconnect automatically whenever the charging case is opened. The earbuds switch off automatically if bluetooth connection is not established within 5

Battery display

- 1.The earbuds \leq 20%, the red light blinks 3 times every 30s
- 2. The charging case battery LED light <35%, the first light flashes slowly
- < 75%, the second light flashes slowly</p>
 < 99%, the third light flashes slowly</p>
 Full =100%, all three lights are on

Earbuds Charging

1. The earbuds charging, put the earbuds back into the charging case, constant red light means earbuds are charging. When the earbuds are fully charged, the earbuds light switches off. 2.The charging case charging is white light blinks, if full charged, the white light

- 1. Do not leave the earbuds uncharged for long periods of time to avoid damaging the earbuds battery.
- 2. If there is sweat or liquid on the earbuds, dry it off before charging to avoid damaging the earbuds

Operation

Previous song

Touch L twice in a row



Touch R twice in a row



Music play/pause Touch the L/R button once



ANC mode Press and hold the R for 3S



Gaming mode/Music mode Click L/R 4 four times



Voice Assistant (Google/Siri) Click L/R three times



Answer the phone



Hang up/Reject a call Double click L/R once



Press and hold the L for 3s FACTORY RESET

(Balanced/ Signature Sound)

Dual EQ mode



Ten tap on either side of the left and right earbuds(prerequisite: device power on) Restart the earbuds after flashing red lights 5 times simultaneously

ATTENTION!

1 Year Warranty

Please be careful while listening to music. Blaupunkt has always ensured that every audio product is powerful and produces massive bass and other audio ranges. Please raise the volume levels slowly and do not play music at full volume levels as this could hurt your ears.



If you have any issue with your product please contact our Authorized Customer Care team.

Blaupunkt Authorized Service Center: Envent World Wide Pvt Ltd.

Khasra. No- 15/15(4-16), Village Samalkha, Tehsil Vasant Vihar, New

Delhi- 110037

Email- wecare@blaupunktaudio.in Whatsapp Chat Support: © 8860 022 600

Please submit the following information while claiming product warranty:

-Serial Number

-Date of purchase

-A copy of proof of purchase in case of warranty

Note- If you do return the product, please use the original packaging or other suitable packaging to protect it in transit