


BLAUPUNKT FLASHLIGHT WIRELESS SPEAKER



Dear customer:

Thank you for choosing our product, please read all the instructions carefully and retain the manual for future use.

Presentation of the product

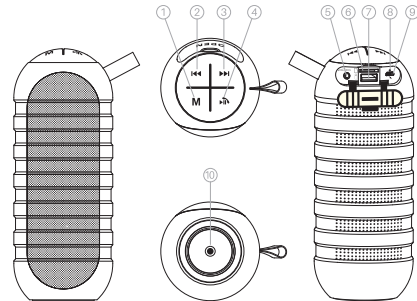

- | | |
|--|------------------------|
| 1 Long press : ON/OFF switch
Mode switch : Wireless / FM / AUX / USB / TF Card Mode switch | 5 AUX input |
| 2 Short press : Previous song
Long press : Volume decrease
Double press : Flashlight / SOS | 6 micro TF card slot |
| 3 Short press : Next song
Long press : Volume increase
Double press : TWS connection | 7 USB Flash drive slot |
| 4 Short press : Pause / Play / Hands free call /
Long press : Auto search for radio station | 8 LED indicator |
| | 9 Charging port |
| | 10 LED Light |

Charging the speaker

The speaker has built-in rechargeable battery. When the battery is drained out, speaker would turn off automatically. Please recharge the battery.

Plug the Micro USB end of the USB rechargeable cable into the charging port. Plug the other end into a USB port on your computer or other devices made for USB charging. Red LED Light illuminates indicating that the device is being charged. Once the speaker is fully charged, LED Light would turn OFF.

Important reminder

- Please do not disassemble, repair or transform the product.
- This product used lithium battery, please do not discard or put it in the fire.
- Do not expose this product to rain or humidity, so as to avoid the damages to the device.
- Please do not recharge the device repeatedly, or the lithium battery inside would be aging quickly.
- In the FM radio mode, please insert the charging line to the charging port, to get better radio signals and better listening experience.

Pairing the device

- Long press key **M** to power on the speaker.
- You will hear beeping sound and words "The wireless device is ready to pair". The status LED will flash blue, indicating that the device is in pairing mode.
- Set your wireless-enabled device to search for wireless devices.
- When the wireless-enabled device finds the wireless devices, select "BLAUPUNKT BTLED" from the list of found devices.
- After a successful pairing, words "The wireless device is connected successfully" will be heard, indicating that the device is paired and the status LED will stay solid blue.

Listening to music wirelessly

Please ensure that your device (Mobile phone, tablet or other devices) is paired with the Wireless Speaker to stream music wirelessly. once it is paired, play music from your device.

Music mode	Function	Operation buttons
Playing music	Increase Volume	Long press ▶▶ key
Playing music	Decrease Volume	Long press ◀◀ key
Playing music	Pause	Short press ⏸ key
Pause	play	Short press ▶▶ key
Playing music	Previous track	Short press ◀◀ key
Playing music	Next track	Short press ▶▶ key

Note: the above functions can be used in all mode, such as Wireless play mode, USB flash drive play mode, Micro TF card play mode, as well as FM radio mode. In AUX input mode, you need to control the medias through the media source devices, you need to operate with the source devices for previous / next track.

Hands free calling function

Please ensure your mobile phone is paired with the wireless speaker.

Hands free mode	Function	Operation buttons
Incoming call	Answer incoming call	Short press ▶▶ key
Incoming call	Reject incoming call	Long press ▶▶ key 3 seconds
ON call	End the call	Short press ▶▶ key
ON the line	Increase volume	Long press ▶▶ key
ON the line	Decrease volume	Long press ◀◀ key
Standby mode and connected to a device	Redial last number	Short press ▶▶ key 2 times

TWS connection

- Turn ON two speakers.
- Double press the **▶▶** button on any one of the wireless speakers and you will hear "Ding Dong", then the speakers are connected successfully in TWS mode.
- Search for "BLAUPUNKT BTLED" in your mobile phone and pair it with this device.
- Enjoy your music.
- If you don't need TWS mode, please double press the **▶▶** button, you will hear "Ding Dong" voice then the speakers are not in TWS mode.

Flashlight and SOS function

- Turn ON speaker.
- Double press the **▶▶** button to turn flashlight on, double press to activate SOS function, double press the **▶▶** button to turn flashlight off.

Stream music from TF card or USB flash drive

- Turn ON the speaker.
- Insert the micro TF card or USB flash drive preloaded with songs, into the micro TF card slot or USB flash drive slot of the speaker correspondingly, sound message "USB mode" or "TF card mode" respectively will be heard. Speaker would automatically start playing songs from the micro TF card or USB flash drive.

Listening to FM radio

- Turn ON the speaker.
- Insert the Micro USB end of the USB rechargeable cable into the charging port, and leave the other end of the cable open. USB rechargeable cable serves as FM antenna while in FM Radio mode.
- Short press key **M** to each time until it reaches FM radio mode, sound message "The Radio Mode" will be heard.
- To AUTO-SCAN the stations, long press the key **▶▶** for 3 seconds.
- Short press key **▶▶** in to pause FM playback.
- It will take few minutes to search all the stations. once all the stations are scanned, they get registered in memory, automatically.
- Short press key **◀◀** or **▶▶** to skip selected stations.
- Long press key **◀◀** or **▶▶** to decrease or increase the volume.

Play music through "Auxiliary" mode

- Turn ON the speaker.
- Insert one end of the auxiliary cable (included) into the auxiliary port, sound message "AUX mode" will be heard. Plug the other end to the audio device (such as phone / MP3 / Player / computer / tablet_etc)
- Select your favorite song at the source device to play.
- Long press key **◀◀** or **▶▶** to decrease or increase the volume.

Note: media can be controlled only through the source devices, while playing music in auxiliary mode.

Tips!!

When the speaker is not in use, turn it OFF in order to save the battery power.

Troubleshooting

Problem	Possible cause	Solution
Low sound level	Source (Tablet, Mobile phone, Laptop, etc.) volume too low.	Adjust source volume
	Low battery or battery dead	Low battery or replace battery
Sound distorted	Low battery or battery nearly dead	Low battery or replace battery
	Source (Tablet, Mobile phone, Laptop.) turned off.	Turn the source on
No sound at all	Speaker turned off	Turn the speaker on
	Media paused on source	Play media from source
	There are short functional obstacles in the product	Restart the speaker
Wireless BT cannot connect	Product has been connected with other devices	Disable wireless BT of other source devices and search for wireless BT again

Specifications

Speaker	2 pcs, 52 mm
Built-In Rechargeable Battery	1200 mAh, Built-in Lithium battery
Bluetooth Version	5.0
FM Frequency Range	87-109Mhz
Micro SD Card/ USB drive	Support upto 32 GB
Power Input	DC 5V (1.0A)
Charging Time	Approx 2.5 Hours
Unit Size	8.2*8.2*20.9 cm
Multiple Functions	TWS Connection / AUX Input / FM Radio / USB Drive / Hands-Free Call / Flash Light / SOS Function

Safety instructions

- Keep the speaker away from heat sources, direct sunlight, humidity, water and any liquids.
- Do not operate the speaker if it has been exposed to water, moisture or any other liquids to prevent against electric shock, explosion and / or injury to yourself and damage to speaker.
- Do not use the speaker if it has been dropped or damaged in any way.
- Repairs to electrical equipment should only be performed by a qualified electrician. Improper repairs may place the user at serious risk.
- Do not use the speaker with wet hands.
- Do not put objects into any of the openings.
- Keep the speaker free from dust, lint etc.
- Do not use this speaker for anything other than its intended use.
- Keep the speaker out of reach of children.
- This appliance is not a toy.
- Batteries (battery pack or batteries installed) shall not be exposed to excessive heat place, such as sunshine, fire or the like.

Care and maintenance

Read the following recommendations before using the wireless speaker, following these you will be able to enjoy the product for many years.

- Do not expose the unit to liquid, moisture or humidity to avoid the product's internal circuit being affected.
- Don't use abrasive cleaning solvents to clean the unit.
- Do not expose the unit to extremely high or low temperature as this will shorten the life of electronic devices, destroy the battery or distort certain plastic parts.
- Don't dispose of the unit in fire as it will result in an explosion.
- Don't expose the unit to contact with sharp objects as this will cause scratches and damage.
- Don't let the unit fall down onto the floor, the internal circuit might get damaged.
- Don't attempt to disassemble the unit as it may get damaged if you are not professional.

Safety Warranty Information 1 Year*

If you have issue with our BLAUPUNKT BT Speaker product please contact our service center Service Centre.

Authorized Service Center Blaupunkt Speakers
Address: Ervnt World Wide Pvt Ltd, Kharsa, No- 15/15(4-16),
Village Samakha, Tashl Vasant Vihar, New Delhi- 110037
E-Mail: wecare@blaupunktudio.in Tel. 18008434333

Please prepare & submit the following information during the telephone or e-mail notification to facilitate the process:

- Serial Number
- Date of purchase
- A copy of proof of purchase in case of warranty

Note- Important Information
Please use the original packaging or other suitable packaging to protect the unit in transit.

