

**BLAUPUNKT**

Instruction Manual



*Enjoy it.*

**BOOMBOX**  
BB35

For smooth operations, please read this manual carefully before using. Any content revise of the manual won't be declared again, and we are not responsible for consequence caused by fault or oversight of this manual.

### **FEATURES:**

1. 2.0CH portable Bluetooth waterproof speaker
2. Water resistant IPX5, splash-proof, rain-proof, perfect for beach, poolside, boat and more outdoor activities;
3. Dedicated button for TWS function to achieve true wireless Bluetooth playing with double enhanced stereo sound;
4. With A2DP Bluetooth, enjoy wireless music streaming from any Bluetooth-enabled device such as your mobile phone, notebook, iPhone or iPad
5. Bluetooth operating range 10 meters;
6. With USB and Micro SD card supporting;
7. With FM radio
8. With Line-in function, suitable for PC, MID, TV and other audio devices;
9. Built-in lithium rechargeable battery 3000mAh
10. With handle, easy to take out.

### **SPECIFICATIONS:**

Bluetooth version: 5.0

Speaker size: 3 inch\*2

Horn output: 20W\*2, 4Ω

Battery capacity: 7.4V 3000mAh

Frequency response: 100Hz-16kHz


Playtime at max volume: 3H

Product size: 354 (L) \*138(W) \* 183 (H) mm

### **Accessories:**

Charging cable, Audio cable, User manual

## INSTRUCTION FOR APPEARANCE AND KEYS:

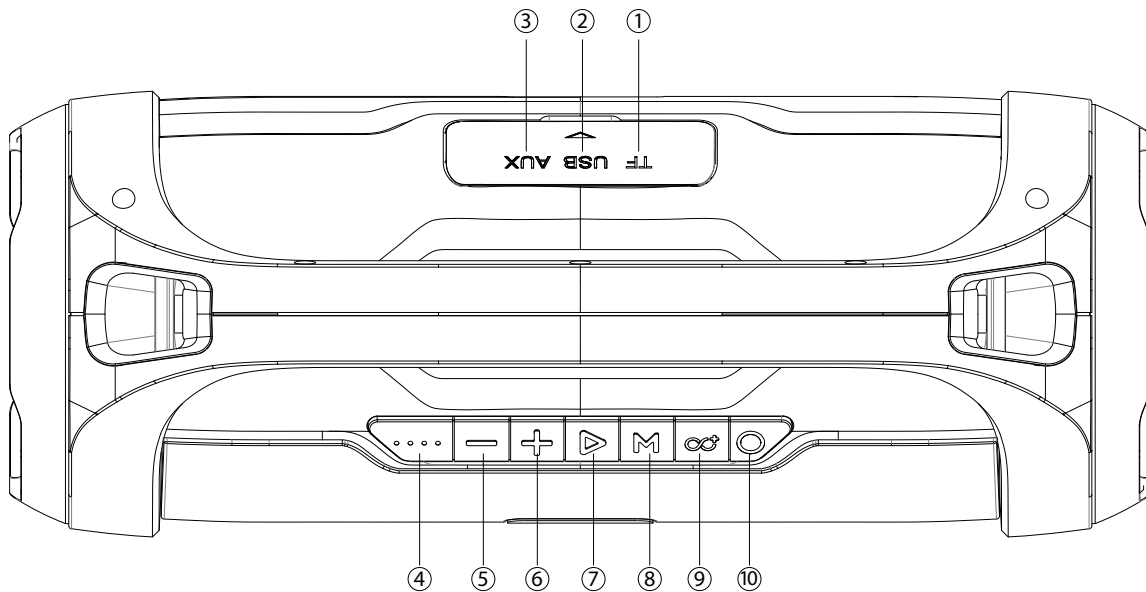

- |                         |  |
|-------------------------|--|
| 1. Micro SD slot        | 2. USB Port  |
| 3. AUX Input            | 4. Battery Indicator   |
| 5. Backward/Volume down | 6. Forward/Volume Up   |
| 7. Play/Pause           | 8. Mode (Switch Bluetooth, USB, Micro SD, FM and AUX-IN state) |
| 9. TWS Button           | 10. Power On/Off   |

## BLUETOOTH:

1. Turn the power button to "ON", the Power button turn blue and twinkle quickly, then enter Bluetooth mode and wait for the tone "Bluetooth Device Ready To Pair".
2. Activate Bluetooth of mobile phone and search for device name "BB35" then connect it. The power button will stop twinkling and will make a tone "Bluetooth Device Connected Successfully" once connected.
3. Play the music from your mobile phone and enjoy.
4. Short press Forward or Backward button on the device or on Mobile phones to select songs you like.
5. Press Play/Pause button on the device or on Mobile phones to play/pause the music.
6. Long press Forward or Backward button to adjust volume up and down, or adjust the mobile phones' volume.

**PLAYING MUSIC FROM USB DISK & MICRO SD CARD:**

1. Turn the Power button to "ON".
2. Insert Micro SD card or USB flash disk into slot, the speaker will make a tone "Music Play Mode", and play the stored music automatically.
3. Under playing mode, short press Forward or Backward button to select songs you like, long press to adjust the volume up and down.
4. Press Play/Pause to play or pause.

**Remark:** Under Bluetooth playing mode, insert Micro SD or USB will disconnect the Bluetooth and switch to play the USB or Micro SD card. You can press the MODE button to switch to Bluetooth mode again.

**FM RADIO:**

1. Under FM radio state, the audio cable provided is treated as antenna. Please insert the audio cable to get best FM signal before using.
2. Turn the power button to "ON", press the "MODE" button, the speaker will prompt "The Radio Mode" when entering FM state.
3. Under playing mode, short press "Play/Pause" button to auto search the FM Channel and store it automatically.
4. Short press Forward or Backward button to change the stored FM channel.

**TWS Function:**

1. Turn on two identical speakers you want to pair, please note that they must be of the same BT pairing name, under BT mode. Only need to connect one of the two units;
2. Press the "TWS" button, speaker will make a tone "di" to start to pair, it will make "di" 3 times and TWS button will keep lighting after paired successfully;
3. Make Bluetooth connection with your mobile phone to play music by the two paired Speakers to create more powerful surround sound effect.
4. When you want to exit the TWS mode, press "TWS" button (of the unit you set at beginning) again to exit the TWS function.

**AUX-IN:**

For other compatible music devices or your MP3/MP4 players, use the supplied audio line cable to connect from the device's "Line Out" to the "Aux In" of this device, the speaker will prompt "Aux Input Mode", now enjoy...

When using an external device, all functions can be controlled by the external device.

**Remarks:**

1. When Bluetooth connection has been set up with your mobile phone, there will be a battery icon indicating the speaker battery volume on your phone.
2. Press the MODE button to switch the different modes, the order is Bluetooth, USB disk, Micro SD, FM radio and AUX-IN.
3. When the speaker Bluetooth gets connected with one mobile device, user can long press the TWS button to disconnect the previous device, then make Bluetooth connection with another mobile device;
4. Default volume is at 50% status of max volume;
5. Long press Mode button to turn the RGB on/off;
6. When battery voltage is low, the speaker will prompt "Battery Is Low, Please Recharge In Time";
7. Turn the power button to "off" when not in use.

**HOW TO CHARGE:**

1. The charger is not included in the accessories. Please use the Universal 5V/1A charger to charge this device. We are not responsible for any damage caused by using other charger.
2. Power off the unit, put the provided charge cable into the charge slot of unit, and connect the other end to PC or other charger with 5V output.
3. Charging time should be around 4-6 hours. The light is red while charging, and the indicator light will switch off when full charged.  
(When playing music during charging, please put the volume to middle as for some music with heavy bass, the charger may not be able to handle the high current temporarily under the maximum volume.)
4. In order to prolong the life of battery, please do not charge for more than 8 hours.

## **WARRANTY INFORMATION 1 YEAR\***

If you have issue with our Boombox BB-35 product please contact our service center.  
Authorized Service Center Blaupunkt Speakers

Address: Envent World Wide Pvt. Ltd.,  
KH NO-96/2, Village-Bamnoli, Sector-28, Dwarka, Bamnoli West, Delhi- 110077.  
E-Mail: [wecare@blaupunkt-audio.in](mailto:wecare@blaupunkt-audio.in) | Tel: 1800 843 4333

Please prepare and submit the following information during the telephone or e-mail notification to facilitate the process:

- Serial number
- Date of purchase
- A copy of proof of purchase in case of warranty

Note - Important information:

Please use the original packaging or other suitable packaging to protect the unit in transit.