

size: 85*60mm
material: 120g 双铜

BLAUPUNKT
Instruction Manual



Enjoy it.

MOKSHA BTW TWS
HYBRID ACTIVE NOISE CANCELLATION

Thank you for purchasing your new MOKSHA ANC True wireless earbuds.

We recommend that you spend some time reading this instruction manual in order to fully understand all the operational features it offers.

Read all the safety instructions carefully before use and keep this instruction manual for future reference.


Safety Rules

1. Charge the earbuds and the charging case at least once every 6 months.
2. Do not store the product in extreme temperature (below 0°C or above 45°C)
3. Do not use chemicals or detergents to clean the product.
4. Do not drop or knock the product on hard surfaces.
5. Do not scrape the surface of product with sharp objects.
6. Do not try to take the product apart.

- 1 -

Product Overview

1. Charging case
2. Type-C input
3. Battery/Charging indicator
4. Earbuds touch function
5. MIC

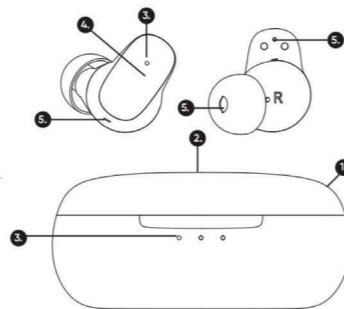

- 2 -

Specification

Speaker driver	φ10mm
ANC Level	-35dB
Wireless Charging	Yes
IPX Rating	IPX5
BT Version	5.0
BT profile support	HSP/HFP/A2DP/AVCTP
Frequency response	20 Hz - 20 kHz
Charging Type	TYPE C
Charging Time	Approx 1.5 Hours
MIC	3*2 MIC (Total 6 MIC)

Pairing of Earbuds

STEP 1: Our "BLINKPAIR" Technology enables the earbuds to power on automatically, get connected and enter into the pairing mode.

STEP 2: Both the earbuds will automatically pair with each other.

- 3 -

STEP 3: Turn on Bluetooth on your device and Select "BLAUPUNKT Moksha+" to connect the earbuds to your device.

How to charge the earbuds

1. Put the earbuds in the charging case and close it
2. The light on the charging case will turn on and starts charging the earbuds.
3. To charge the charging case, connect the case with the Type-C cable to a power source. It takes around 1.5 hours to fully charge the charging case.

Factory Reset:

Step 1: Remove "BLAUPUNKT Moksha+" from the list of paired devices

Step 2: Put the L/R earphone in the charging case and keep the charging case open, then long press in charging case reset button for 10s until 3 indicators flash twice at the same time.

Step 3: Take out both earbuds from the case, they will now auto pair with each other

- 4 -

Multi functions

You can operate the earbuds with the touch function on the earbuds. Please check below instructions.

Play/pause music	Short press left/right earbud
Pick up phone call	Short press left/right earbud
Reject phone call	Double press left/right earbud
End phone call	Short press left/right earbud
Next song	Double press right earbud
Previous song	Double press left earbud
Volume +	Triple press right earbud
Volume -	Triple press left earbud
ANC on/off	Long (2 s) press left/right earbud
Siri/Google Assistant	Double press left/right earbud

- 5 -

Warning

1. Listening to earbuds at high volume levels, particularly over extended periods of time, may damage your hearing.
2. Supervise children when using equipment. This product is not a toy.
3. The small parts included with this product can be a choking hazard. This product is not intended for use by small children and should be kept away from children under 3 years of age



- 6 -

Warranty Information 1 Year*

If you have issue with our MOKSHA ANC TWS product please contact our service center Service Centre.

Authorized Service Center Blaupunkt Speakers
Address: **Envent World Wide Pvt Ltd.**
Khasra. No- 15/15(4-16), Village Samalkha, Tehsil Vasant Vihar, New Delhi- 110037
E-Mail: wecare@blaupunktaudio.in
Whatsapp No : 8860022600

Please prepare & submit the following information during the telephone or e-mail notification to facilitate the process:

- Serial Number
- Date of purchase
- A copy of proof of purchase in case of warranty

Note- Important Information.

Please use the original packaging or other suitable packaging to protect the unit in transit.

- 7 -