

Thank you for choosing this sonicB product. We are driven by a common pursuit of quality and excellence in daring design and bold products. But most importantly, we're inspired by YOU.

That's why we commit to encouraging you to B - who, what, or where you choose.

B you.

Universal Gaming Headset

wired connection & illuminated mic & earcups

4.2 Setup for Xbox One™ & Xbox Series X|S™ 4.3 Setup for PS4[™] & PS5[™]

including MOBILE / TABLET / PC / MAC

4.5 Setup for PC - (Splitter Cable Needed)

Specifications

4.4 Setup for Nintendo Switch™

Troubleshooting & Customer Support

Care & Maintenance

Welcome

1.1 What's In The Box

Your Gaming Headset

All Features & Contents

4.1 USB light information

Quick Start Guide

Getting To Know Your Headset

Warranty & Legal

Welcome

Guide Booklet

1.1 What's In The Box



 
3.5mm + USB Plug for Mic / Audio / Lighting



2 in 1 Splitter Cable

for PC · LAPTOPS · MAC® · WINDOWS®





Your Universal Gaming Headset 2.1 Getting To Know Your Headset

Mead Cushion Soft cushion for the

B Ear Cushions Soft ear cushions for

long gaming sessions

Mic Tip LEDs

This area will light up same as the earcup LEI

Boom Microphone

Volume Control

All Features & Contents

ADJUSTABLE MICROPHONE ENHANCED AUDIO




CLEAR VOICE +
NOISE REDUCTION

WORKS WITH


s) Xbox Series X|S™





 

soft cushions

 







4.1 USB light information

For the LEDs on the earcups to illuminate the USB plug will need to be connected to a free USB port. These USB ports can be found on a gaming CONSOLE or a COMPUTER.



Quick Start Guide











CONSOLES

COMPUTERS



4.2 Setup for Xbox One™ & Xbox Series X S™

Press the Xbox button on your controller 2 Go to System 3 Select Audio 4 Set Headset volume to

Note: Make sure that Headset mic is turned to On

maximum and Mic monitoring to minimum. Xbox Series XIS™ controller



GAMING HEADSET - B - HEROIC

Quick Start Guide

4.3 Setup for PS4™ & PS5™

1 Hold (PS4) or press once (PS5) the PlayStation button to bring up the Quick Menu / Control Center >> Devices >> Audio Devices, Set Output to Headphones/(Output Device >> Headset Controller on PS5) to All Audio, 3 Set Volume Control



Quick Start Guide

4.4 Setup for Nintendo Switch™ including MOBILE / TABLET / PC / MAC - (NO SPLITTER NEEDED)

Simply connect the 3.5mm jack into the headset jack on your device.



Quick Start Guide

4.5 Setup for PC - (Splitter Cable Needed)

1 Plug your headset's 3.5mm jack to your 2 in 1 splitter. Connect the microphone jack from the splitter into the micrphone jack located on your computer.

Connect the audio jack from the splitter into the audio jack located on your computer.



Specifications

Specifications:		
FREQUENCY RESPONSE	20Hz - 20kHz	
DRIVER UNIT	40 mm	
IMPEDANCE	32 Ω ± 15%	
SENSITVITY	105dB±3db	
MICROPHONE	F6*2.7mm	
MIC SENSITIVITY	-42±3dB	
MIC IMPEDANCE	2.2k Ω	
DIRECTIONALITY	omni-directional	
CABLE LENGTH	2.2M - 7.2FT	
LED WORKING VOLTAGE	DC5V± 5%	
HEADSET JACK	USB + 3.5mm	

Troubleshooting & Customer Support

Troubleshooting:	
NO LIGHTS	Make sure the USB cable is plugged into a power source either on your computer or console.
THE VOLUME ON THE HEADSET IS LOW	Make sure your the volume on your device or console is turned all the way up. You may need to go into your console's or device's settings to make this change.
MICROPHONE FEEDBACK NO AUDIO OR MUFFLED AUDIO	Unplug your headset and if it is connected to a controller turn the controller OFF & ON then reconnect your headset.
NO AUDIO OR MUFFLED	Unplug your headset and if it is connected to a controller turn the controller OFF & ON then

Customer Support Info:

Any issues or problems please reach us at: support@sonicbaudio.com

Care & Maintenance

Troubleshooting:	
NO LIGHTS	Make sure the USB cable is plugged into a power source either on your computer or console.
THE VOLUME ON THE HEADSET IS LOW	Make sure your the volume on your device or console is turned all the way up. You may need to go into your console's or device's settings to make this change.
MICROPHONE FEEDBACK NO AUDIO OR MUFFLED	Unplug your headset and if it is connected to a controller turn the controller OFF & ON then

- · DO NOT expose the unit to liquid, moisture, or humidity to avoid damage to the product's internal circuitry.
- · DO NOT use abrasive cleaning solvents to clean the unit.
- · DO NOT expose the unit to extremely high or low temperatures as this will shorten the life of the electronic device, and/or distort certain plastic parts.
- · DO NOT dispose of the unit in fire as they may explode or
- DO NOT expose the unit to and/or use sharp objects on the
- headset as this will cause scratches and damage.
- DO NOT attempt to disassemble the unit.

it to the store where it was purchased.

In the event that the unit does not function properly, return

This symbol on appliance, instruction manual and packaging puts your attention to this

Warranty & Legal

The condition of this warranty and our responsibilities under this warranty are as follows: Supplier's warranty is non-transferable. This warranty is limited to the original purchaser only.

- You must be able to prove the date of original purchase of the unit with a dated receipt.
- The warranty is not applicable if the product has been subject to physical abuse, improper installa tion, modification or repair by unauthorized third party.
- · The responsibility of supplier's products shall be limited to the repair or replacement of the product as its sole discretion
- Specifically exempt from any warranty are limited-life consumable components subject to normal
- wear and tear such as batteries, decorates and other accessories. A supplier will not take any responsibility if the failure of the unit has resulted from accident abuse
- misuse. or any unauthorized repair, modification or disassemble.
- Modification and repair of the unit should be done by authorized and qualified service personnel
- Center or returned to the manufacturer. · This warranty give you specific legal rights, and you may also have other rights which vary

under local laws

Guidelines for protection of the environment

This appliance should not be put into the domestic garbage at the end of its useful life, but must be disposed of at a central point for recycling of electric and electronic

important issue. The materials used in this appliance can be recycled. By recycling used domestic appliances you contribute an important push to the protection of our environment. Ask your local authorities for information regarding the point of recollection.

Warranty & Legal

Microsoft, Xbox, Xbox One, and Windows are trademarks of the Microsoft group of companies.

GAMING HEADSET - B - HEROIC

PlayStation & PS4 are registered trademarks or trademark of Sony Interactive Entertainment Inc.

Nintendo Switch™ is a trademark of Nintendo.

Mac is a trademark of Apple Inc., registered in the U.S. and other countries.

Android is a trademark of Google LLC.

All other trademarks are the property of their respective owners.

SonicB[™] is registered in Europe as a trademark of iHip Europe Ltd.

Manufactured & Distributed by: iHip Europe Ltd., Chartwell House.



GAMING HEADSET - B - HEROIC

GAMING HEADSET - B - HEROIC

GAMING HEADSET - B - HEROIC