



UC 1000 QUICK REFERENCE GUIDE


After configuring the antenna unit and the receiver as described in the manual, you can use this Quick Reference Guide for everyday use.

Press POWER.

Wait for COAX CONNECTION light to stop flashing and turn solid.

Press SCAN.

Wait for SCAN PROGRESS lights to stop flashing and turn solid.

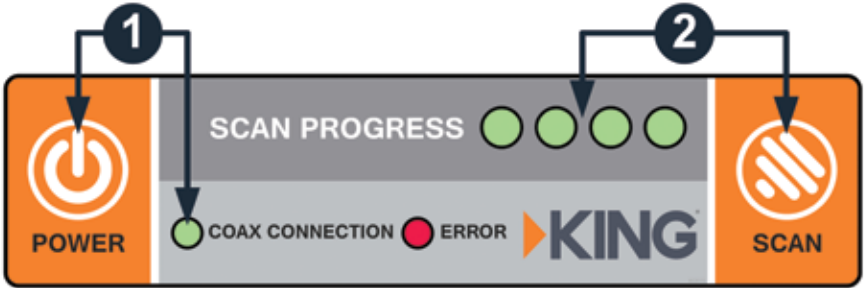

3 WATCH TV!

"SATELLITES FOUND" CHART

| Service Options | Satellites | L1 | L2 | L3 | L4 |
|--------------------------|----------------|----|----|----|----|
| DIRECTV® SD | 101 | ● | ○ | ○ | ○ |
| DIRECTV SD with Locals | 101, 119 | ● | ● | ○ | ○ |
| DISH® SD | 110, 119 | ● | ● | ○ | ○ |
| DISH HD and SD | 110, 119, 129 | ● | ● | ● | ○ |
| DISH HD and SD Alternate | 61.5, 110, 119 | ● | ● | ● | ○ |
| BELL TV™ SD | 91 | ● | ○ | ○ | ○ |
| BELL TV HD and SD | 82, 91 | ● | ● | ○ | ○ |

● = ON ○ = OFF

SCAN PROGRESS

The order of the lights corresponds to the order of the satellites listed.

IMPORTANT! DISH CUSTOMERS ONLY!

If you have a DISH model ViP®211z, ViP211k, ViP211 or 411 single tuner HD receiver, you can use the DISH Tailgater® user interface on your receiver. See your Owner's Manual for details.