

Wheel lock / Wheel clamp

instructions



●instructions

Illegal parking, car security both are big problems nowadays.

When illegal parking happens, the traffic police, or parking manager, or the parking space owner can immobilize the car with wheel lock, then the rule-breaker will learn a good lesson.

How does wheel lock work on car security?

The wheel lock protects car in an original way, it locks the tire of the car. Any thief would easily give up when he finds a big-yellow lock on the car's tire.

The wheel lock works before the thief breaks the window and the screaming of alarm. It takes half minute to lock a car, but without the special equipped key and rocking handle, even hours, one can not open it

TWO

Wheel lock 2 Wheel clamp

●instructions

Wheel lock(Wheel clamp)



ONE

Wheel lock 1 Wheel clamp

●instructions

PARKING LIST		
NO.	NAME	QTY
1	WHEEL LOCK	1 PCS
2	KEY	2 PCS
3	ROCKING HANDLE	1 PCS
4	COVER	1 PCS

ROCKING HANDLE:



COVER:

Open the box of the wheel lock, before using it, need to fix the cover onto the wheel lock with screw.



THREE

Wheel lock 3 Wheel clamp

●instructions

How to clamp the car?

【Step1】

Widen the arms of wheel lock with rocking handle.



【Step2】

Tighten the arms with rocking handle.



FOUR



●instructions

【Step3】

After the two arms fit tightly with the wheel, put the rocking handle into the hole beside to adjust the cover nut, to make it fit with the wheel axle. Try the rocking handle in the two holes couple of times to make sure the wheel lock strongly fits with the tire.



【Step4】

Last, take away the rocking handle, lock the door lock with key.



FIVE



●instructions

Remove the wheel lock from the vehicles

The opposite steps of locking the vehicles---
First to loose the forearm, make the cover loosen. Then widen the two arms until it can be easily taken off from the vehicles.

SIX

