



MODEL NUMBERS

CL-PAC08W - 8,000 BTU PORTABLE AIR CONDITIONER
CL-PAC08W-6A - 8,000 BTU PORTABLE AIR CONDITIONER
CL-PAC10W - 10,000 BTU PORTABLE AIR CONDITIONER
CL-PAC10W-6A - 10,000 BTU PORTABLE AIR CONDITIONER

OPERATING INSTRUCTIONS



 
BEFORE RETURNING UNIT TO THE STORE

READ ALL QUESTIONS ON OPERATION AND WARRANTY












 
PLEASE VISIT OUR WEBSITE AT WWW.COOLLIVINGPRODUCTS.COM OR CALL 1-800-752-5262 X 251

PRODUCT REGISTRATION CARD MUST BE COMPLETED ONLINE OR COMPLETE AND MAIL THE ATTACHED REGISTRATION CARD TO

KMS INC. ATTN: CUSTOMER SERVICE, 811 E WATERMAN, WICHITA, KS 67202



CONTENTS

 SAFETY INFORMATION	01
 IMPORTANT - GROUNDING METHOD	04
 ELECTRICAL CONNECTIONS	05
 DESCRIPTION	06
 INSTALLATION INSTRUCTIONS	07
 DESCRIPTION OF THE DISPLAY SCREEN	11
 REMOTE CONTROL MANUAL	16
 WATER DRAINAGE METHOD	22
 CLEANING	24
 TROUBLESHOOTING	25
 WARRANTY	27
 REGISTRATION CARD	28

SAFETY INFORMATION

 DANGER DANGER - Immediate hazards which WILL result in severe personal injury or death	 WARNING WARNING - Hazards or unsafe practices which COULD result in severe personal injury or death	 CAUTION CAUTION - Hazards or unsafe practices which COULD result in minor personal injury
--	---	--

IMPORTANT SAFETY INSTRUCTIONS

1. Always place the unit on a level surface strong enough to support the unit with a full bucket of water.
2. Never use or store gasoline or other flammable vapor or liquid near his unit.
3. Minimum Installation Clearance: 11.8 inches around the unit and 17.7 inches above the unit. Do not block or cover air inlet or outlet grills.
4. The unit must be connected to a correctly grounded power supply.
5. Do not start or stop the unit by inserting or pulling out the power plug.
6. Do not use an adapter plug or extension cord.
7. Do not use the unit in the immediate surroundings of a bath, a shower, swimming pool, or clothes dryer.
8. Do not insert anything into the air outlet.
9. If the SUPPLY CORD is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified person in order to avoid a hazard.
10. When cleaning the unit, always turn the unit off and unplug the power cord.
11. Do not use outdoors. Intended for indoor use only.
12. Place the product in an area where the temperature will not fall below 41°F (5°C) ahrenheit. The coils can become covered with frost if the room temperature is too low, which may reduce performance.
13. The appliance shall be installed in accordance with national wiring regulations.
14. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.

**SAVE THESE INSTRUCTIONS
HOUSEHOLD USE ONLY**

SAFETY INFORMATION

GROUNDING INSTRUCTIONS ELECTRICAL REQUIREMENTS

The electrical requirements are a 115 volt 60 Hz, product only, 15 amp. It is recommended that a separate circuit serving only the product be provided. The product is equipped with a 3-wire cord having a 3-prong grounding plug. It must be plugged into a wall receptacle that is properly installed and grounded.

This appliance must be grounded. In the event of an electrical short circuit, grounding reduces risk of electric shock by providing an escape wire for the electric current. The cord provided with this appliance is equipped with a grounding wire and a grounding plug. The plug must be plugged into an outlet that is properly installed and grounded.

Avoid the use of three prong adapters or cutting off the third grounding prong in order to accommodate a two prong outlet. This is a dangerous practice since it provides no effective grounding for the product and may result in shock hazard.

WARNING

Improper use of the grounding plug can result in a risk of electric shock.

Consult a qualified electrician or serviceman if:

- 1) The grounding instructions are not completely understood.
- 2) You are unsure that the appliance is properly grounded.
- 3) You have any questions about the grounding or electrical instructions.

POWER SUPPLY CORD

1. Avoid the use of an extension cord because of potential safety hazards under certain conditions. Have a qualified electrician or serviceman to install an outlet near the appliance.
2. If it is absolutely necessary to use longer cord sets or an extension cord, extreme care must be exercised.
 - a) Use only a grounding type 3-wire extension cord that has a 3-blade grounding plug and a 3-slot receptacle that will accept the plug on the appliance.
 - b) The marked electrical rating of the cord set or extension cord must equal to or greater than the electrical rating of the appliance. The longer cord should be arranged so that it will not drape over the counter top or table top where it can be pulled on by children or tripped over unintentionally.

NOTE: Neither RCA nor the dealer can accept any liability for damage to the product or personal injury resulting from failure to observe the electrical connection procedures.

SAFETY INFORMATION



CAN ICES-3 (B)/NMB-3(B)

FCC Caution

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

IC Warning

This device complies with industry Canada's licence-exempt RSSs. Operation is subject to the following two conditions:


- (1) This device may not cause interference; and
- (2) This device must accept any interference, including interference that may cause undesired operation of the device.

IMPORTANT - GROUNDING METHOD

READ ALL INSTRUCTIONS BEFORE USE

ELECTRICAL SAFETY

INTEGRATED CIRCUIT BREAKER

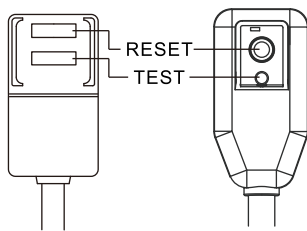


For additional safety, the power cord features an integrated circuit breaker. Test and reset buttons are provided on the plug case.

The circuit breaker should be tested periodically by pressing the TEST button. If it does not cause the circuit breaker to trip, or if the RESET button will not stay engaged, unplug the air conditioner immediately and contact your service technician.


Note: Your unit's power cord and plug may differ from above the picture shows.

PREFERRED GROUNDING METHOD

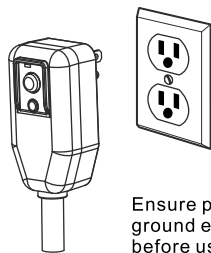

Ensure proper ground exists before use.

TEMPORARY GROUNDING METHOD

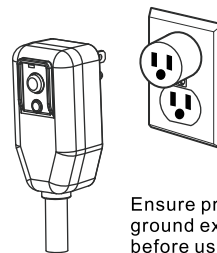

(Use of adapter plugs is not permitted in Canada)

Ensure proper ground exists before use.

Due to potential safety hazards, the use of an adapter plug is strongly discouraged.

To prevent damage to the adapter's ground terminal, hold the adapter in place while plugging in or unplugging the air conditioner.

Attaching the adapter ground terminal to the wall receptacle cover screw does not ground the appliance unless the cover screw is metal and not insulated, and the wall receptacle is grounded through the house wiring.

Frequent connection and disconnection can damage the ground terminal on the adapter. Never use a broken or damaged adapter.

SAVE THESE INSTRUCTIONS

IMPORTANT - GROUNDING METHOD

This product is factory equipped with a power supply cord that has a three-pronged grounded plug. It must be plugged into a mating grounding type receptacle in accordance with the National Electrical Code and applicable local codes and ordinances. If the circuit does not have a grounding type receptacle, it is the responsibility and obligation of the customer to exchange the existing receptacle in accordance with the National Electrical Code and applicable local codes and ordinances. The third ground prong should not, under any circumstances, be cut or removed. Never use the cord, the plug or the appliance when they show any sign of damage. Do not use your appliance with an extension cord unless it has been checked and tested by a qualified electrical supplier. Improper connection of the grounding plug can result in risk of fire, electric shock and/or injury to persons associated with the appliance. Check with a qualified service representative if in doubt that the appliance is properly grounded.

ELECTRICAL CONNECTIONS

Before plugging the appliance into the main socket, check that:


- The main power supply corresponds to the value indicated on the rating plate on the back of the appliance.
- The power socket and electrical circuit are adequate for the appliance.
- The main socket matches the plug. If this is not the case, have the plug replaced.
- The main socket is adequately grounded. Failure to follow these important safety instructions absolves the manufacturer of all liability.

Important information for correct disposal of the product in accordance with EC Directive 2012/19/EU.



At the end of its working life, the product must not be disposed of as urban waste. It must be taken to a special local authority differentiated waste collection centre or to a dealer providing this service. Disposing of a household appliance separately avoids possible negative consequences for the environment and health deriving from inappropriate disposal and enables the constituent materials to be recovered to obtain significant savings in energy and resources. As a reminder of the need to dispose of household appliances separately, the product is marked with a crossed-out wheeled dustbin.

DESCRIPTION

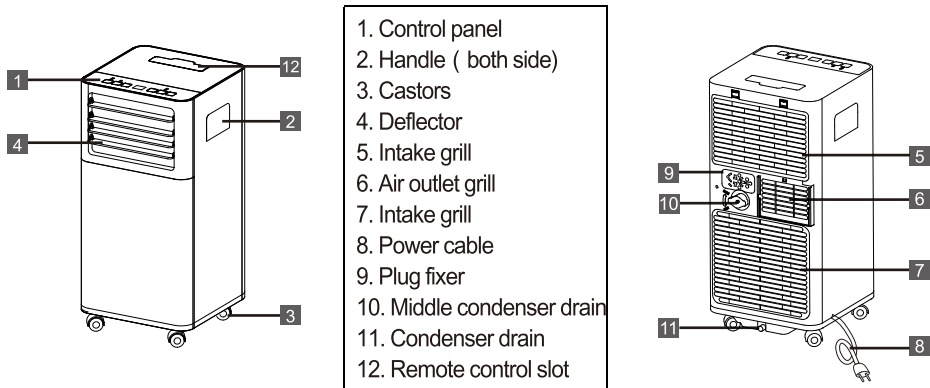

ACCESSORIES

PARTS	PARTS NAME	QUANTITY
	Exhaust hose Hose outlet Hose inlet	1 set
	Window slider kit	1 set
	Remote Control Batteries (Two AAA 1.5V)	1 set
	Window Sealing Sponge Assembly	1 set
	Drain Hose	1 pc

NOTE: All the illustrations in this manual are for explanatory purposes only.
Your appliance may be slightly different.
Be sure all accessories are removed from the packing before use.






INSTALLATION INSTRUCTIONS

EXHAUSTING HOT AIR

In the Cool Mode the appliance must be placed close to a window or opening so that the warm exhaust air can be ducted outside.

First position unit on a flat floor and make sure there's a minimum of 17.7" (45cm) clearance around the unit, and is within the vicinity of a single circuit outlet power source.



1. Extend either side of the hose (Fig.1)
2. Screw the hose inlet (Fig.2).
3. Screw it to the hose inlet (Fig.3).
4. Install the hose inlet into the unit (Fig.4).
5. Affix the hose outlet into the window slider kit and seal. (Fig.5 &6).

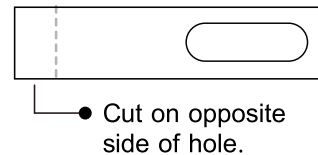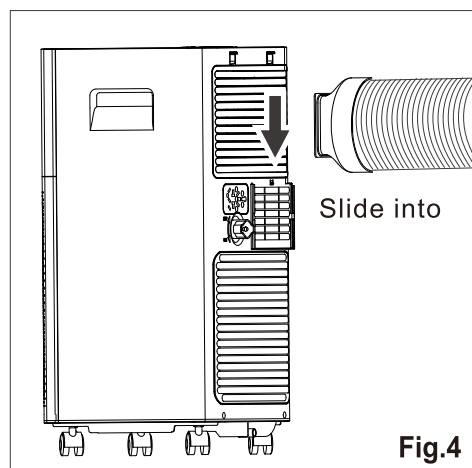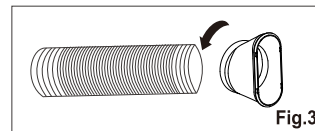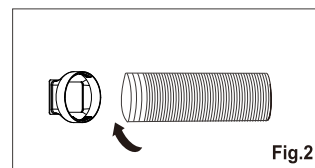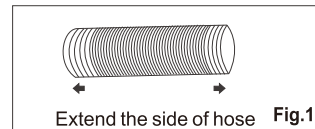

The window slider kit has been designed to fit most standard vertical and horizontal window applications, however, it may be necessary for you to modify some aspects of the installation procedures for certain types of windows. The window slider kit can be fastened with screws.

NOTE: If the window opening is less than the minimum length of the window slider kit, cut the end without the hold in it short enough to fit in the window opening. Never cut out the hole in window slider kit.

INSTALLATION INSTRUCTIONS

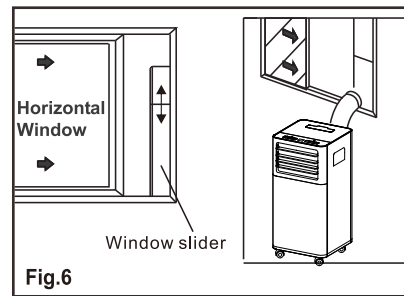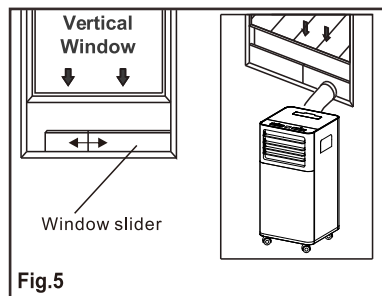

WINDOW SLIDER KIT INSTALLATION

1.Parts:


- A) Panel
- B) Panel with one hole
- C) Screw to lock window kit in place

2.Assembly:

Slide Panel B into Panel A and size to window width. Window sizes vary. When sizing the window width, be sure that the window kit assembly is free from gaps and/or air pockets when taking measurements.


3.Lock the screw into the holes that correspond with the width that your window requires to ensure that there are no gaps or air pockets in the window kit assembly after installation.

4. Use the provided foam window kit sealer to close any gaps or air pockets.

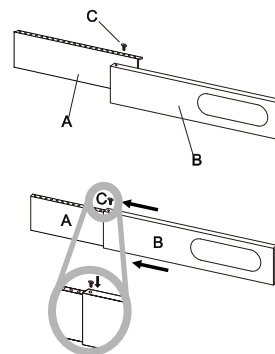

INSTALLATION INSTRUCTIONS



1. Cut the foam seal(adhesive type) to the proper length and attach it to the window sash.
2. Attach the window slider kit to the window sash. Adjust the length of the window slider kit according to the width of window. If necessary, mark the kit and cut one end down to properly fit the window.
3. Cut the foam seal(adhesive type) to the proper length and attach it on the top of the window.
4. Close the window securely against the window slider kit.
5. Secure the window slider kit to the window sash.
6. Cut the foam seal to an appropriate length and seal the open gap between the top window frame and outer window frame.

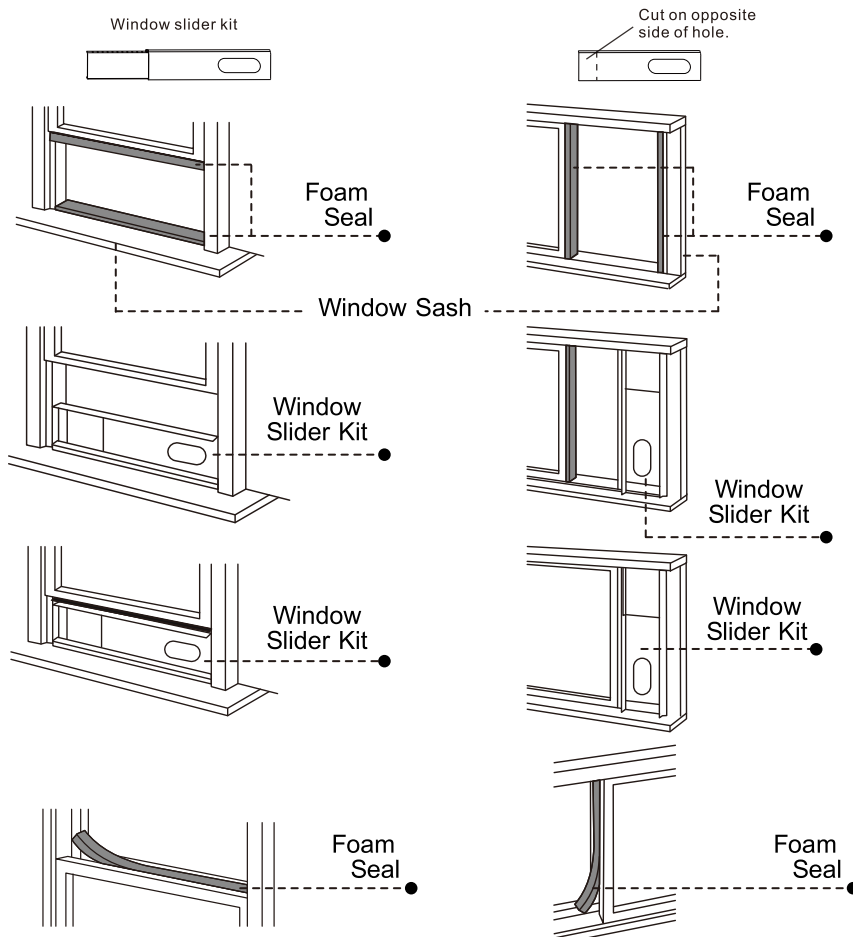


INSTALLATION INSTRUCTIONS

LOCATION

- The unit should be placed on a firm foundation to minimize noise and vibration. For safe and secure positioning, place the unit on a smooth, level floor strong enough to support the unit.
- The unit has casters to aid placement, but it should only be rolled on smooth, flat surfaces. Use caution when rolling on carpeted surfaces. Use caution and protect floors when rolling over wood floors. Do not attempt to roll the unit over objects.
- The unit must be placed within reach of a properly rated grounded socket.
- Never place any obstacles around the air inlet or outlet of the unit.
- Allow at least 17.5"(45cm) of space away from the wall for efficient air conditioning.
- The hose can be extended, but it is the best to keep the length to a minimum of 15.7" (40cm). Also make sure that the hose does not have any sharp bends or sags.

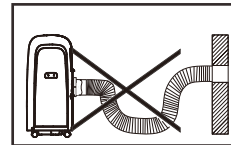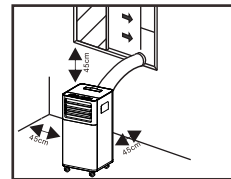


DESCRIPTION OF THE DISPLAY SCREEN

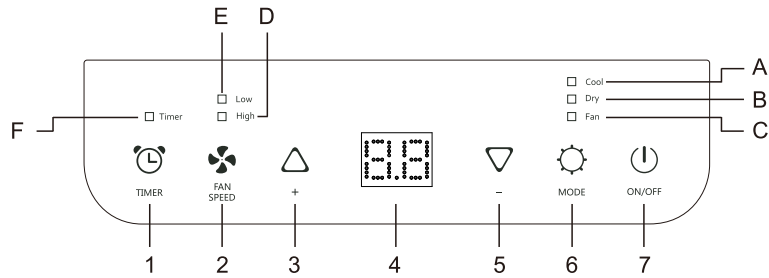



- | | |
|--------------------|--------------------------|
| 1. Timer button | A. Cool symbol |
| 2. Fan button | B. Dehumidify symbol |
| 3. Increase button | C. Fan symbol |
| 4. Display screen | D. High Speed Fan symbol |
| 5. Decrease button | E. Low Speed Fan symbol |
| 6. Mode button | F. Timer symbol |
| 7. ON/OFF button | |

TURNING THE APPLIANCE ON

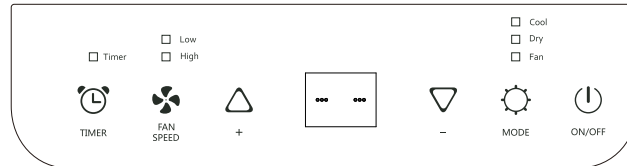Plug into the mains socket, then the appliance is standby.



Press the  button to make the appliance turn on. The last function active when it was turned off will appear.

✓ Never turn the air conditioner off by unplugging from the mains. Always press the button , then wait for a few minutes before unplugging. This allows the appliance to perform a cycle of checks to verify operation.

DESCRIPTION OF THE DISPLAY SCREEN

COOL mode


Ideal for hot muggy weather when you need to cooling and dehumidify the room.

To set this mode correctly:

- Press the “☀️” button a number of times until the “Cool” symbol light appears.
- Select the target temperature 64°F-90°F(18°C-32°C) by pressing the “△” or “▽” button until the corresponding value is displayed.
- Select the required fan speed by pressing the “🌀” button. Different fan speed have different.

High-To achieved the temperature as fast as possible.

Low-Run of the low noise.

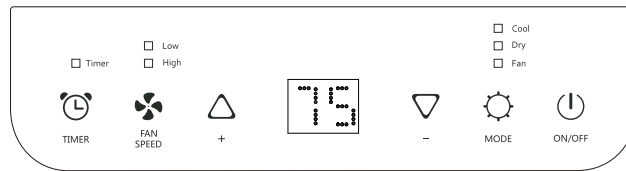

The most suitable temperature for the room during the summer varies from 75°F-81°F (24°C- 27°C). You are recommended, however, not to set a temperature much below the outdoor temperature. This will cause unnecessary power consumption.

FAN mode

When using the appliance in this mode, the air hose does not need to be attached.


To set this mode correctly:

- Press the “☀️” button a number of times until the “Fan” symbol appears.
- Select the required fan speed by pressing the “🌀” button.

Two speeds are available: High/Low.

- If appear “- - -” symbol standard for high speed fan, and “- -” stand for low speed fan.

As the figure below:

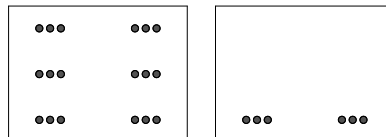


DESCRIPTION OF THE DISPLAY SCREEN

DRY mode

Ideal to reduce room humidity (spring and autumn, damp rooms rainy periods, etc). Before using the dry mode, the appliance should be prepared in the same way as for cool mode, with the air exhaust hose attached to enable the moisture to be discharged outside.

To set this mode correctly:

- Press the “☼” button a number of times until the “Dry” symbol light appears, the screen will appear “☼” ;
- In this mode, fan speed is selected automatically by the appliance.

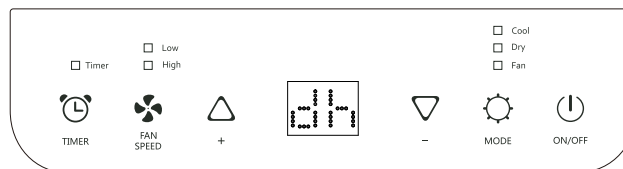

SETTING THE TIMER

This timer can be used to delay the appliance start up or shutdown, this avoids wasting electricity by optimizing operating periods.

Programming start up

- Turn on the appliance, choose the mode you desire, for example cooling, (75°F)24°C and high fan speed. Turn off the appliance.
- Press the “🕒” button, the screen will display 1-24 hours.
- Press several times until the corresponding time is displayed. Wait about 5 seconds, the timer will be active, then “Timer” symbol is displayed on screen.
- Press again the “🕒” button, the timer will be canceled, and the “Timer” symbol will disappear from screen.

Programming shut down

- Under the running of appliance, please press the “🕒” button, the screen will display 1-24 hours.
- Press several times until the corresponding time is displayed. Wait about 5 seconds, the timer will be active, then “Timer” symbol is displayed on screen.
- Press again the “🕒” button, the timer will be canceled, and the “Timer” symbol will disappear from screen.

DESCRIPTION OF THE DISPLAY SCREEN

Switch the unit of temperature

Hold on “△” and “▽” button three seconds by the same time, then you can change the unit of temperature.

For example:

Before change, in cool mode, the screen display like Fig.1.

After change, in cool mode, the screen display like Fig.2.

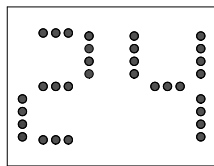


Fig.1

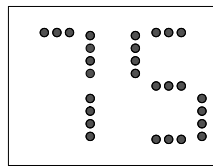





Fig. 2

DESCRIPTION OF THE DISPLAY SCREEN

SELF-DIAGNOSIS

The appliance has a self diagnosis system to identify unit malfunctions. Error messages are displayed on the appliance display.

IF DISPLAYED	WHAT SHOULD I DO?
 <p>LOW TEMPERATURE (frost prevention)</p>	<p>The appliance is fitted with a frost protection device to avoid excessive formation of ice. The appliance starts up again automatically when the defrosting process is completed.</p>
 <p>PROBE FAILURE (sensor damaged)</p>	<p>If this is displayed, contact your local authorize service centre.</p>
 <p>FULL TANK (safety tank full)</p>	<p>Empty the internal safety tank, following the instructions in the "End of season operations" paragraph.</p>


REMOTE CONTROL MANUAL



⓪	On/Off button		Fan speed button
^	Increase button		Mode button
v	Decrease button		Swing button
⌚	Timer button		Sleep button
°C/°F	Unit Switch button		

NOTE: This serial model have no auto swing function.

- √ Point the remote control at the sensor on the appliance.
- √ The remote control must be no more than 23ft (7 meters) away from the appliance (without obstacles between the remote control and the receiver).
- √ The remote control must be handled with extreme care. Do not drop it or expose it to direct sunlight or sources of heat. If the remote control does not work, check the batteries and replace with new batteries. Do not mix new and old batteries.

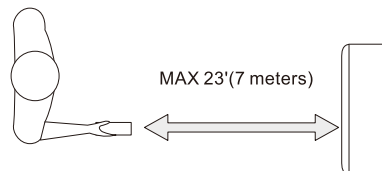

REMOTE CONTROL MANUAL

INSERTING OR REPLACING THE BATTERIES

- Remove the cover on the rear of the remote control;
- Insert two "AAA" 1.5V batteries in the correct position (see instructions inside the battery compartment);





NOTE:

- √ If the remote control unit is replaced or disposed of, the batteries must be removed and discarded in accordance with current legislation as they are harmful to the environment.
- √ Do not mix old and new batteries. Do not mix alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium) batteries.
- √ Batteries may explode or leak if exposed to open flames. Dispose of batteries accordingly.
- √ If the remote control is not being used for extended periods of time (winter storage), remove the batteries and store in a cool, dry location.

COOL mode

Ideal for hot muggy weather when you need to cooling and dehumidify the room.

To set this mode correctly:

- Press the “” button a number of times until the “Cool” symbol light appears.
- Select the target temperature 64°F-90°F (18°C-32°C) by pressing the “^” or “v” button until the corresponding value is displayed.
- Select the required fan speed by pressing the “” button. Different fan speed have different function.

High-To achieved the temperature as fast as possible.



Low-Run of the low noise.

The most suitable temperature for the room during the summer varies from 75°F - 81°F (24°C - 27°C). You are recommended, however, not to set a temperature much below the outdoor temperature. The fan speed difference is more noticeable when the appliance is under FAN mode but may not be noticeable under COOL mode.



REMOTE CONTROL MANUAL

FAN mode


When using the appliance in this mode, the air hose does not need to be attached.

- Press the “” button a number of times until the “Fan” symbol light appears.
- Select the required fan speed by pressing the “” button.

Two speeds are available: High/Low

- If appear “” symbol standard for high speed fan, and “” stand for low speed fan.

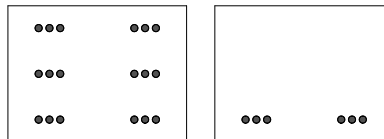

As the figure below:




DRY mode

Ideal to reduce room humidity (spring and autumn, damp rooms rainy periods, etc). In dry mode, the appliance should be prepared in the same way as for cool mode, with the air exhaust hose attached to enable the moisture to be discharged outside.

To set this mode correctly:

- Press the “” button a number of times until the “Dry” symbol light appears, the screen will appear “”;
- In this mode, fan speed is selected automatically by the appliance and default low speed fan.

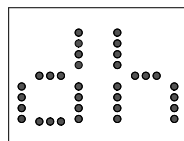

REMOTE CONTROL MANUAL


SWING function

NOTE: This serial unit have no auto swing function.

Please adjust the deflectors by manual to the suitable position.

A: Horizon deflector

B: Vertical deflector

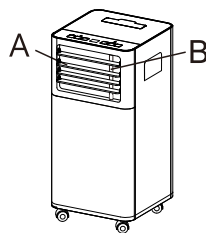

SLEEP function

This function is useful for the night as it gradually reduces operation of the appliance.

To set this function correctly:

- Select the cool or heat mode as described above.
- Press the " " button.

The appliance operates in the previously selected mode.

When you choose the sleep function, the screen will reduce the brightness , and the fan speed is low.

The SLEEP function maintains the room at optimum temperature without excessive fluctuations in either temperature or humidity with silent operation. Fan speed is always at Low, while room temperature and humidity vary gradually to ensure the most comfortable.

When in COOL mode, the selected temperature will increase by 1°C(1°F) per hour in a 2 hour period. This new temperature will be maintained for the next 6 hours. Then the appliance turn it off.

The SLEEP function can be canceled at any time during operation by pressing the "Sleep", "Mode" or "fan speed" button.

In FAN or DRY mode, SLEEP function cannot be set.

REMOTE CONTROL MANUAL

SETTING THE TIMER

- This timer can be used to delay the appliance start up or shutdown, this avoids wasting electricity by optimizing operating periods.

Programming start up

- Turn on the appliance, choose the mode you desire, for example cooling, (75°F)24°C and high fan speed. Turn off the appliance.
- Press the “⌚” button, the screen will display 1-24 hours.
- Press several times until the corresponding time is displayed. Wait about 5 seconds, the timer will be active, then “Timer” symbol is displayed on screen.
- Press again the “⌚” button, the timer will be canceled, and the “Timer” symbol will disappear from screen.

Programming shut down

- Under the running of appliance, please press the “⌚” button, the screen will display 1-24 hours.
- Press several times until the corresponding time is displayed. Wait about 5 seconds, the timer will be active, then “Timer” symbol is displayed on screen.
- Press again the “⌚” button, the timer will be canceled, and the “Timer” symbol will disappear from screen.

Switch the unit of temperature

Press the “°C/°F” button, then you can change the unit of temperature.

For example:

Before change, in cool mode, the screen display like Fig.1.

After change, in cool mode, the screen display like Fig.2.

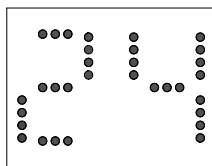


Fig.1

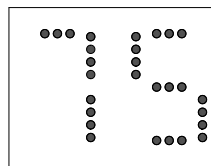





Fig.2

REMOTE CONTROL MANUAL

TIPS FOR CORRECT USE

To get the optimal performance from your appliance, follow these recommendations:

- Close the windows and doors in the room to be air conditioned (Fig. 21). When installing the appliance semi-permanently, you should leave a door slightly open (as little as 1 cm) to guarantee correct ventilation.
- Protect the room from direct exposure to the sun by partially closing curtains and/or blinds to make the appliance much more economical to run (Fig. 22).
- Never rest objects of any kind on the appliance.
- Do not obstruct the air intake and outlet (Fig. 23). Leave the grilles free.
- Make sure there are no heat sources in the room.
- Never use the appliance in very damp rooms (laundry room, for example).
- Never use the appliance outdoors.
- Make sure the appliance is standing on a level surface.

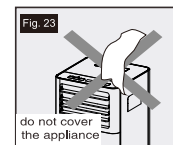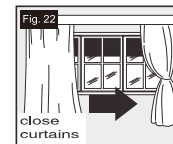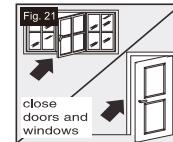

WATER DRAINAGE METHOD



When there is excess water condensation inside the unit, the appliance stops running and shows “F T” (FULL TANK as mentioned in SELF-DIAGNOSE). This indicates that the water condensation needs to be drained using the following procedures:

Manual Draining (Fig.24)

1. Unplug the unit from power source.
2. Place a pan(not supply) under the lower drain plug. See diagram.
3. Remove the lower drain plug.
4. Water will drain out and collect in the pan.
5. After the water is drained, replace the lower drain plug firmly.
6. Turn on the unit.



Continuous Draining (Fig.25)

1. Unplug the unit from the power source.
2. Remove the drain plug. While doing this operation some residual water may spill so please have a pan (not supply) to collect the water.
3. Connect the drain hose (1/2" or 12.7mm, maybe not supplied). See diagram.
4. The water can be continuously drained through the hose into a floor drain or bucket.
5. Turn on the unit.

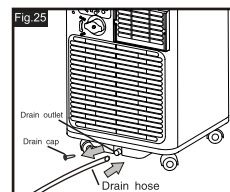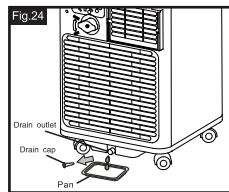

NOTE:

Please be sure that the height of and section of the drain hose should not be higher than that of the drain outlet, or the water tank may not be drained.(Fig.26 and Fig.27)

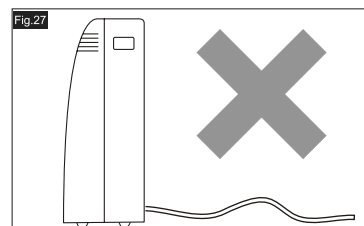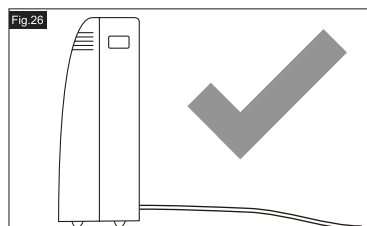


WATER DRAINAGE METHOD

Middle drainage


When unit running in Dry mode, you can choose the way below to drainage.

1. Unplug the unit from the power source.
2. Remove the drain plug(Fig.A). While doing this operation some residual water may spill so please have a pan to collect the water.
3. Connect the drain hose (1/2" or 12.7mm, maybe not supplied). (Fig.B)
4. The water can be continuously drained through the hose into a floor drain or bucket.
5. Turn on the unit.

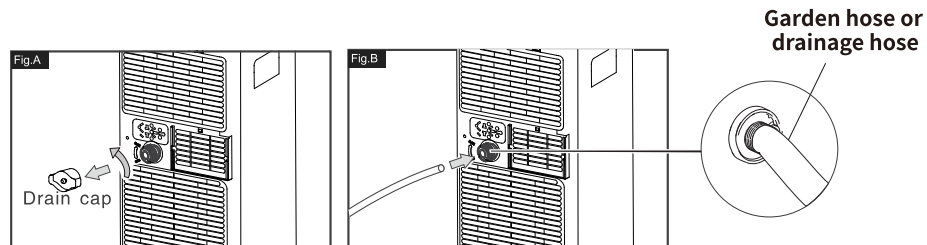


NOTE:

Please be sure that the height of and section of the drain hose should not be higher than that of the drain outlet, or the water tank may not be drained. Please see following fig.

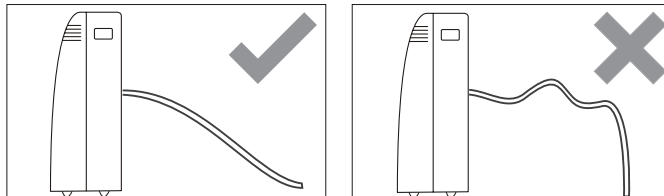

CLEANING

Before cleaning or maintenance, turn the appliance off by pressing the  button on the control panel or remote control, wait for a few minutes then unplug from the mains socket.

CLEANING THE CABINET

You should clean the appliance with a slightly damp cloth then dry with a dry cloth, may not used water to wash appliance.


- Never wash the appliance with water. It could be dangerous.
- Never use petrol, alcohol or solvents to clean the appliance.
- Never spray insecticide liquids or similar.

CLEANING THE AIR FILTERS

To keep your appliance working efficiently, you should clean the filter every week of operation.

Follow the Fig.28 direction and open the grid of appliance, then take out evaporator from the back of grid. Use a vacuum cleaner to remove dust accumulations from the filter. If it is very

dirty, immerse in warm water and rinse a number of times. The water should never be hotter than 104°F(40°C). After washing, leave the filter to dry then attach the intake grille to the appliance.

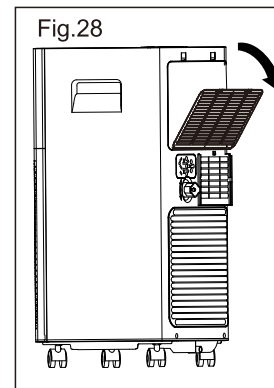

START-END OF SEASON OPERATIONS

START OF SEASON CHECKS

Make sure the power cable and plug are undamaged and the earth system is efficient. Follow the installation instructions precisely.

END OF SEASON OPERATIONS

To empty the internal circuit completely of water, remove the cap.

Run off all water left into a basin. When all the water has been drained, put the cap back in place.

Clean the filter and dry thoroughly before putting back.

LIMIT CONDITIONS

Temperature of room	64°F-95°F (18°C-35°C)(Cooling)
Humidity of room	30%RH - 80%RH

TROUBLE SHOOTING

ROOM CONDITIONS

Temperature of room 64°F-95°F (18°C-35°C)(Cooling)

Temperature of room 50°F-77°F (10°C-25°C)(Heating)

TROUBLE SHOOTING

PROBLEM	CAUSE	SOLUTION
The appliance does not come on	<ul style="list-style-type: none"> • There is no current • It is not plugged in • The internal safety device has tripped 	<ul style="list-style-type: none"> • Check the power supply • Plug the unit into a power outlet • Wait 30 minutes. If the problem persists, contact TCL customer service
The appliance works for a short time only	<ul style="list-style-type: none"> • There are bends in the air exhaust hose • Something is preventing the air from being discharged 	<ul style="list-style-type: none"> • Position the air exhaust hose correctly, keeping it as short as possible and free of curves to avoid bottlenecks • Check and remove any obstacles obstructing air discharge
The appliance works, but does not cool the room	• Windows, doors and/or curtains open	• Close doors, windows and curtains, bearing in mind the "tips for correct use" given above
	• There are heat sources in the room (oven, hairdryer, etc)	• Eliminate the heat sources
	• The air exhaust hose is detached from the appliance	• Fit the air exhaust hose in the housing at the back of the appliance
	• The technical specification of the appliance is not adequate for the room in which it is located	
During operation, there is an unpleasant smell in the room	• Air filter clogged	• Clean the filter as described above

TROUBLE SHOOTING

The appliance does not operate for about three minutes after restarting it	<ul style="list-style-type: none">• The internal compressor safety device prevents the appliance from being restarted until three minutes have elapsed since it was last turned off	<ul style="list-style-type: none">• Wait. This delay is part of normal operation
The following message appears on the display: LE / PF / FE	<ul style="list-style-type: none">• The appliance has a self diagnosing system to identify unit malfunctions	<ul style="list-style-type: none">• See the SELF-DIAGNOSIS section above

6 MONTH LIMITED WARRANTY

In order to utilize the warranty, you must register your purchase within 30 days from the date of purchase.

The manufacturer warrants this unit against defects in materials and workmanship on functional parts, for a period of 6 months from the original date of purchase. Your sales receipt showing the date of purchase of the product is your proof of purchase. Keep sales receipt in a safe place for future reference.

This product is made with the highest quality materials and is warranted to be free from defects in materials and workmanship at the time of purchase. This limited warranty applies to products manufactured or disbursed by the manufacturer, are delivered in the continental United States, and extends to the original purchaser, or gift recipient. This warranty becomes valid at the time of purchase and terminates either by the specified time frame listed above and or owner transfer. Any refunds or monetary compensations must be claimed through the place of purchase (retailer), and not through the manufacturer. Any extended warranties (Warranties that cover above and beyond this manufacturer warranty) that are sold through a retailer or third party, are not directly correlated with this product's limited warranty, and may be redirected to said retailer or third party for coverage. This warranty extends through the manufacturer of the product and covers functional parts only. Cosmetics are not covered, unless unequivocally determined it is a workmanship defect. Shipping damage should be addressed with the shipping company, retailer or place of purchase, not the manufacturer unless the manufacturer was the direct shipper. The manufacturer's sole obligation under this warranty shall be limited to furnishing the original purchaser replacement parts for units deemed repairable by the supplier's warranty department. The purchaser is responsible for purchasing insurance on any parts shipped or returned if desired. The purchaser is responsible to prepay any shipping charges (both ways) including, but not limited to taxes and duties. All exchanged parts and products replaced under this warranty will become the property of the manufacturer. The manufacturer reserves the right to change manufactures of replacement parts or products for use, in order to cover any existing warranty. The purchaser may be asked to provide the supplier with proof of purchase documents including the date of purchase. Any evidence of alteration, erasing or forgery of proof of purchase documents will be justified cause to void this limited warranty. Products, in which the serial number has been defaced or removed, are not eligible for warranty coverage. This warranty does not apply if the unit has been subject to negligence, fabrication, misuse, abuse or repairs, alteration by non-manufacturer authorized personnel, inappropriate installations or any case beyond the control of the manufacturer. Examples of warranty invalidation may also include, but are not limited to: Use of lacquer or paints in (and around) the unit Electrical requirement deficiencies (see manual for specific electrical requirements) Use with extension cords/timers/surge protectors/GFCI Outdoor Applications Normal wear /tear/weathering Pet / Consumer accidents

The manufacturer shall not be liable for any loss due to use (or misuse) of the unit or other incidental or consequential costs, expenses or damage without irrefutable foundations. Under no circumstances shall the manufacturer or any of its representatives be held liable for injury to any person or damage to any property, however arising. Any implied warranty shall have duration equal of the applicable warranty stated above. Specifications are subject to change without notice or obligation. This limited warranty gives the original purchaser specific legal rights. Other rights may vary from state to state.

In order to utilize the warranty, you must register your purchase within 30 days from the date of purchase.

PRODUCT REGISTRATION

Registration must be completed online at WWW.COOLLIVINGPRODUCTS.COM or complete and mail the attached registration card to:

KMS INC.
ATTN: CUSTOMER SERVICE
811 E WATERMAN
WICHITA, KS 67202

For questions or part(s) on your Cool Living air conditioner please visit our website at WWW.COOLLIVINGPRODUCTS.COM or email CUSTOMERSERVICE@1KMS.COM If you have no online access please call 1-800-752-5262 X 251

For Parts please provide the model number, copy of receipt from purchase, name/part number and a brief description of the part needed, your name and the mailing address where you would like the replacement part to be sent. If you are unable to register your warranty online at WWW.COOLLIVINGPRODUCTS.COM Please fill out and mail the attached registration card to the address listed above. Keep the rest of this information in a safe place for reference.

WARRANTY REGISTRATION CARD

NAME: _____

PHONE # _____ - _____ - _____ EMAIL: _____

ADDRESS: _____

CITY: _____ STATE: _____ ZIP CODE: _____ - _____

PRODUCT DESCRIPTION: _____

DATE OF PURCHASE: _____ PURCHASED FROM: _____

BRAND: _____ MODEL #: _____

SERIAL #: _____