



HYBOX OWNER'S MANUAL

Congratulations on your purchase of a Tepui HyBox. We strive to provide the ultimate camping experience for every camper. Your top quality, durable HyBox mounts directly to your roof rack or aftermarket roof bars and can be fully setup in just a few minutes. It can be left on your vehicle year-round.

The Tepui HyBox is made with the most durable materials that stand up to the most extreme conditions. High quality ripstop fabrics with superior ventilate coating provide excellent water and wind protection, yet are more breathable than other tent brands on the market.

The Tepui HyBox components have been fully assembled at the factory. Installation is composed of unpacking, then mounting your Tepui HyBox onto your roof rack or aftermarket roof bars. All of the tools and hardware required for installation are included.

Should you have any questions, please email sales@tepui.com or call Customer Service at 1-800-301-9874.

FOR A DETAILED INSTRUCTIONAL VIDEO ON HOW TO INSTALL YOUR ROOFTOP TENT VISIT: WWW.TEPUI.COM/INSTALLATION



WARNING

Improper installation or use of your tent may result in serious injury or death. Follow these installation instructions carefully to ensure proper installation on your vehicle and safe use of your tent. Please check with your vehicle manufacturer for specified loading capacity of your roof rack. Not all factory roof racks or aftermarket roof bars can safely accommodate tent models.

TABLE OF CONTENTS

GETTING STARTED	3
HARDWARE IDENTIFICATION CHART	4
ATTACHMENT TO ROOF RACK	5
HYBOX SETUP	6-7
CONVERSION TO CARGO	8-9
CONVERSION TO TENT	10
STORAGE AND HANDLING	11
LIMITED WARRANTY	12



 


 

GETTING STARTED

This installation manual supports the Tepui HyBox.

1. Remove HyBox from box and place on a clean surface (preferably waist high) with the mounting rails face down.
2. Undo cam buckles by using thumb to press center, then pulling strap out from buckle.
3. Repeat on all four corners.
4. Push tent top up from center on one side (front or back) and then the opposite side.
5. Open zippered canvas door and mesh door.
6. Remove hardware bag and ladder bag.
7. Close top shell by pulling down on pull strap (front or back). **Loosely** attach the two cam buckles. Repeat on other side.
8. Make sure excess canopy fabric is tucked in, then securely fasten all four latches.



HARDWARE IDENTIFICATION CHART

	ITEM	QUANTITY
	13mm Steel Bolt	8
	13mm Nylock Nut	8
	Metric Wrench 13mm/15mm	1
	Channel Slider	8
	Steel Mount Plate	4




TOOLS

All of the tools you need to install your tent are included. You may wish to use the following optional tools during installation: box cutter, 13mm/10mm ratchet wrench.



ATTACHMENT TO ROOF RACK

1. Place the HyBox on top of your vehicle rack system, ensuring the mounting tracks are perpendicular to the bars they will mount to, and the tent is centered on the roof rack. Position the tent so that the Tepui T hardshell badge faces the front of the vehicle
2. Place a 13mm bolts into one side of each channel sliders, ensuring they're set flush into the channel slider sides. Place a steel mount plate onto the bottom of the bolt, securing with a nylock nut.
3. Begin to slide each channel slider into the mounting tracks.
4. Lift one side of the tent to position one set of channel sliders on the **inner side** of the roof rack bar and an additional set on the outer side. Repeat on all four points where the tent touches the mounting bars.
5. Use the remaining nyloc nuts to attach the other side of the mount plate to the second bolt. Tighten all eight bolts/nut securely with the included wrench. Check all the mounting bolts and brackets periodically during use to ensure they are always securely fastened to your rack system.

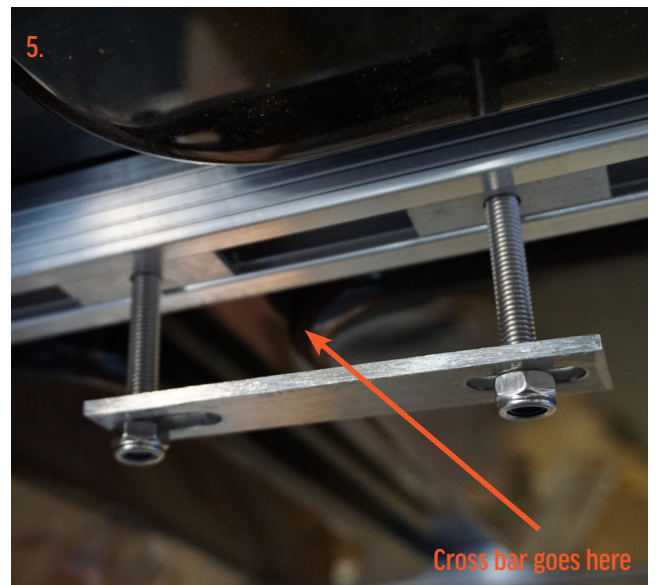

HYBOX SETUP

OPENING TENT

1. Using thumb, depress center of cam buckle, pull strapping to free from buckle. Repeat on all four corners. Release center spring clips.



2. Retrieve ladder from ladder bag and attach to ladder brackets by hooking on to lower portion of brackets. Fold and store bag.



3. Raise Top Shell– Push shell up on ladder side and then repeat on the other side.



4. Climb up ladder and unzip door and zipper door.



5. Retrieve rain fly poles from pocket under passenger side door.



6. Locate the fabric slits in the tent skirt. Pre-drilled holes are located underneath each slit. Insert each rainfly rod at a 45° angle into the hole and bend slightly to hook the other end through the grommet of the canopy door. Repeat this process for the holes on the other side of the HyBox.

7. Release inside bungee straps (which keep the canopy taught for ease of closing tent), and store in a side pocket.



You have now completely setup your HyBox for camping!



HYBOX SETUP, CONT'D

CLOSING TENT

1. Remove rainfly rods and store in pocket located under passenger side door.
2. Close front and rear windows.
3. Retrieve and attach bungees in a crisscross pattern between both side doors.
4. Remove ladder from brackets and place in ladder bag. Store in HyBox if desired.
5. Close and zip mesh door, leaving canvas door rolled up (this allows air to exit the tent while closing).
6. Pull down rear side of hardshell top using pull down strap.
7. Loosely secure back cam buckles.
8. Pull down front side of hardshell top using pull-down strap.
9. Loosely secure front cam buckles.
10. Tuck in canopy and pull-down straps, and fully close the tent from both ends.
11. Secure front and rear cam buckles.
12. Engage center spring clips in front and back.

You have completely put away your HyBox and are ready for your next destination.

Remember to check the HyBox mounting throughout your journey to ensure it hasn't come loose.





CONVERSION TO CARGO

To convert to a Cargo Carrier from a Rooftop Tent:

1. Retrieve stabilizer strap at each corner of lower base.
2. Attach stabilizer strap to upper corner brace (where hinge mounts) using Velcro. Ensure placement is on **outside** of hinge, next to the canopy fabric. Then press down on upper hardshell to release tension on canopy fabric, and re-tighten straps. Repeat for all four corners.
3. Store bungees in a canopy pocket.
4. Zip close all doors and windows.
5. Locate lower canopy zipper pull at front of tent and unzip all the way around, detaching.
6. Locate upper canopy zipper pull at back of tent and unzip all the way around, detaching.
7. Carefully lift canopy over upper top. Fold and store in cool dry space.
8. From the rear, fold inward and remove the mattress. Store in a cool dry space.
9. For ease of use, keep the front cam buckle loosely latched and open the rear at full height. This gives maximum access space.



CONVERSION TO CARGO, PHOTOS

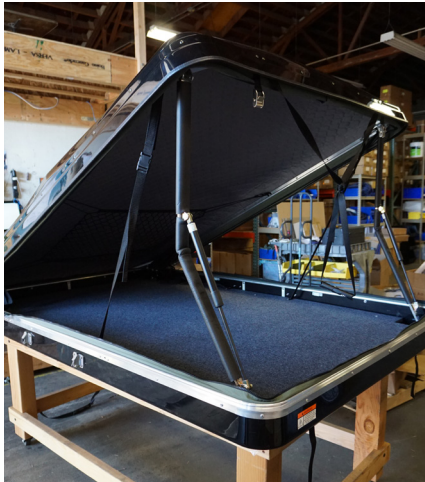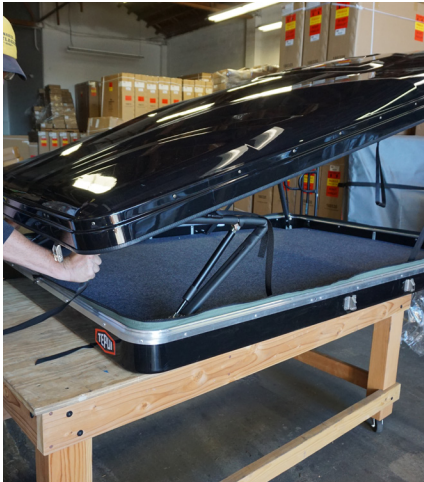

CONVERSION TO TENT

To convert to a Rooftop Tent from a Cargo Carrier:

1. Retrieve mattress and fold lengthwise, placing into the tent from the back end.
2. Release all four cam buckles and push hardshell top up, so that all four hinges are extended and the top hardshell is parallel to the bottom.
3. Retrieve canopy and orient it so that the doors are on each side. Locate the upper canopy zipper, this will be at the back end of the tent.
4. Lift canopy over the top hardshell so it is loosely around the four hinges.
5. Connect the top ZipperGimp™ to the top hardshell at the back of the tent and zip all the way around.
6. Ensure stabilizer straps are pulled tight enough to allow canopy to reach top and bottom shells with ease.
7. Connect the bottom ZipperGimp™ to the bottom hardshell at the front of the tent and zip all the way around.
8. The tension on the stabilizer straps can now be released.
9. Zip open doors and windows as needed.



STORAGE AND HANDLING

Clean and dry your tent after each camping trip:

1. Open the tent fully and brush/vacuum inside.
2. Clean the fabric as needed using a mild detergent, warm water, and a soft to medium brush.
3. Rinse fabric of all detergent prior to drying.
4. Dry tent in the sun with all windows open. The tent must be completely dry before storage, or mildew and mold may occur. This is especially necessary after camping in rain or wet conditions.
5. Using a small brush, remove dirt from zippers. Use a silicon spray to keep zippers lubricated.
6. Wash mattress pad and hang to dry.



LIMITED WARRANTY

WHAT IS COVERED

Tepui Outdoors, Inc., producer of Tepui Tents, warrants to the original purchaser that its products are free from defects in material and workmanship, for the term described, except as qualified below. The life of the product is determined from the date of purchase until such time as the product is no longer serviceable due to normal wear and tear.

WHAT IS NOT COVERED

Tepui Outdoors, Inc. shall not be responsible for the natural breakdown of materials that occurs inevitably with extended use (e.g., Ultra Violet (UV) light damage on tents, exhausted zippers), or defects caused by accident, abuse, alteration, animal attack, storm damage, misuse or improper care.

THERE ARE NO OTHER EXPRESS WARRANTIES BEYOND THE TERMS OF THIS LIMITED WARRANTY. IN NO EVENT SHALL Tepui Outdoors, Inc. BE LIABLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES.

Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you.

WHAT TEPUI OUTDOORS, INC. WILL DO

If after inspection we find that a product failed due to a manufacturing or material defect, we will repair or replace the product, at our option, without charge.

HOW TO OBTAIN WARRANTY SERVICE

Return the product, freight prepaid, to the Tepui Dealer from whom it was purchased; or, contact Tepui's Customer Satisfaction Department for return authorization: toll free 1-800-301-9874. Collect shipments or shipments without return authorization cannot be accepted.

REPAIRS

If your tent needs service or repair due to normal wear and tear, animal attack, accident or some other reason that is not covered under the warranty, we will provide the necessary service for a reasonable charge, plus shipping and handling. We require that products accepted for any repair be properly cleaned according to our recommended care instructions. Please send your product or component that requires repair (e.g., tent fly), postage prepaid, along with a description of what needs attention. For service and repairs, please contact our Customer Satisfaction Department: toll free 1-800-301-9874.

HOW STATE LAW RELATES TO THIS WARRANTY

This warranty gives you specific legal rights. You may have other rights that vary from state to state.

WARRANTY TERM

Limited 2 year warranty applies to all tent components including base, aluminum poles, ladder, fabric and seams.





Tepui Outdoors, Inc.

2500 Rosedale Avenue

Soquel, CA 95073

1-800-301-9874