尺寸: 210mm*148mm

骑马钉

封面128g铜版纸,内页80g书纸

Need Help?



Email us

support@mirocohome.com



Visit Support Site

www.miroco.net

MANUFACTURER

Manufacturer: Shenzhen NearbyExpress Technology Development Co.,Ltd.


Address: Floor 7, Building E, Galaxy World Phase II, Shenzhen, China

Made in China

LED Floor Lamp

User Guide

MI-DL004

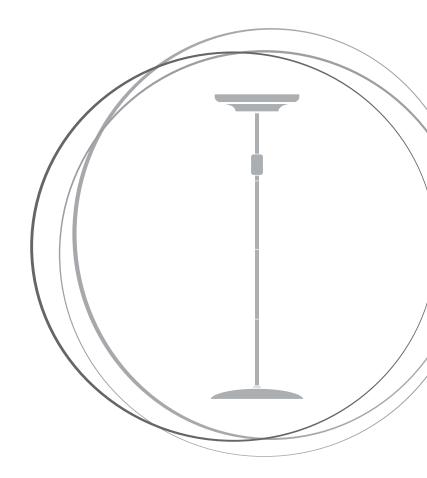



Contents

- **01** IMPORTANT SAFETY INSTRUCTIONS
- O3 Product Features
- O4 Knowing Your Floor Lamp
- O5 Assembly
- 06 Using Your Floor Lamp
- **O9** Specifications
- O9 Cleaning and Maintenance
- 10 Troubleshooting
- 11 Warranty
- 11 FCC Compliance

o1 miroco

Thanks for choosing Miroco LED Floor Lamp. Please read this User Guide thoroughly before use and retain it for future reference.



IMPORTANT SAFETY INSTRUCTIONS

READ AND FOLLOW ALL SAFETY INFORMATION AND INSTRUCTIONS. KEEP FOR FUTURE REFERENCE.

When using electrical appliances, basic precautions should always be followed to reduce the risk of fire, electric shock, and injury to wpersons, including the following:

- To ensure correct and safe installation, usage and functioning of the product, always follow these instructions carefully and keep for future reference.
- · Use only the supplied AC power adapter.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning the use of the appliance by person responsible for their safety.
- Never use any optical devices such as a lens to look directly into the light beam.
 This can cause eye damage.
- Do not allow to be used as a toy. Close attention is necessary when used by or near children. Children should be supervised to ensure that they do not

play with the product.

- Keep packaging materials out of children's reach (e.g. plastic bags...).
 Danger of suffocation.
- Do not operate any light with a damaged cord or after malfunction occurs, or damaged in any manner.
 Discard the light, or return it to an authorized service facility for examination or repair.
- Do not place this unit near extreme heat sources, moisture, or corrosive substances.
- Always switch off the power prior to installation, maintenance or repair activities.
- Do not remove the power plug with wet hands as it may cause electrical shock.
- · If you notice any smoke, unusual

02 miroco

noises or strange smells, turn off the unit immediately and remove the plug from the wall outlet. Stop using the device and check by authorized service personnel.

- Do not dismantle the product by yourself, always ask professional electricians or authorized technicians for repair.
- The external flexible cable or cord of this luminaire cannot be replaced; if the

- cord is damaged, the luminaire shall be destroyed.
- Follow local ordinances and recycling instructions regarding disposal or recycling of the device and device components.
- If you have any product problems or report an unexpected situation during use, please contact the Customer Support at support@mirocohome.com.

FOR HOUSEHOLD USE ONLY

READ AND SAVE THESE INSTRUCTIONS

o3 miroco


Product Features

Your new Miroco LED Floor Lamp is perfect for lighting up your whole room:


- 4-level Color Temperature & Brightness Adjustment
- Ultra Extended Lifespan: 50000-Hour Long Lasting LED
- Safe & Stable with a Well Weighed Base
- Easy to Assemble & Move

04 miroco

Knowing Your Floor Lamp

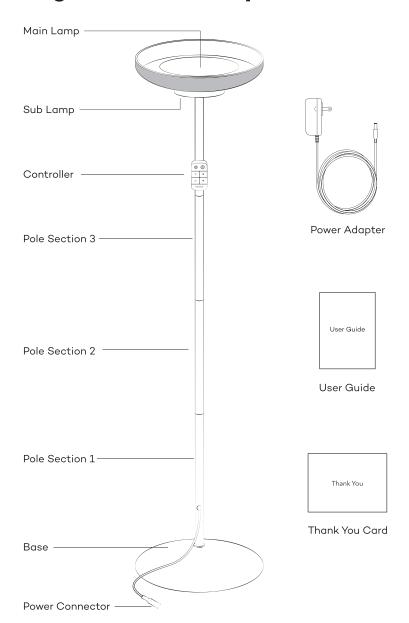


Assembly

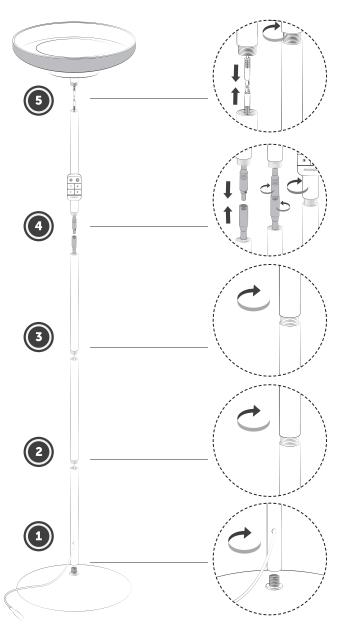

Using Your Floor Lamp


Getting Started

06

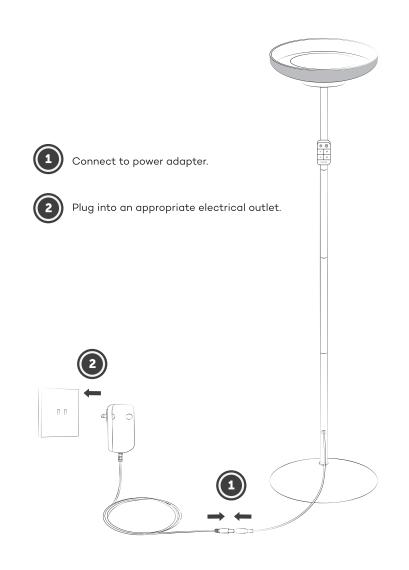

Using Your Floor Lamp

Controlling Your Lamp

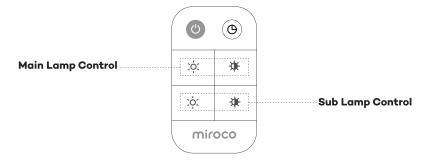



Turn ON/OFF

- Press once to turn on the main lamp and sub lamp.
- Press once again to turn off the main lamp and sub lamp.



60-Minute Auto OFF Timer

- With lamp on, press once to turn on Auto OFF Timer.
- · Press once again to cancel Timer setting.



Main Lamp Control (ON/OFF/Brightness Adjustment)

- Turn ON: Press once.
- Turn OFF: Press and hold for 1-2 seconds.
- With lamp on, repeatedly short press to cycle through 4 brightness levels.



Main Lamp Control (Color Temperature)

• With lamp on, repeatedly short press to cycle through 4 levels.



Sub Lamp Control (ON/OFF/Brightness Adjustment)

• Same set as Main Lamp.




Sub Lamp Control (Color Temperature Adjustment)

· Same set as Main Lamp.

Using Your Floor Lamp

Ajustable Lamp Head

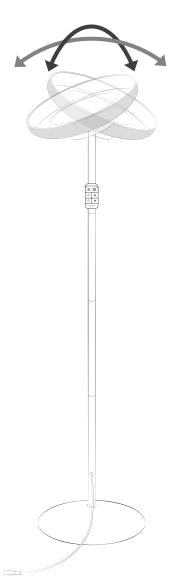

Specifications

Model	MI-DL004
Power	36W
Input	DC 24V==1.5A
Color Temperature	2700K-6500K
Lumens	Main lamp 1400LM (Max.) Sub Lamp 400LM (Max.)
CRI	>80

Cleaning and Maintenance

- Unplug the power cord from the power outlet before cleaning.
- To avoid the risk of electric shock, do not clean the base or the power cord with water and do not immerse them.
- Wipe the lamp with a soft damp cloth.
- Clean the unit on a regular basis.
- Please store in a dry and cool place if not using for a long period of time.

Troubleshooting

10

Problem	Possible Cause	Solution
The lamp does not light up	No power supply	Correctly plug in the power adapter.
	The lamp is not turned on	Refer to the Using Your Floor Lamp section.
The touch control panel is not responsive	Hands are wet	Tap the panel with dry hands.
	Voltage fluctuation	Disconnect the power adapter and reconnect, then press the on/off button once to start the lamp again.
LED failure	LED component failed	Please contact Miroco Customer Support.
Others	Power adapter failed	Please contact Miroco Customer Support.
	Short circuit	Please contact Miroco Customer Support.

11 miroco

Warranty

This product is covered with Miroco product and labor warranty for 12 months from the date of its original purchase. If any problems occur, please contact the Miroco Customer Care Centre via the contact information listed in this User Guide.

We can only provide after sales service for products that are sold by Miroco or Miroco authorized retailers and distributors. If you have purchased your unit from a different place, please contact your seller for return and warranty issues.

FCC Compliance

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.