


## Vent Installation Instructions

Applies to all DAS Vent Systems

Add **Top Vent** to the top of the rack with small square opening to the right facing you and the larger round opening for the duct van facing up.

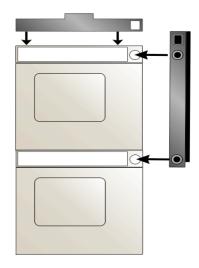

## **Bulkhead Vent**

Attached to bulkheads is a sealing washer and bulkhead nut. Remove the nut from the bulkhead, keep the seal in place. Line up the square hole with the top vent. Line up bulkheads with round holes on the rack. The seal should be between the vent box and the outside of the rack. Secure the bulkheads inside the rack with the bulkhead nuts. Hold the vent up so that all holes line up before fastening. To the left of the Bulkhead Vent is a cord holder to hold / hide the bottom light cord(s) in place. Simply push the cord(s) in while running them to the top.

**Duct Fan** sits on top of **top Vent** in round opening. Place **Duct Fan** with arrow facing up so it pulls the air out of the rack.

We recommend using (1) **Duct Fan** for every **(2) Racks**. A **vent connector** will be provided to connect multiple vents. To cap off the end of a vent, the provided lid can be glued in (permanent) or fastened with a small screw (temporary).

