

 
FIGHT TANK TV




TANK & FILTER MAINTENANCE




SETTING UP YOUR FISH TANK TV

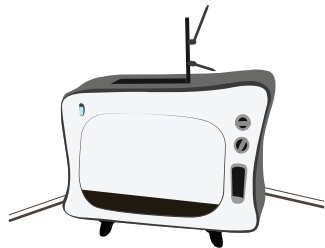


1. Select a suitable location for your Fish Tank TV. It must be placed on a flat surface away from heat and direct sunlight.

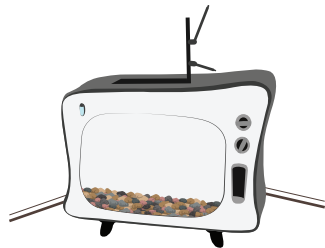

2. Place your gravel and ornaments into the bottom of the tank before filling with water. Always wash your gravel and ornaments before use.

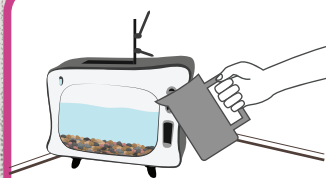

3. Fill the tank to just below the Full Line (this will allow room for the water to rise if ornaments need moving around after water has been added). Once filled with water, limit moving the tank around to avoid any spillages.

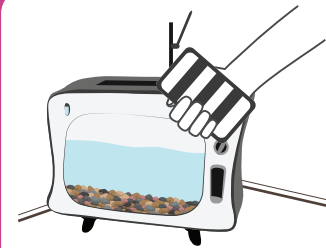


4. Attach the filter as per instructions. Make sure the filter is full of water before switching on.




5. Add in water conditioner as per instructions on the bottle. Allow 24hrs before adding your pet fish or yabby.


REGULAR TANK CARE

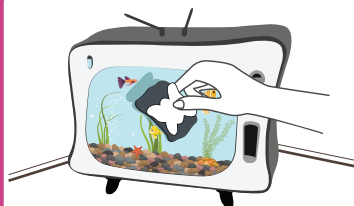

1. Clean you Tv Tank glass with Buzzerfly Screen Cleaner

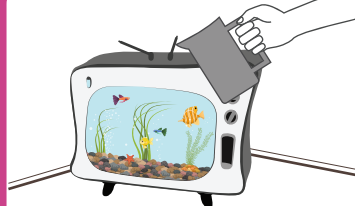


2. Replace 20% of the tank water (approx. 2 litres) every week

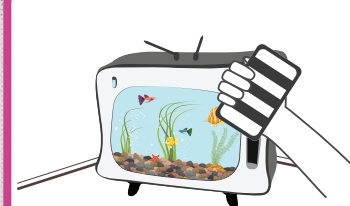

1. Disconnect filter power and remove from tank



2. Rinse sponge separately in container of aquarium water (do not use tap water as this will harm healthy bacteria)

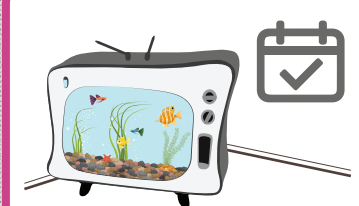

3. Replace sponge and carbon filter every 6 – 8 weeks