









 



Assembly Instruction

If you need extra help with the assembly or think there's a part missing, please visit the support page at 4seasons.co.nz or call us on 03 547 0770.

Part List

Part code	Picture	Name	Qty
A		Back	1
B		Seat	1
C-L		Left Arm	1
C-R		Right Arm	1
D		Foot	1
E		Bolt Cover	9
F		Bolt M6x35	4
G		Bolt M6x20	5
H		Washer	9
I		Wrench	1
J		Seat Cushion	3
K		Back Cushion	3

