






 


Assembly Instruction

If you need extra help with the assembly or think there's a part missing, please visit the support page at 4seasons.co.nz or call us on 03 547 0770.

Part List

Part code	Picture	Name	Qty
A		Back	1
B		Seat	1
C-L		Left Arm	1
C-R		Right Arm	1
D		Bolt Cover	10
E		Wrench	1
F		Washer	10
G		Bolt M6x40	10

