







 

 


Assembly Instruction

Part List:

Part code	Picture	Name	Qty
A		SUPPORT TUBE	1
B		BASE	1
C		SEAT CHAIR	1
D		BOLT M8*20	4
E		SPRING WASHER	4
F		WASHER	4
G		FIX PART	1
H		SPRING	1
I		LINK CHAIN	1
J		CHAIN BUCKLE	1
K		NUT WRENCH	1

If you need extra help with the assembly or think there's a part missing, please visit the support page at 4seasons.co.nz or call us on 03 547 0770.

