 
 
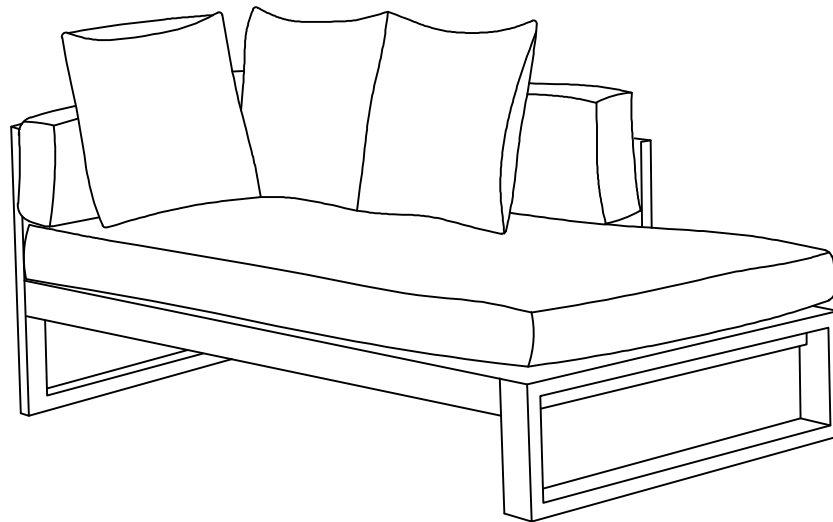 


# Assembly Instruction

If you need extra help with the assembly or think there's a part missing, please visit the support page at [4seasons.co.nz](http://4seasons.co.nz) or call us on 03 547 0770.

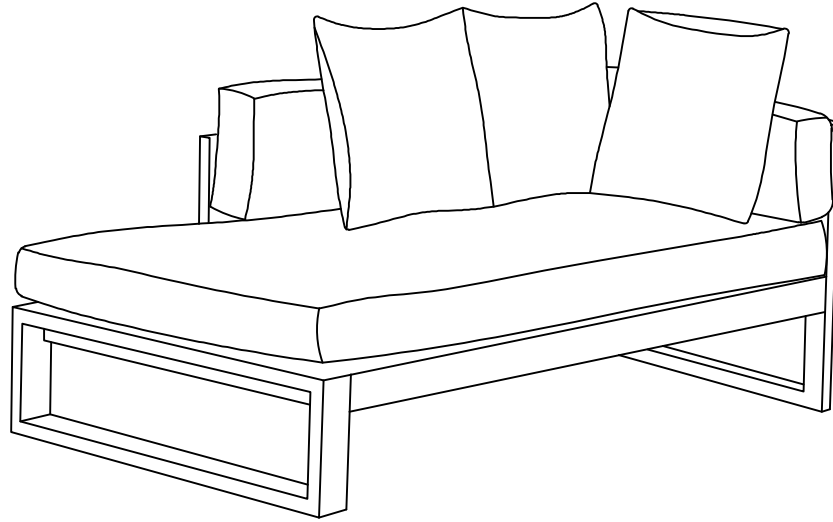


**A**



 
**1pce**

**B**




**1pce**

**C**




**1pce**

**D**



 
**1pce**

**E**



**16pce**


**F**



**M6X45**

**14pce**

 
**G**



**M6X20**

 
**2pce**

**H**




**16pce**

**J**




**1pce**

**K**




**1pce**

 **L**




**1pce**

**M**




**1pce**

 **N**





**3pce**

 **O**





**1pce**
  
# STEP 1

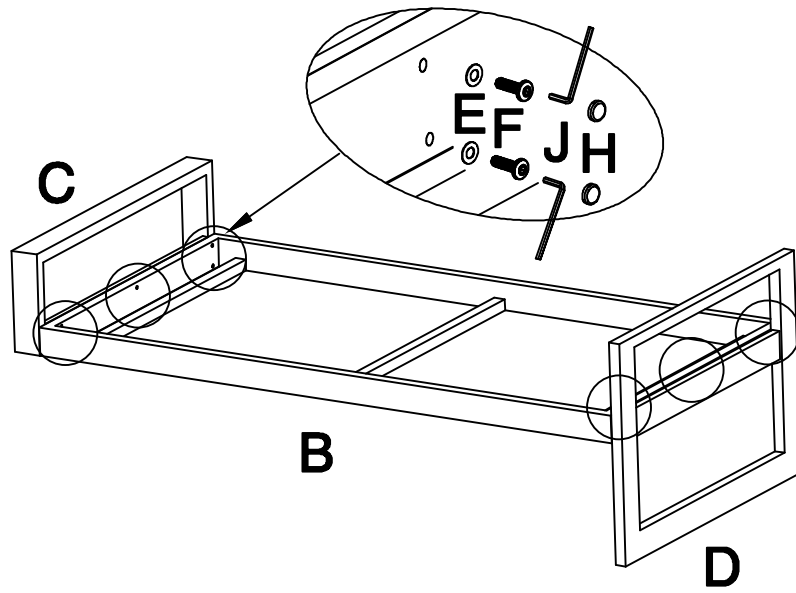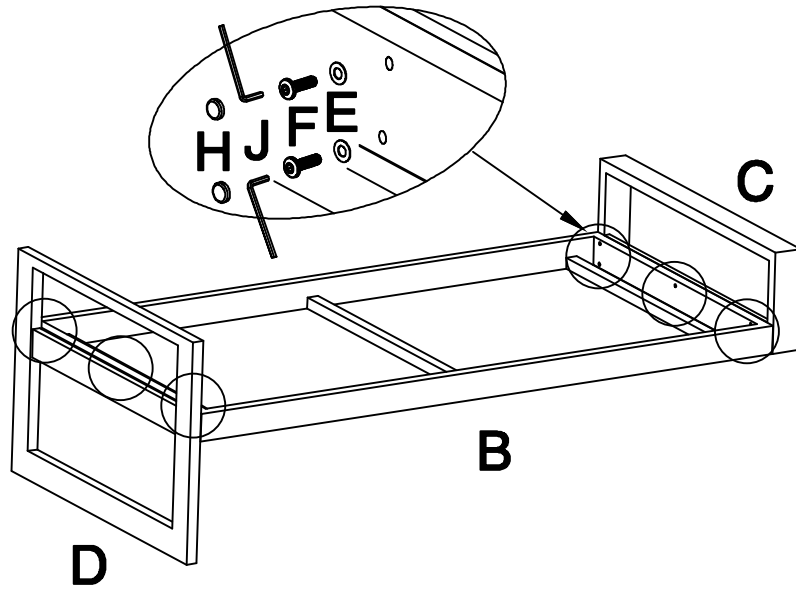

# STEP 2

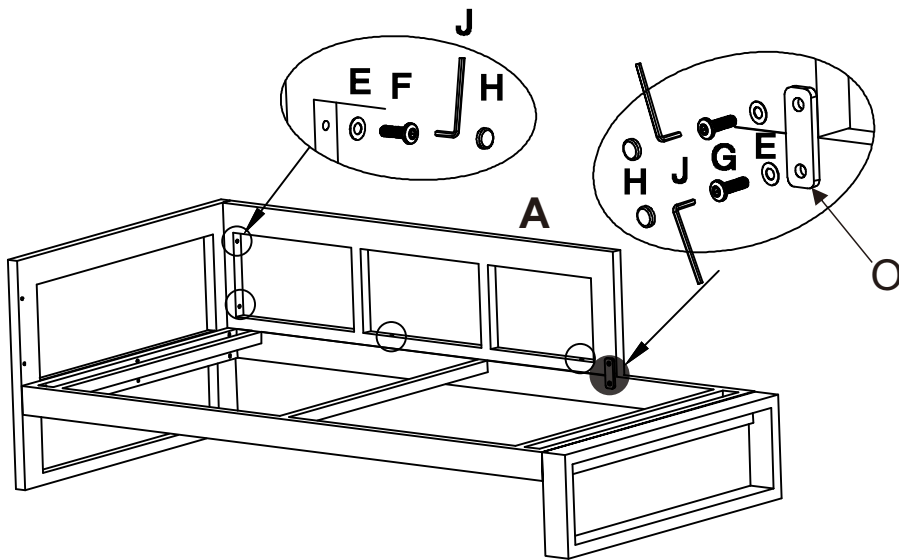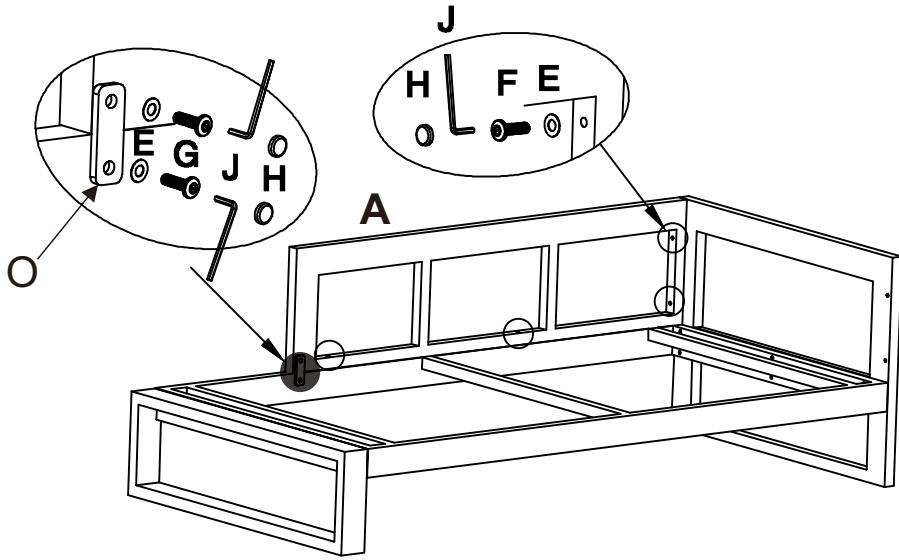  

# STEP 3

