
 






Assembly Instruction

If you need extra help with the assembly or think there's a part missing, please visit the support page at 4seasons.co.nz or call us on 03 547 0770.

Part List

Part code	Picture	Name	Qty
A		Table Rim	1
B		Table Leg	2
C		Washer	6
D		Bolt M6x28	6
E		Bolt Cover	6
F		Wrench	1

