

 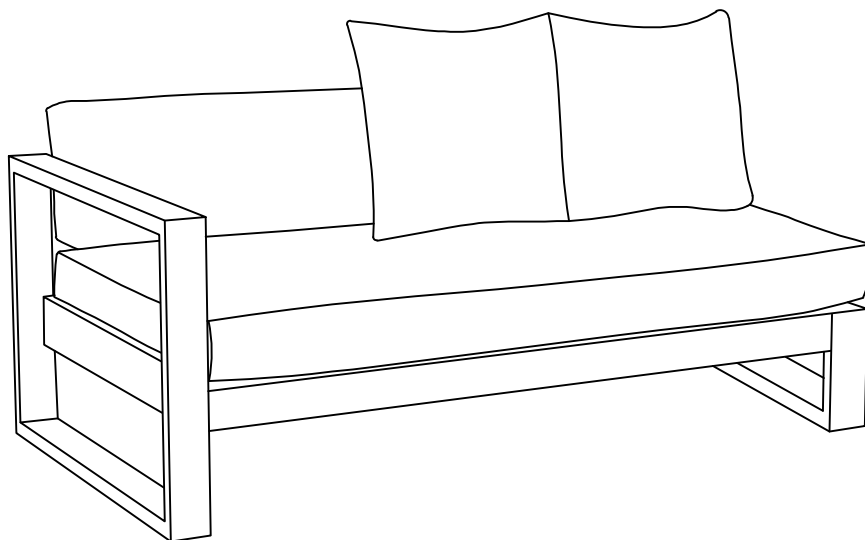


Assembly Instruction

If you need extra help with the assembly or think there's a part missing, please visit the support page at 4seasons.co.nz or call us on 03 547 0770.

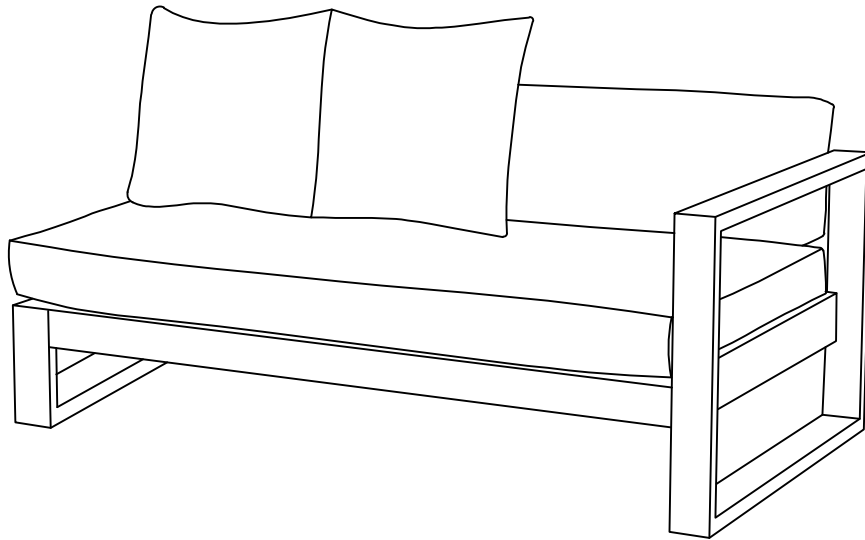

A



1pce

B



1pce

C



1pce

D



 
1pce

E



17pce


F



M6X45

15pce

 G



M6X20

 
2pce

H



17pce

J



1pce

K



1pce

L



1pce

M





2pce

N





1pce

STEP 1

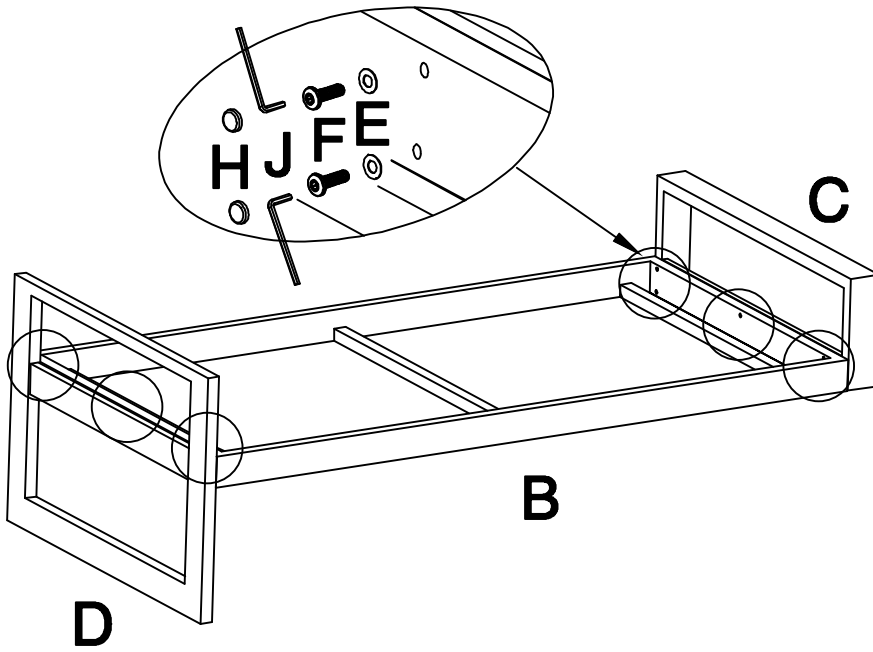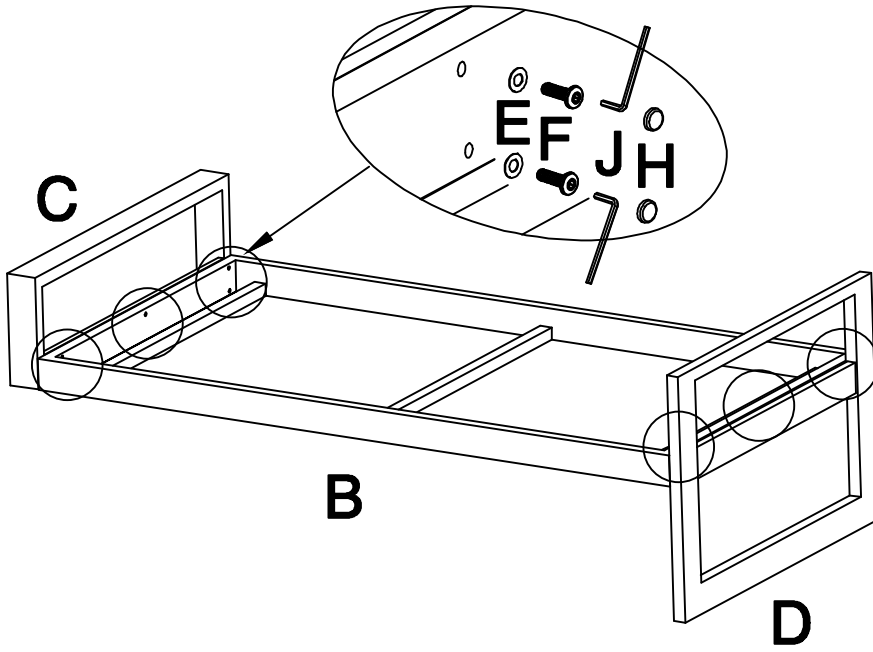

STEP 2

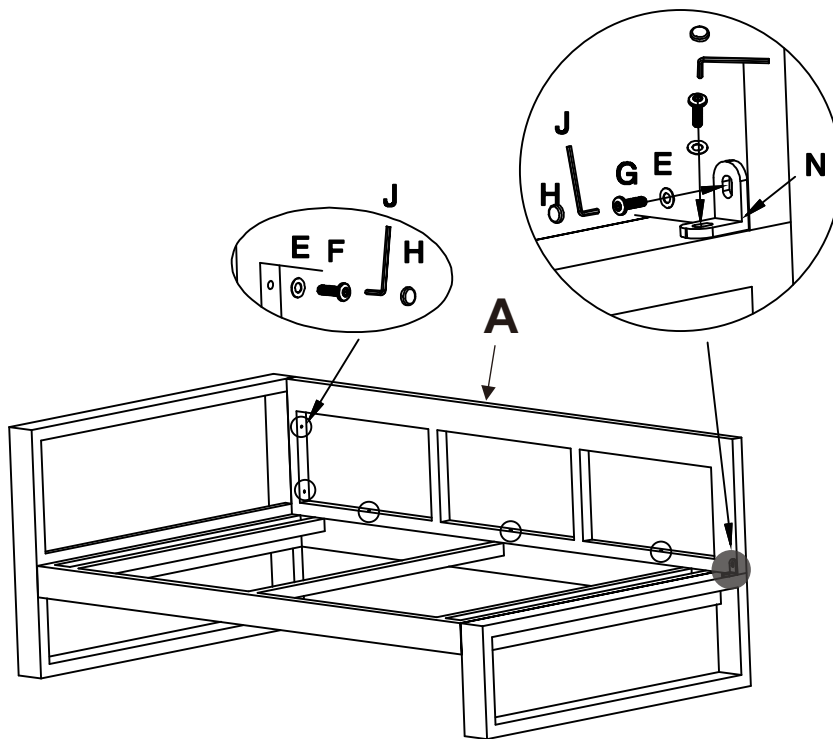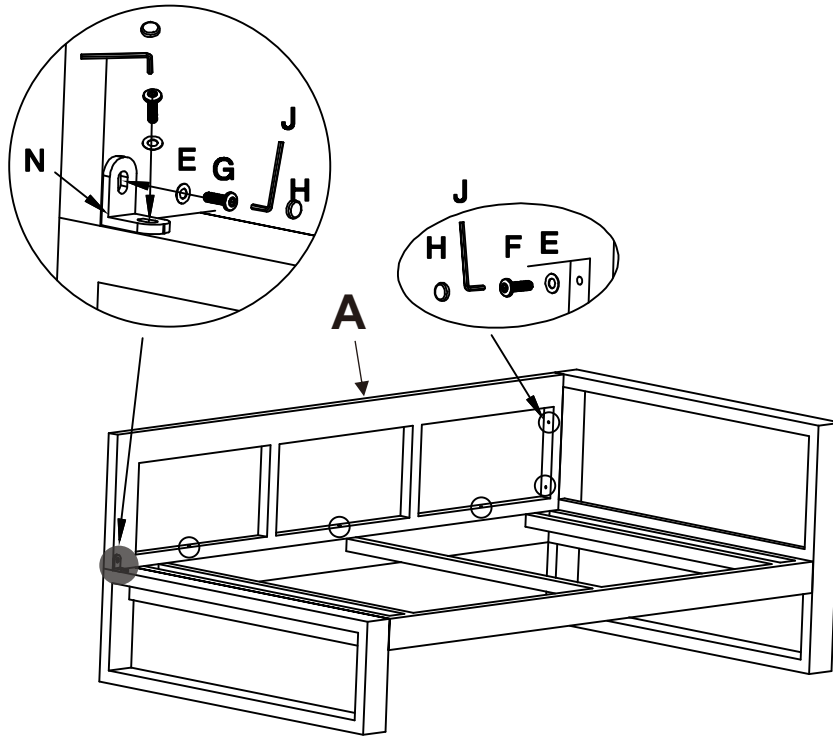

STEP 3

