


## **FELIZ WICKER CHAIR**



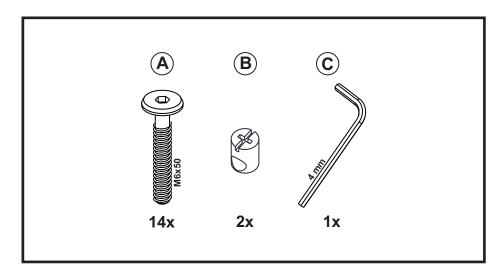

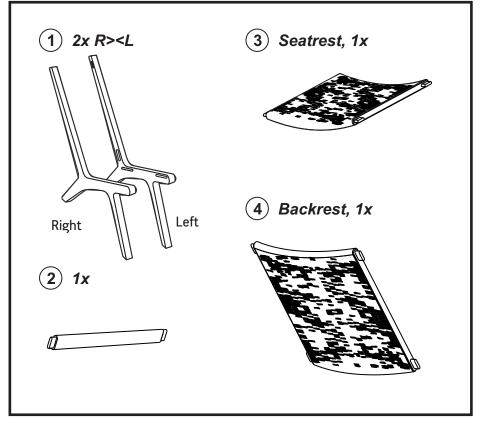

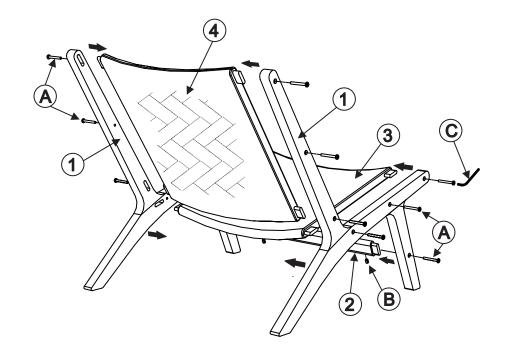



If you need extra help with the assembly or think there's a part missing please visit the support page at 4seasons.co.nz or call us on 03 547 0770