

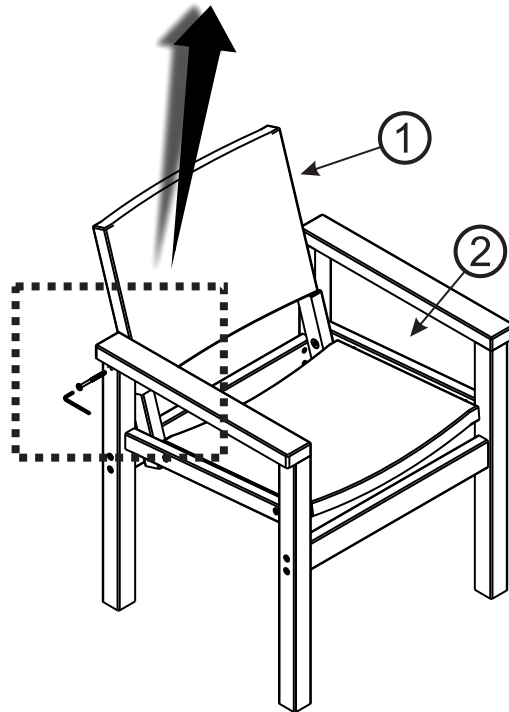


STEP 3

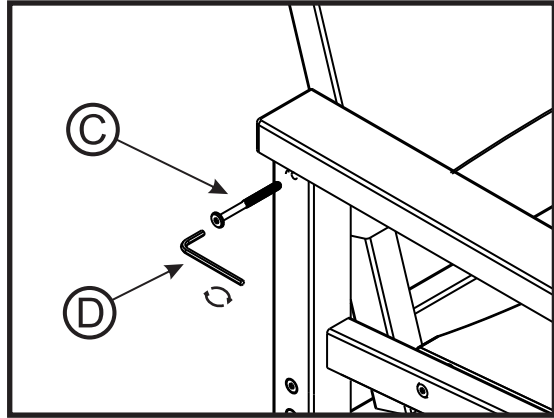



VERANO WICKER DINING CHAIR

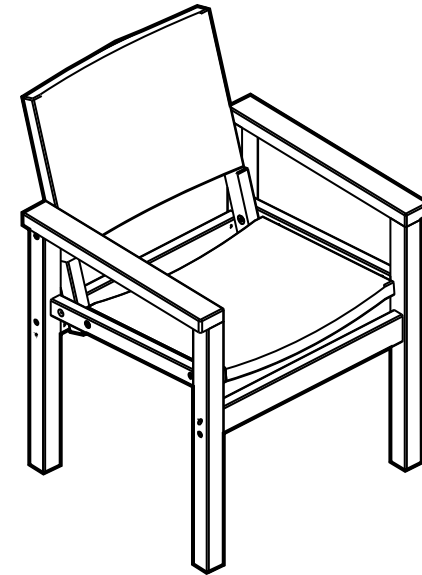


If you need extra help with the assembly or think there's a part missing please visit the support page at 4seasons.co.nz or call us on 03 547 0770



4seasons

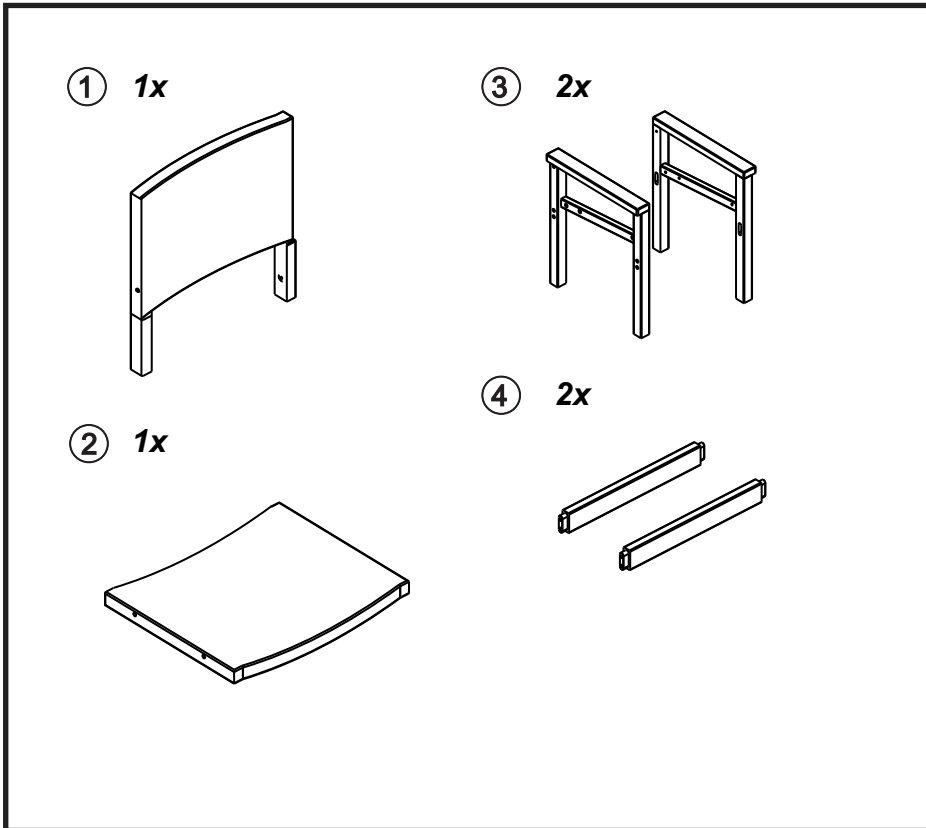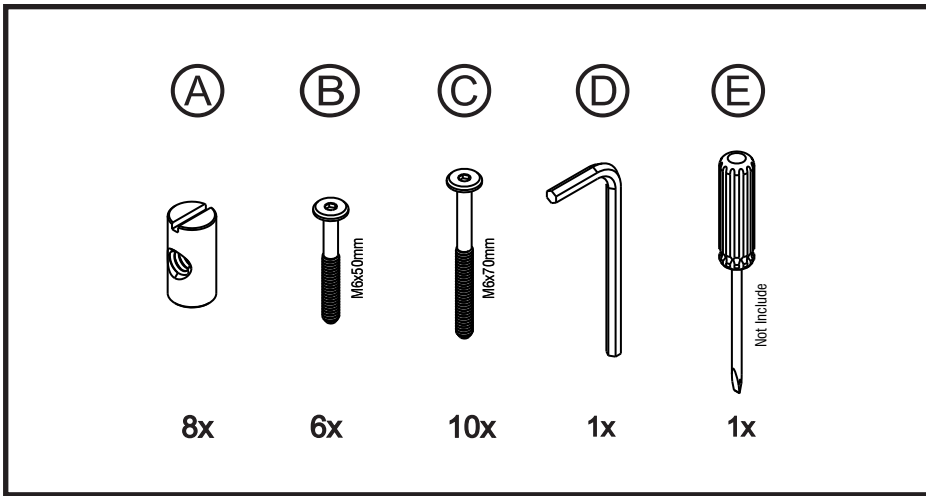

STEP 1

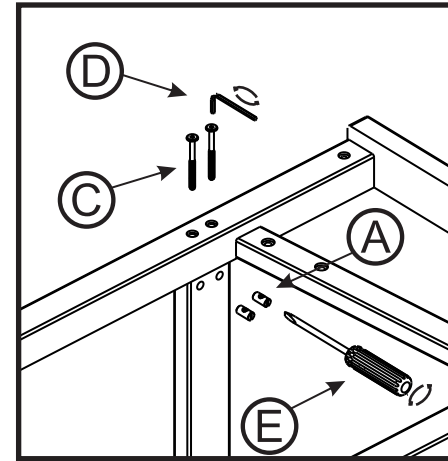

STEP 2

