
essentials_®

RAPID APPLICATOR MAINTENANCE

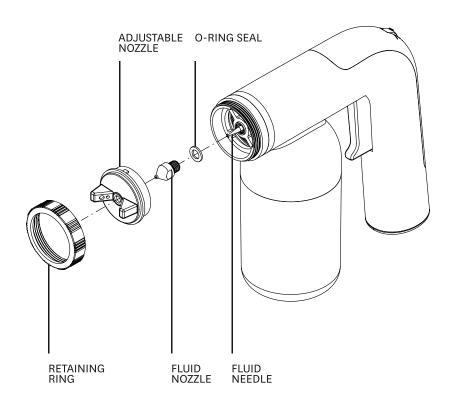

TROUBLESHOOTING - BLOCKED NOZZLE OR CONTINUOUS SPRAY WITHOUT PRESSING THE TRIGGER

- STEP 1 Locate and unscrew retaining ring. To release; turn retaining ring in an anti-clockwise motion.
- STEP 2 Gently pull on the adjustable nozzle to remove.
- STEP 3 Fit an 8mm spanner to the flat edges of the fluid nozzle and turn anti-clockwise to unscrew.
- STEP 5 Ensure you do not misplace the o-ring seal, which is located behind the fluid nozzle.
- **STEP 6 -** Once removed, visually inspect the fluid nozzle for small particles or blockages rinse thoroughly with hot water.
- **STEP 7** Gently wipe the fluid needle to clean and remove any debris. (the fluid needle should not be removed from the applicator at any time)
- STEP 8 Once visually clear of any debris, re-attach fluid nozzle, ensuring the O-ring is in position, then use the spanner (8mm) to gently tighten back into place.
- STEP 9 Replace adjustable nozzle and rotate back into position.
- STEP 10 Repeat previous step, this time with the retaining ring.