# APPARATUS

## **CARE INSTRUCTIONS**

#### **BRASS**

OUR IN-HOUSE BRASS PATINAS ARE UNLACQUERED AND HAND SEALED WITH A LIGHT LAYER OF WAX. DUST GENTLY WITH A DUSTER OR SOFT RAG.

DO NOT USE BRASS CLEANERS AS THEY WILL REMOVE THE PATINA.

#### **GLASS**

FOR CLEAR GLASS, WIPE GENTLY WITH A MILD GLASS CLEANER e.g. WINDEX / COMET FOR FROSTED OR ETCHED GLASS, DUST GENTLY WITH A DUSTER OR SOFT RAG. MILD GLASS CLEANER CAN BE USED CAREFULLY.

DO NOT SCRUB FROSTED GLASS ORBS OR PLACE ANY GLASS COMPONENTS IN THE DISHWASHER.

#### **GOAT SKIN PARCHMENT**

USE A SOFT CLOTH AND CLEAN UP SPILLS IMMEDIATELY.
THE GOATSKIN PARCHMENT IS LACQUERED FOR SOME PROTECTION.

#### **LACQUER**

DUST LIGHTLY - NO PRODUCT - MICROFIBER CLOTHS FOR FINGER PRINTS

#### **LEATHER**

FOR FIXTURES WITH LEATHER, DUST GENTLY WITH A DUSTER OR SOFT RAG.

#### **MARBLE**

GENTLY DUST WITH A SOFT CLOTH.

AVOID LEAVING OIL OR ANY LIQUID ON THE MARBLE FOR LONG PERIODS OF TIME.
DO NOT USE ABRASIVE CLEANSERS THAT CAN SCRATCH OR CORRODE THE MARBLE SURFACE.
IF A MORE THOROUGH CLEANING IS REQUIRED, USE WARM WATER WITH A NEUTRAL CLEANER.

#### **PORCELAIN**

FOR FIXTURES WITH PORCELAIN, USE A SOFT RAG WITH DILUTED CLEAR OR MILD CLEANING SOLUTION, OR DUST GENTLY WITH A DUSTER OR SOFT RAG. MELANINE SPONGE (MUST BE DAMP) CAN BE USED TO REMOVE MARKS.

## SUEDE

GENTLY DUST WITH A DUSTER OR SOFT CLOTH.

DO NOT USE SUEDE OR LEATHER CLEANER AS IT WILL MODIFY THE COLOR AND QUALITY OF THE SKIN.

### WOOD

GENTLY DUST WITH A SOFT CLOTH.

AVOID LEAVING OIL OR ANY LIQUID ON THE WOOD FOR LONG PERIODS OF TIME.

AVOID CHEMICAL CLEANING AGENTS AND ALCOHOL- BASED SANITIZERS THAT CAN DISCOLOR THE WOOD.

IF A MORE THOROUGH CLEANING IS REQUIRED, USE A DILUTED SOLUTION OF HAND OR DISH-WASHING SOAP.