


SCANDIA POWERZONE INSTALLATION INSTRUCTIONS

The Scandia POWERZONE O3 Generator is to be placed outside of the steam room. The Powerzone must be positioned in a location where it can be accessed In order to activate by maintenance and cleaning staff (NOT BY MEMBERS OR GUESTS). Common locations are utility/service rooms or above the modular steam room. The Powerzone is to be activated manually by cleaning or maintenance staff on a daily basis. When installing the tube(s) from the Powerzone should be located towards the top of the room.

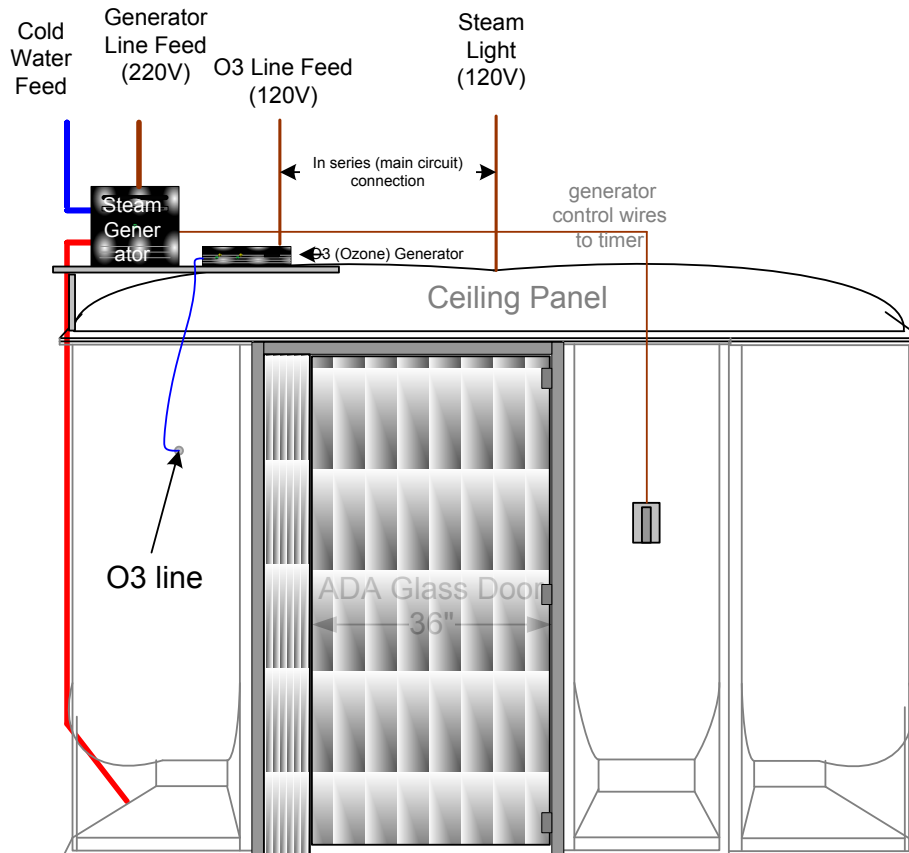

The POWERZONE SHOULD ONLY BE ACTIVATED WHEN THE STEAM/SAUNA ROOM IS UNOCCUPIED. Activate the POWERZONE ONLY during a time when the STEAM/SAUNA room is closed to customers. At least 30 minutes should laps before bathers return to the Steam/Sauna room.

Room Size cu ft	Time setting minutes
200	10
250	15
300	20
350	25
400+	30

To activate the Powerzone generator
turn timer knob to the right. .

