

Instructions for the sequencing mode (4th mode) on the Tach-It Model 6115, 6180 and 6605

- In Semi-auto or Auto mode, you can store the number that you want in A,B,C,D.
- In Auto mode, when you press the M/A button about 2 seconds it changes to Sequence mode.
- In Sequence mode, if you enter all the numbers in A,B,C,D then it works sequentially as A→B → C→ D.
- It is played repeatedly.
- If you just enter the numbers in A,B,C without D, it works as A → B → C → A → B → C...
- If you want to exit, press the M/A button again

- In Sequence mode, if you want to repeat just A→B (A-50 , B-60 , C-0 , D-0)
- In Sequence mode, if you want to repeat just A→B →C (A-50 , B-60 , C-70 , D-0)
- In Sequence mode, if you want to repeat just A→B →C→D (A-50 , B-60 , C-70 , D-80)

