

Brinkworth Air

Operating instructions, care guide and warranty

User instructions

ALL ADJUSTMENTS SHOULD BE MADE WHILST SEATED



Chair Height Adjustment. The overall height of the chair is adjusted by twisting the paddle located below the seat on the front, right-hand side. Lift your weight off the chair allowing it to rise and release the lever at the desired height. To lower, simply twist the lever, put your weight back onto the seat and release the lever at the desired height.



Synchronised Recline Adjustment. The synchronised recline of the seat and back can be unlocked and adjusted by twisting the paddle located below the seat, on the front, left hand side. Please be aware that there is a safety feature that requires you to lean gently into the back of the chair before it will release. The seat and back can be locked into any one of four positions or they can be left unlocked to follow your movements. The tension of the recline can be adjusted by rotating the knob located below the seat on the right hand side.



Back Angle Adjustment. The angle of the back can be independently adjusted by lifting the lever located below the back of the seat on the right hand- side. The back can be locked at the required angle by pushing the lever down.



Back Height Adjustment. The back height is adjusted by lifting the back up a step at a time for correct positioning of the lumbar support. When the back reaches the top of its travel it will then drop back to the start position.



Height And Width Adjustable Arms. The arms have a finger grip located underneath the outer edge of the pad. Lift the grip, set the arm to desired height and release paddle to lock. The distance between the arms can be altered by releasing the locking levers under the seat edge and resetting the arms to desired position.



Seat Depth Adjustment. The depth of the seat can be adjusted by lifting the lever located under the back of the seat on the left hand side, sliding the seat to the desired position and releasing the bar to lock.

Using the chair

ADVICE FOR HEALTHY SITTING



Adjust your seat height and angle so your feet are flat on the floor, your hips slightly higher than your knees and your eyeline is level with the top of the screen. If necessary use a footrest or adjust the height of the screen.



Frequent movement is important, so try small variations to your working position whilst still sitting upright to maintain an S shaped spinal curve.



For better posture, avoid slouching back in your chair or leaning forward over your desk.



Care instructions

Vacuum regularly. Wipe clean with a damp cloth or shampoo using proprietary upholstery shampoo



Fire Retardancy

The fabric used on this product is match resistant and meets the requirements of BS5852 ignition source O and 1 for domestic upholstery. The foam used within this product is Combustion Modified (CMHR) and complies with The Furniture and Furnishings (Fire) (Safety) Regulations.



Warranty

This chair is structurally guaranteed for 5 years whilst in 8 hour per day use. This excludes damage or failure caused by misuse. It also excludes fair wear and tear. This chair is suitable for users up to 150kg.

Get Comfortable

Welcome to your new chair!

To help you be the most comfortable, we've put together this guide for all the operating functions and comfort wizardry this chair can offer. Work through each setting until you are at your optimum comfort and the chair is set up perfectly for you.

We really want you to be comfortable!

Brinkworth Air

Operating Functions



Adjustment options

A photographic guide to Brinkworth Air adjustment functions. These functions enable you to customise your chair to your requirements.



1 Headrest Adjustment

Lift and rotate headrest.



2 Armrest Height Adjustment

Lift the grip upwards to unlock and adjust the height of the armrest.



3 Armrest Width Adjustment

Push the lever forwards to unlock and adjust the width of the armrests.



4 Back Angle Adjustment

Lift the lever to adjust the angle of the back.



5 Chair Height Adjustment

Rotate the paddle to adjust the height of the chair.



6 Chair Recline Tension Adjustment

Rotate the knob to adjust the tension of the synchronised seat and back recline.



7 Back & Seat Recline Lock

Twist the paddle to lock / unlock the synchronized recline of the chair. When unlocking, lean gently in to back of chair to release safety clutch.



8 Seat Depth Adjustment

Lift lever to unlock sliding seat.



9 Back Height Adjustment

Lift the back up a step at a time. At its highest point the back will drop down to the start position.

Chairology help

If you have any queries on how to use your chair, please contact our customer service team who will be more-than-happy to help.

Email - hello@summitathome.co.uk

Telephone - 01225 777844

Customer service - Monday-Thursday
8.30am - 5pm & Friday 8.30am - 3pm

Website - www.summitathome.co.uk

