



USER MANUAL FPS -- SERIS

60 Minutes Fireproof Safe

Email: Support@tigerkingsafe.com
Facebook: [@TIGERKINGSAFES](https://www.facebook.com/TIGERKINGSAFES)
Messenger: [m.me/TIGERKINGSAFES](https://www.m.me/TIGERKINGSAFES)

Version: V202206



01 STRUCTURE

02 INSTALL BATTERIES FIRST OPENING

03 CODE SETTING

04 FINGERPRINT SETTING

05 OPEN THE SAFE SILENCE MODE SETTING CLOSE THE SAFE TROUBLESHOOTING

06 CUSTOMER SUPPORT


⚠ WARNING

Tigerking safe recommends that you do not store loaded guns in this unit.

If you experience any problems or challenges with your safe, please feel free to contact us for quick response. Many issues can be resolved promptly without the product needing to be returned.

Our customer support team is always available to answer any questions and help to resolve all concerns you may have.

Email: Support@tigerkingsafe.com
 Facebook: [@TIGERKINGSAFES](https://www.facebook.com/TIGERKINGSAFES)
 Messenger: [m.me/TIGERKINGSAFES](https://www.m.me/TIGERKINGSAFES)

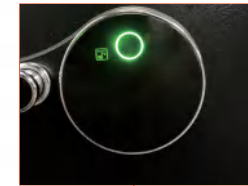


FINGERPRINT SENSOR



KEYPAD




EMERGENCY KEY

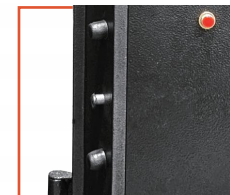

PRY-RESISTANT HINGE BAR



RESET BUTTON

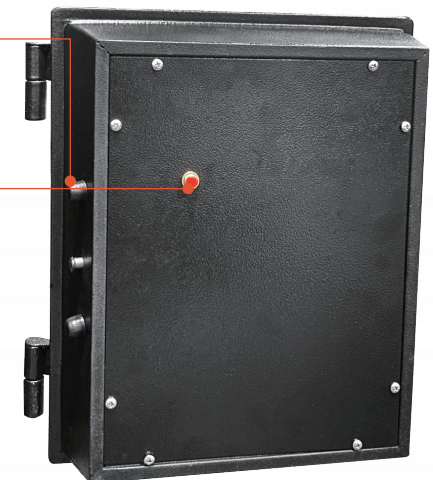

Warning: PLEASE DO NOT KEEP THE EMERGENCY KEY INSIDE THE SAFE.


TIGERKING SAFE PRODUCTS WHICH OFFER FIRE PROTECTION HAVE A PROPRIETARY INSULATION THAT HAS A HIGH MOISTURE CONTENT, WHICH MAY ALSO CAUSE MOISTURE TO ACCUMULATE INSIDE YOUR SAFE. PLEASE OPEN YOUR UNIT ONCE EVERY TWO WEEKS TO AVOID MOISTURE ACCUMULATION.

INSTALL BATTERIES

STEP 1: Remove the dial by rotating counterclockwise;

STEP 2: Locate the battery compartment in the back of the dial;


STEP 3: Insert the new 4X AAA alkaline batteries into the battery box by matching the + & - ends.

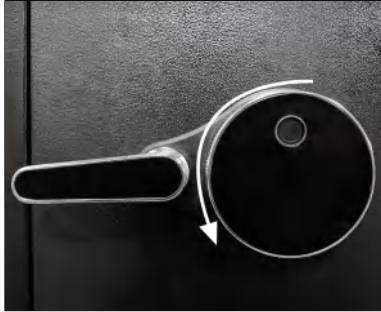

Notice:

- 1.The AAA batteries are not included,please prepare by yourself;
- 2.Please replace all the batteries at the same time;
- 3.Do not use rechargeable batteries or any other type of non-alkaline battery;
- 4.Please replace the battery every three months.

STEP 3: If the code is right,the green light will turn on.Rotate the handle downward to open the safe while light turns on.

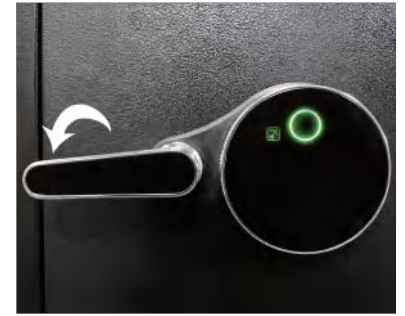

SECOND WAY-Open the safe with emergency key


STEP 1: Find the emergency key in the package(one set with two silver keys);

STEP 2: Rotate the dial counterclockwise to find the keyhole hidden on the back of the dial;

STEP 3: Fully insert the emergency key and turn clockwise;

STEP 4: Rotate the handle downward to open the safe.

Notice: Please do not leave the emergency key inside the safe.

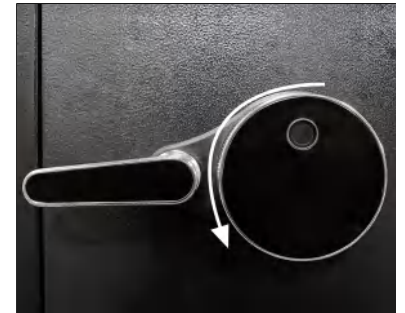

FIRST OPENING

Two Ways To Open The Safe

FIRST WAY-Open the safe twith code

STEP 1: After install the batteries,touch the screen in the middle to wake it up, screen will light up;

STEP 2: Enter the default code 1234 and press # as confirming;



.2.

.3.

CODE SETTING

STEP 1: In the open state, locate the reset button in the back of the safe door;



STEP 2: Press it shortly and quickly, do not hold down the button, the keypad light will turn on with two beeps;

STEP 3: Enter a new code with 3-8 digits while the light turns on, and press # as confirming;

STEP 4: Re-enter the same code and press # again as confirming. If entered successfully, the green light will blink and beep twice; otherwise, the red light will blink with 5 beeps;



STEP 5: Test the code before you close the safe, enter the new code and press #, rotate the handle downward to check if it can get the bolt in.

Notice:

1. Please do not hold down the reset button when you set up the code, if you hold down the button over 3 seconds, the fingerprint will be erased;
2. The default code is 1234, please change the code immediately right after receiving the safe in order to keep security;
3. 10s without any operation, the system will go back to standby mode with light turns off, and you need to retry from STEP1;
4. Only one set code with 3-8 digits code is allowed to be programmed by the system.

FINGERPRINT SETTING

The fingerprint database is empty, no fingerprint could be read initially.



STEP 1: Open the safe with emergency key or programmed code;

STEP 2: Press reset button shortly and quickly, do not hold down the button, the keypad light will turn on with two beeps;

STEP 3: Swipe the first finger across the fingerprint scanner multiple times. The indicator will beep for each valid scan;

STEP 4: When enough valid scans have been recorded (usually 3 scans), the green light will blink with 2 beeps to indicate successful programming; otherwise, the red light will blink with 5 beeps;



STEP 5: Rotate the handle downward to open the safe, you could enter the programmed fingerprint again to verify if it has been programmed successfully.

Notice:

1. Up to 29 fingerprints could be registered;
2. Please do not hold down the reset button when you set up the fingerprint, if you hold down the button over 3 seconds, the fingerprint will be erased, NO FINGERPRINT CAN BE READ;
3. 10s without any operation, the system will go back to standby mode with light turns off, and you need to retry from STEP1.
4. While the keypad light is up, the fingerprint scanner will be deactivated, wait the keypad light turns off, and then you can enter your fingerprint.

OPEN THE SAFE

OPEN WITH CODE

Enter the code (3-8 digits code) and press # as confirming. If the code is correct, the green light will blink and beep twice;if not, the red light will blink with 5 beeps.

OPEN WITH FINGERPRINT

Put the programmed finger on the sensor directly;if correct, the green light will blink and beep twice,turn the handle downward to open the safe;if wrong fingerprint entered,the red light will blink with 5 beeps.

OPEN WITH EMERGENCY KEY

Please refer to the second way--open the safe with emergency key of first opening.

Notice:

- 1.Please do not hold down the reset button when you set up the fingerprint and code, if you hold down the button over 3 seconds, the fingerprint will be erased at the same time.
- 2.When the fingerprint function is on, the keypad function is defective;When the keypad function is on, the fingerprint function is defective.

SILENCE MODE SETTING

Press 3 and then press # as confirming to toggle the keypad tones ON/OFF.

CLOSE THE SAFE

Close the door and pull the handle upward until the handle is horizontal and pull out the key(if using the emergency key.)

TROUBLESHOOTING

DELETE ERROR:Press and hold the reset button to restore the factory settings.Only programmed finger can be erased and will be deleted at the same time.The code cannot be deleted,but set a new one to replace.

UNDERVOLTAGE WARNING: To check the battery power, if the battery power is lower than 4.8V,in the process of opening the door, the green light of the fingerprint flashes and beeps, the batteries should be replaced immediately to ensure the normal use.

CUSTOMER SUPPORT & WARRANTY

Where could I find the instruction video? To see the tutorial video:

1. Go to our Facebook: **@TIGERKINGSAFES**
2. Go to our Youtube channel:
<https://www.youtube.com/channel/UC7II4xZAK3s-cGA3JgmI9VA>
3. contact us to get the videos (24/7):
Messenger: **m.me/TIGERKINGSAFES**
Email : **Support@tigerkingsafe.com**

What should I do to get replacement keys?

The information below is important to get replaced keys:

If with emergency key ----

The numbers on the emergency key.

If without emergency key ----

The label on the right/left side of the safe.

Customer Support /Warranty

The possible problem you might meet:

1. Cargo damaged
2. Missing accessories
3. Unsatisfied with the safe
4. Or any other setting problem

We encourage you to contact us (24/7):

Messenger: **m.me/TIGERKINGSAFES**

Email : **Support@tigerkingsafe.com**

We offer 1 Year Warranty for our client and we shall find solution for you.

For details,please refer to our warranty card or contact us at

“ support@tigerkingsafe.com”.

Thank you for your time to read