

go to our web  
[www.tigerkingsafe-us.com](http://www.tigerkingsafe-us.com)  
 click [chat with us](#) to have live chat

Email: [Support@tigerkingsafe.com](mailto:Support@tigerkingsafe.com)  
 Facebook: @TIGERKINGSAFES  
 Messenger: m.me/TIGERKINGSAFES

Version: V202304



TIGERKING HOME/OFFICE SAFE

## MANUAL

- 01 PACKING LIST
- 02 STRUCTURE
- 03 FIRST OPENING  
KEYPAD BATTERIES
- 04 PROGRAM CODE
- 05 OPEN THE SAFE
- 06 DUAL ALARM PROTECTION SETTING  
SECURITY DISPLAY
- 07 MOUNTING METHOD
- 08 CUSTOMER SERVICE & WARRANTY

### WARNING

Thank you for purchasing TIGERKING E-LK Safe. Knowing that your Safe is of the highest quality and dependability. If you experience any problems or challenges, please feel free to contact us for quick response. Many issues can be resolved promptly without the product needing to be returned. Our Customer Support team is always available at [support@tigerkingsafe.com](mailto:support@tigerkingsafe.com) to answer any questions and help to resolve all concerns you may have.

Email: [Support@tigerkingsafe.com](mailto:Support@tigerkingsafe.com)  
 Facebook: @TIGERKINGSAFES  
 Messenger: m.me/TIGERKINGSAFES

## PACKING LIST

### THE ACCESSORY BOX INCLUDES:




BLACK KEY

MANUAL

WARRANTY

### INSIDE THE SAFE, YOU WILL HAVE:

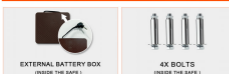

EXTERNAL BATTERY BOX  
(INSIDE THE SAFE)


4X BOLTS  
(INSIDE THE SAFE)

### NOTICE:

1. Please follow the instruction;
2. Keep the emergency key in a safe place, but not in the safe;
3. Replace the batteries when the screen shows "LO-BATTE";
4. Test your combination several times before putting batteries inside;
5. Mount the safe.

.1.

## STRUCTURE

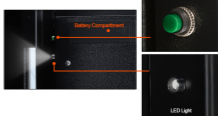

.2.

## FIRST OPENING




- STEP1:** Locate the 2 emergency keys in the same bag as the instruction booklet.  
**STEP2:** Remove the emergency lock cover (Tigerking logo on door) by sliding it to the right.  
**STEP3:** Insert one of your emergency keys into the keyhole. Push key in and rotate the key counter clockwise to the limit. Rotate the dial around the keypad clockwise at the same time as the key is inserted to open the safe.

### NOTICE:

1. When you rotate the dial clockwise you must have the key inserted and turned counter clockwise to the limit, keeping the key inserted until the safe is unlocked and opened.
2. After the safe is opened - Pull out the key, slide the cover back over the keyhole and store the key in a secure location rather than inside the safe;
3. Please close the door when move the safe.

## KEYPAD BATTERIES

- STEP1:** Remove four expansion bolts and put them aside for mounting usage later;  
**STEP2:** Prepare 4 new AA batteries (not included) and insert into the battery box by matching the + & - ends.

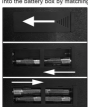

### NOTICE:

- (1) When the batteries are inserted you will hear a short welcome tone and the keypad will light up.
- (2) Use only new batteries of the same brand and power. Do not mix used batteries with fresh batteries.
- (3) The led light will only turn on after you enter the code, it will light on around 45 seconds.

.3.

## PROGRAM CODE

**FIRST WAY:** The safe has two default codes , one is 1234# another one is 123456# , Please make sure that you change both two codes

### Set up first code:

- STEP1: Open the safe (by emergency keys);
- STEP2: With the safe open, press "F" to wake up the system, the screen will display "----";
- STEP3: Press "0" twice and then press reset button in the hinge side, the screen will display "----";
- STEP4: Input a new master code, 1-8 digits and press the "F", it will be confirmed by showing "IN" on the screen and echo again;
- STEP5: Test new code before you close the safe.



### Set up second code:

- STEP1: Open the safe (by emergency keys);
- STEP2: With the safe open, press the reset button in the hinge side, the LCD screen will display "----";
- STEP3: Input a new user code, 1-8 digits and press the "F", it will be confirmed by showing "IN" on the screen and echo again;
- STEP4: Test new code before you close the safe.



.4.

### Second way :

- STEP1:** Enter the factory preset code or known code and press "F", tone will play and the LCD screen will display "OPEN".  
**STEP2:** Quickly press the "" button on the keypad when the LCD is lighting on, the screen will display "-----";  
**STEP3:** Input a new 1-8 digits code and then press "F";  
**STEP4:** The new code will be confirmed by showing "in" and echo again;  
**STEP5:** Test new code before you close the safe.



### NEED TO NOTICE HERE

- 1.8 seconds without any operation, it will go back to standby mode, you need to retry from the "step 1"  
 1. Change both of the factory preset codes immediately after receiving the safe. Store this Manual and Emergency keys in a secure location BUT NOT inside the safe.

## OPEN THE SAFE

- Open the safe with keys : refer to "first opening"  
 Open the safe with code :  
 Press # to wake up the LCD screen, enter your pin code and press # as confirm, If the code is correct, the screen will show "OPEN"  
 Turn the dial clockwise will the screen light on to open the safe

### Close the safe

Close the door and turn the dial counterclockwise to lock the safe

### External Battery Box

This is for emergency use only .  
 If you can not find the keys and the inner battery is low, You can use this external battery box to supply power to the keypad outside .  
 By installing 4XAA batteries into the box and then plug it to the keypad, you can open the safe with your pin code. The 4XAA batteries are not include, need prepared by yourself.



.5.

## DUAL ALARM PROTECTION SETTING

### Dual Alarm System

1st: Three continuously wrong code entries will activate the warning beep for 1 minute.

The beeps can be stopped by:

- 1) Input the right codes and confirmed by press "#";
- 2) Power-out by removing the battery.

After the alarm stops, the warning system is still working.

2nd: Vibrate Alarm: Activates only after manual setting.

- STEP1:** Under standby status, press "0" once;  
**STEP2:** The screen will display "Alert ON". The safe will alarm once be punched or shocked.

The alarm can be stopped by:

- 1) Input the right codes and confirmed by pressing "#";
- 2) Power-out by removing the battery.

### IMPORTANT

- 1) Once the vibrate alarm stops, you need to set again for next time;
- 2) 8 seconds without any operation, the keypad will go back to standby mode, you need to re-operate from the "STEP 1".

## SECURITY DISPLAY

Using this feature means that your code will not be displayed on screen during the input process.

- 1) Press " # " to wake up the system.
- 2) Press " \* " to start up the hidden function. Any code you input will be shown " □ " to ensure your code safe.
- 3) You can press " \* " twice to cancel this function




.6.

## MOUNTING METHOD

- Fix the safe in the place which is not easy to move.  
 • Drill holes for expansion bolts (or clamping screws) at the right place;  
 • Turn the expansion bolts counterclockwise to separate;  
 • Use the expansion bolts (or clamping screws) to secure the case to the wall or the floor;  
 • Make sure the case is mounted in place as required and then tighten all screws.

### NOTICE:

1. For concrete walls, expansion bolts are recommended; for wooden walls, clamping screws are recommended;
2. The clamping screw is not included, you need prepare by yourself.

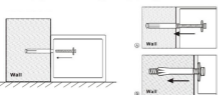

.7.

## CUSTOMER SERVICE & WARRANTY

### Where could I find the instruction video? To see the tutorial video:

1. Go to our Facebook : @TIGERKINGSAFES
2. Go to our Youtube channel : <https://www.youtube.com/channel/UC7I14xZAK3s-cGA3JgmI9VA>
3. contact us to get the videos (24/7):  
 Messenger: m.me/TIGERKINGSAFES  
 Email : [Support@tigerkingsafe.com](mailto:Support@tigerkingsafe.com)

go to our web  
[www.tigerkingsafe-us.com](http://www.tigerkingsafe-us.com)  
 click [chat with us](#) to have live chat

### What should I do if losing the keys?

- The information below is important to get replaced keys:  
 If with Master key —  
 The numbers on the master key or the label on the right/left side of the safe  
 If with emergency key —  
 The numbers on the emergency key or the number in the emergency key hole

### Customer Support /Warranty

The possible problem you might meet:

1. Cargo damaged
2. Missing accessories
3. Unassembled with the safe
4. Or any other setting problem

We encourage you to contact us (24/7):  
 Messenger: m.me/TIGERKINGSAFES  
 Email : [Support@tigerkingsafe.com](mailto:Support@tigerkingsafe.com)

We offer 1 Year Warranty for our client and we shall find solution for you.  
 For details, please refer to our warranty card or contact us at [support@tigerkingsafe.com](mailto:support@tigerkingsafe.com).

Thank you for your time to read

.8.