

Thank you for purchasing this mud kitchen product.

PLEASE READ THESE INSTRUCTIONS CAREFULLY.

**PRE ASSEMBLY:**

-Check all parts are present before you start to assemble the product. Place small part on a tray or similar to ensure they are not lost. The manufacturing process can very occasionally result in sharp edges/waste material so please take care when assembling this product.

-If any parts are missing do not use the product until the replacement parts are fitted.

-Ensure your product is sited on level ground. Failure to do this may put additional stress on connections and joints and in time could cause them to fail.

**SAFETY ADVICE:**

-This product contains small parts and is not suitable for children under 36 months. Small parts are a choking hazard.

-Only for domestic outdoor use.

-Toy must be assembled by an adult before use exactly in accordance with the instructions.

-Adult supervision required.

-Remove all packaging before giving to your children.

-Please note this is a natural product and as such should be checked for any rough surfaces before use, if required these should be lightly sanded in order to prevent injury.

**CAUTION! This product includes timber and/or fabric. PLEASE KEEP AWAY FROM FIRE.**

**MAINTENANCE:**

-All parts should be checked at least once a month.

-Check all screws for tightness and tighten when required.

-The ground on which the product is set up should be cleared regularly. All objects such as stones or anything else could cause injury in the case of fall should be removed.

-Avoid locating this product in full sun for prolonged periods. If the product is stored outside in direct sunlight we recommend that it is covered to ensure longevity of use.

-Modifications to the original activity toy should only be carried out under instructions from the manufacturer.

-As timber is a natural product, it will deteriorate in the weather over time. For maximum longevity of your timber, it is highly recommended to apply an initial 3 coats of a timber protectant such as paint, lacquer or an exterior grade

oil before first use of the play set.

## **TIMBER CARE:**

Minor twisting, warping, cracking and any other natural occurring property of wood will occur. PLEASE NOTE: These occurrences are cosmetic and will not affect the strength or integrity of the product, if you have any concerns or queries please contact the after sales service for further assistance.

All outdoor wooden products require routine inspection and regular maintenance. After installation, a follow-up inspection should take place after one week and twice a month thereafter for the remaining life of your play products.

Maintenance should be performed at any time it is deemed necessary. As a general rule, major maintenance (wood refinishing) should be performed at six month intervals from the date of installation.

Major wooden parts: Inspect for splintering and structure defects at regular intervals. For minor splinters or chipping, lightly sanding and refinish with an exterior water repellent stain can assist.

**IMPORTANT:** If living in an area prone to termites, please ensure any timber is treated with termite protection.

We hope you have a safe and enjoyable time using this product.

## **TOOLS REQUIRED**



Electrical Screwdriver or Phillips Screwdriver

**NOT INCLUDED**