




Liberty House Toys Children's Dressing Rail Item Code: TF5750

AGE 3+
ADULT ASSEMBLY REQUIRED

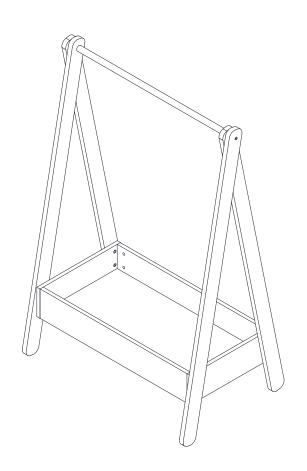

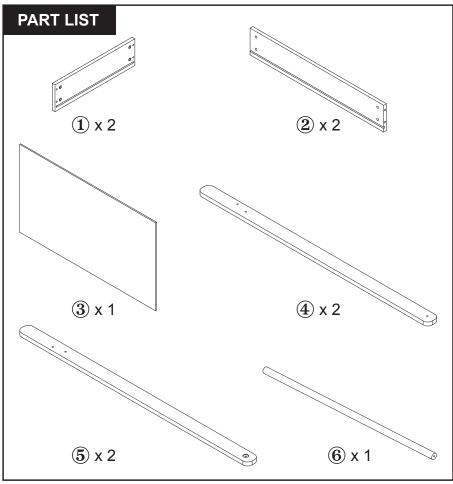

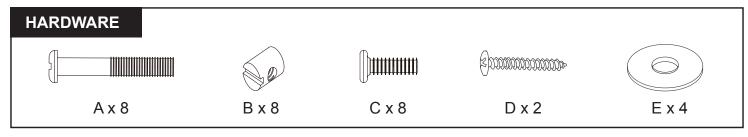

CARE/CLEANING INSTRUCTIONS

- Wipe furniture with a soft dry cloth, do not use paper as this may be abrasive to the finish.
- The unit should be cleaned with a damp cloth and dried with a dry cloth.
- DO NOT use bleach or chemical solutions to clean the product.
- DO NOT expose to sunlight or other heat sources for a prolonged period.
- DO NOT store or leave outside.
- Periodically check the tightening of legs and screws.



TOOLS REQUIRED:


- 1. Phillips Head Screw Driver (not supplied)
- 2. Flat Head Screw Driver (not supplied)






Step 1




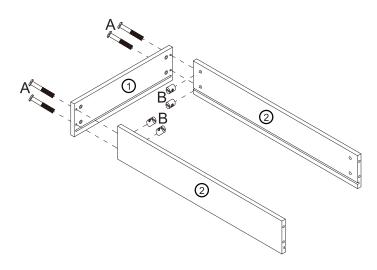


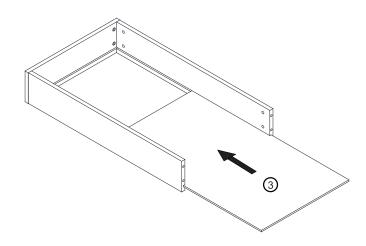



Step 3

Step 4

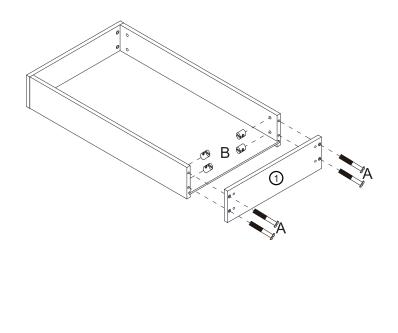


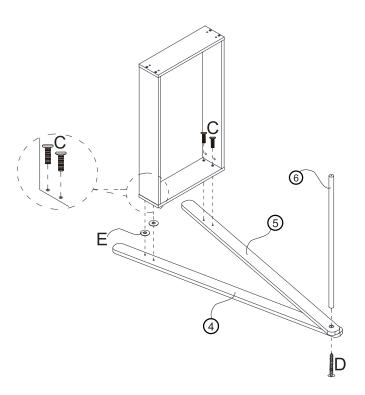

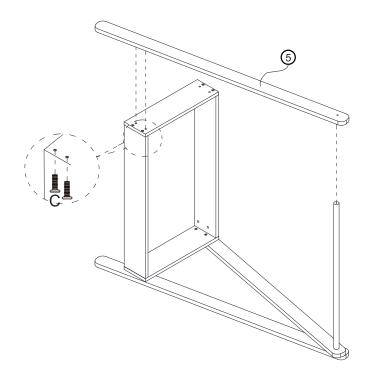

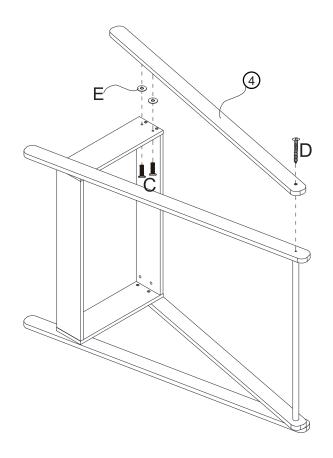

COMPLETE

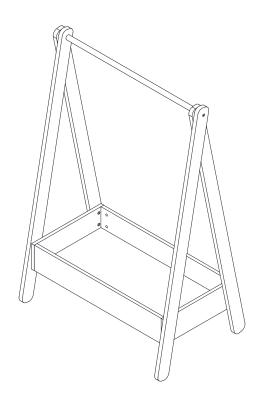

Liberty House Toys 20-24 Gibraltar Row King Edward Industrial Estate Liverpool L3 7HJ United Kingdom







⚠ WARNING:

CHOKING HAZARD – Small parts. Not for children under 3 years.