



**ABYSS  
BATTERY**

POWER YOUR PURSUIT.

GROUP SIZE - 4U

**48V 100Ah**



DATA SHEET

[WWW.ABYSSBATTERY.COM](http://WWW.ABYSSBATTERY.COM)





# AB-48V 100AH-4U

48V 100Ah LiFePO4 Battery

AB-48V100-4U

ELECTRICAL SPECIFICATIONS

Nominal Voltage	51.2V
Nominal Capacity	100Ah
Parallel Connection	Max. 8units
Serial Connection	No
BMS	16S75A
Circuit Protection	Over charge, Over discharge, Over current, Over temp, Short, Balance
Communication	2×Rs485 and 1×CAN; LCD
Cycle Life	3000times Cycles @100%DOD and 6000times @80% DOD
Self Discharge	Less than 3% per month
Charge Efficiency	100% @0.2C
Discharge Efficiency	98-100% @1C

CHARGE SPECIFICATIONS

Charge Voltage	57.6±0.8V
Standard Current	20A
Fast Current	50A

DISCHARGE SPECIFICATIONS

Standard Current	20A
Max. Con. Current	65A
Peak Current	150A(2s)
Cut-off Voltage	41.6V

MECHANICAL SPECIFICATIONS

Dimensions (mm)	502×485×173.5mm (4U standart size)
Approx Weight(KG)	50
Terminal Type	4 × M6
Case Color/material	Black Metal case
IP Rating	IP56
Cell Type	Cylindrical cell
Cell holder	Yes

TEMPERATURE SPECIFICATIONS

Charge Temp	0°C to 55°C	(32°F to 131°F)
Discharge Temp	-20°C to 60°C	(-4°F to 140°F)
Storage Temp	-20°C to 45°C	(-4°F to 113°F)

## BRIEF INTRODUCTION:

ISO9001 certified 12V to 48V LiFePO4 Batteries used for RV, Marine, Energy storage, Golf carts applications. 2) 48V LiFePO4 batteries for Energy storage system.

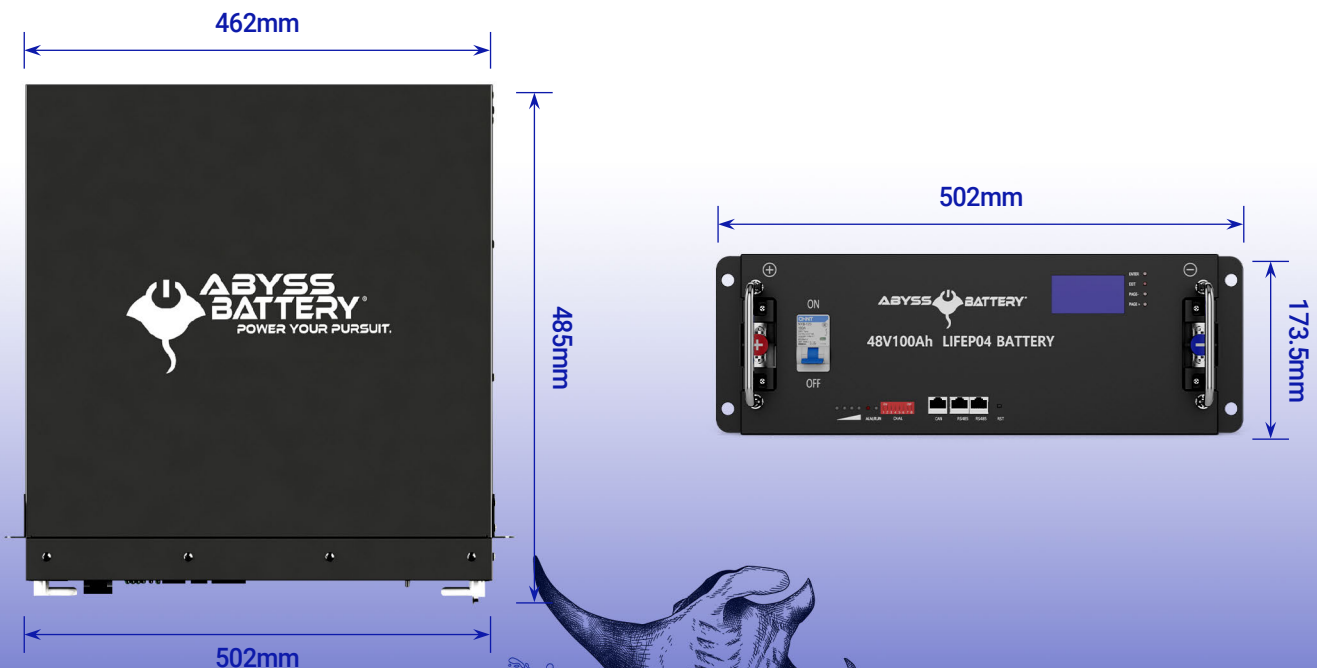
### KEY BENEFITS:

- Higher qualified cylindrical cell:**  
 UL1642, IEC62619, IEC62133 listed with Cycle life more than 3000times and excellent consistency.
- UL1973 certificated battery pack:**  
 UL1973 certification means higher quality and safety, easier to win more markets and more challenging projects.
- Easy to install without extral cost:**  
 The modules can be stacked one by one to get morecapacity easily with our simple side plate design, and also can be compatible with most of inverter brands.
- More stable and firm internal structure:**  
 Cell holders can well protect and separate the cells to avoid any circuit short risk caused by vibration or impact or over current, and improve the heat dissipation.







### KEY POINTS FOR QUALITY CONTROL:

- Cell match:**  
 More strict cell matching standard, the difference of Internal resistance is 1mn and voltage is 5mV.
- Automatic cells welding:**  
 Cells are assembled by Automatic welding equipments to ensure the quality reliability and consistency.
- 100% Cycle test:**  
 All battery packs are 100% cycle tested (Fully Discharged → Fully Charged → Fully Discharged → 60% Charged) before package and all test reports are stored.


### DIMENSIONS:



# CHARACTERISTICS CURVE:

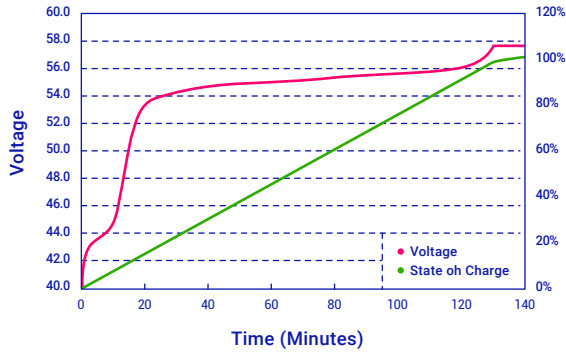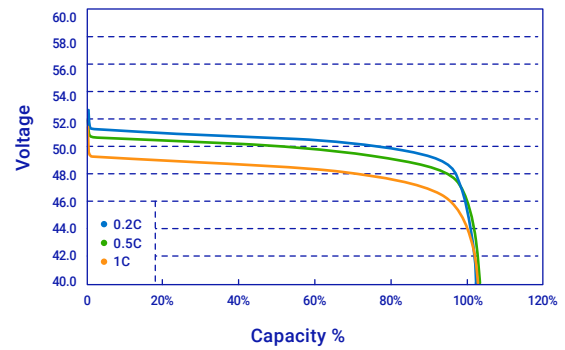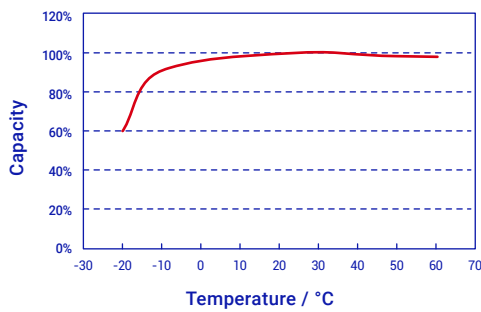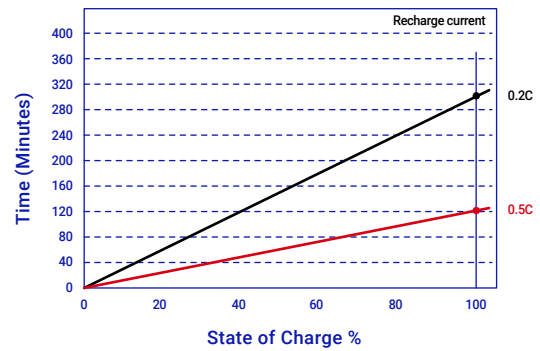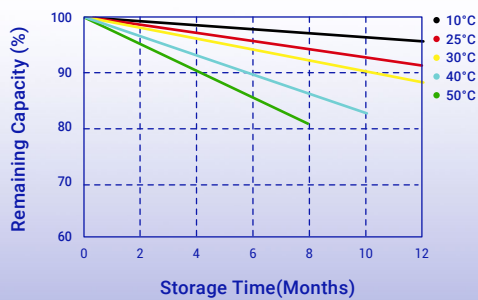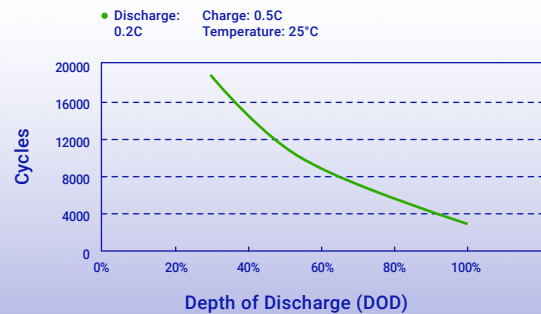**CHARGING CHARACTERISTICS (0.5C @25°C)**

**DISHARGING CHARACTERISTICS (0.2C, 0.5C, 1C @25°C)**

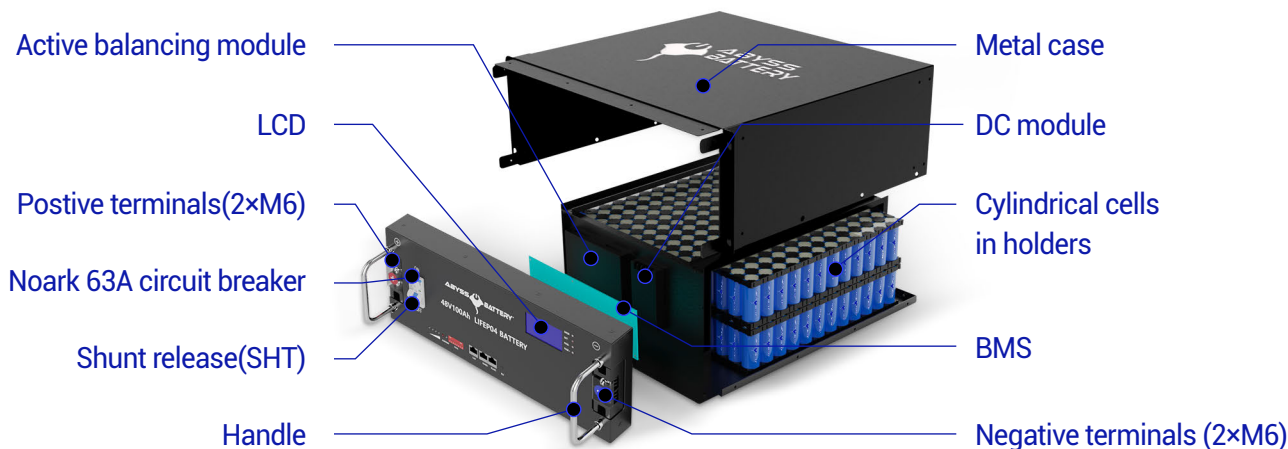**DIFFERENT TEMPERATURE CAPACITY CURVE**

**TYPICAL CHARGE TIME CURVE**

**DIFFERENT TEMPERATURE SELF DISCHARGE CURVE**

**DIFFERENT DOD DISCHARGE CYCLE LIFE CURVE**


## PRODUCT ADVANTAGES:



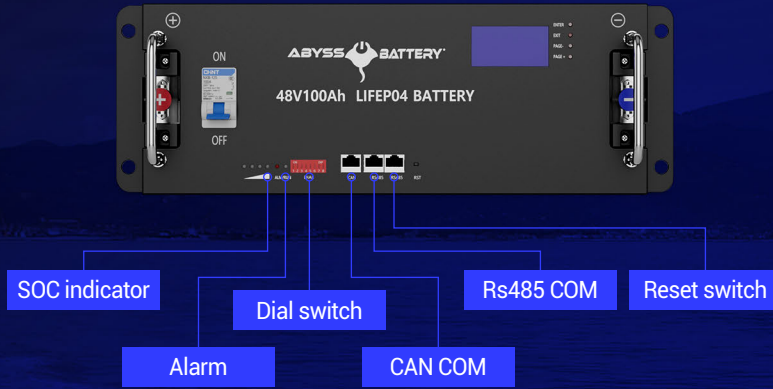
	Adopt cylindrical cell, no swelling, no thermal runaway, no fire risk.		Adaptable to most inverter brands for greater applicability to end customers.
	Equip with active balancing module, which can make sure the battery pack always be in balance state and further ensure long cycle time.		Keep high performance at high temperture, cycle 2800 times at 55°C, 100%DOD, no worries in summer or hot area.
	The UL489 certificated circuit breaker with SHT, form a strong double-protection to battery.		Cell holder, ensure stable internal structure and improve heat dissipation.
	All key components are UL approved, such as cell, part of BMS, terminal, cable, circuit breaker, which bring better quality and higher safety to battery.		Easy to install and move for end customers.

AB-48V 100-4U module could be compatible with the inverters as below:

INVERT BRAND	COMMUNICATION PROTOCOL	COMMUNICATION TYPE	COMMUNICATION BAUD RATE	PROTOCOL VERSION
PYLONTECH	CAN Bus protocol PYLON	CAN	500K	V1.3
固德威 GOODWE	Goodwe communication protocol	CAN	500K	V1.5
首航 SOFAR	CAN communication protocol	CAN	500K	V1.0
SOFAR 首航新能源	Sofar Inverter BMS-CAN protocol	CAN	500K	V1.0
Growatt	Growatt BMS CAN Bus protocol low voltage	CAN	500K	V1.05
Growatt	Growatt BMS communication protocol of growatt low voltage battery	CAN	500K	V1.01
SMA	SMA BMZ Protocol en	CAN	500K	
victron energy	Can bus bms protocol	CAN	500K	V1.0
LUXPOWER <sup>TECH</sup>	Luxpowertek Battery CAN Protocol	CAN	500K	V1.0
STUDER	Technical specification Studer BMS Protocol	CAN	500K	V1.03
TBB POWER	TBB Lithium battery BMS-CAN communication protocol V1.02	CAN	500K	V1.02
Deye 德业	Enjie CAN protocol V1.0	CAN	500K	V1.0
MUST 美世乐	1_PV1800F-CAN communication Protocol1.04.04	CAN	100K	Apply to PV1800 inverter
PYLONTECH	RS485 protocol pylon low voltage	485	9600	V3.5
Voltronic Power	Voltronic Inverter and BMS 485 communication protocol	485	9600	V1.0
Sine	PACE BMS Modbus Protocol for RS485	485	9600	V1.3
Growatt	SPF BMS RS485 protocol	485	9600	V2.01

# OPERATING INSTRUCTION:


- Step 1: Learn Interface Instruction:



- Step 2: Installation:



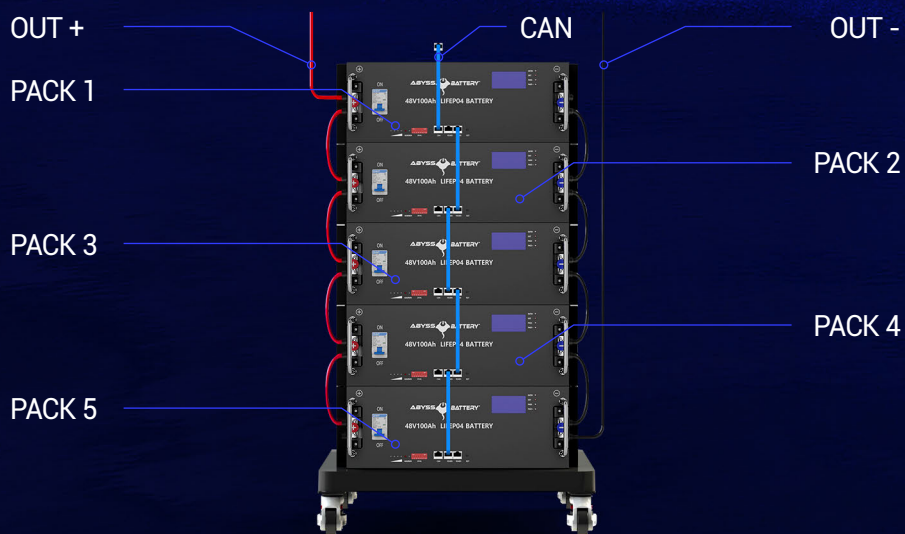- Step 3: Connection:



# PRODUCT ADVANTAGES:

- **Step 4:** Dialing address

Single machine address setting : 0000

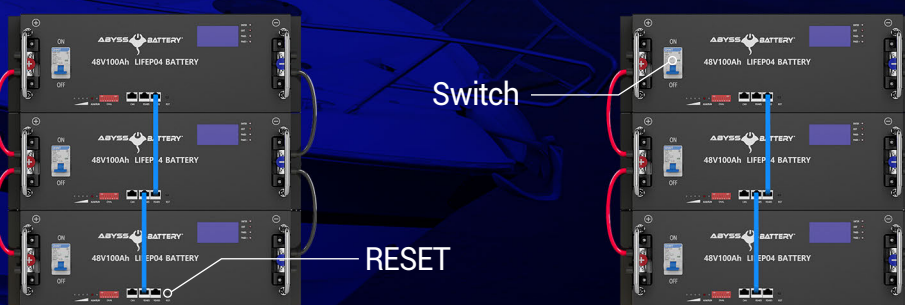
Address setting for parallel operation: the definition of dial switch is shown in the table below.

HOST SETTINGS	PARALLEL NO.	DIPSWITCH POSITION				DESCRIPTION
		#1	#2	#3	#4	
	1	OFF	OFF	OFF	OFF	Single battery
	2	ON	OFF	OFF	ON	2 Parallels
	3	OFF	ON	OFF	ON	3 Parallels
	4	ON	ON	OFF	ON	4 Parallels
	5	OFF	OFF	ON	ON	5 Parallels
	6	ON	OFF	ON	ON	6 Parallels
	7	OFF	ON	ON	ON	7 Parallels
	8	ON	ON	ON	ON	8 Parallels

SLAVE SETTINGS	ADDRESS	DIPSWITCH POSITION				DESCRIPTION
		#1	#2	#3	#4	
	1	ON	OFF	OFF	OFF	Pack1
	2	OFF	ON	OFF	OFF	Pack2
	3	ON	ON	OFF	OFF	Pack3
	4	OFF	OFF	ON	OFF	Pack4
	5	ON	OFF	ON	OFF	Pack5
	6	OFF	ON	ON	OFF	Pack6
	7	ON	ON	ON	OFF	Pack7

- **Step 5:** Press the “RESET” button for over 3s separately, for wake up

- **Step 6:** Turn on the switch separately



- **With a load/inverter, the energy storage system start to work!**

**NOTED:**

**Sleep mode:**

a: The system will immediately go to Standby mode without load or charger, and RUN LED will flash (1s ON, 1s OFF). After 48h later, the system will automatically go into to sleep mode. All LED's in the panel will turn off. With the standby state, the system can be forced into sleep mode through pressing the reset key for 3s.

**Wake up:**

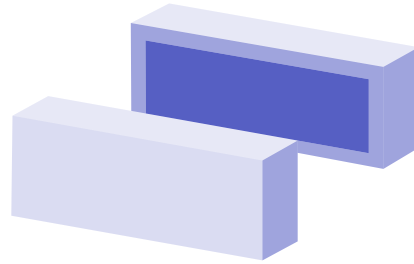
The following operations can wake up the system from sleep mode:

- a. Automatically wake up when connecting a charger;
- b. Press on the “reset” key for 3s;

## PACKAGE:

20' CONTAINER=10PALLETS=240CARTONS=240UNITS  
40' CONTAINER=20PALLETS=480CARTONS=480UNITS

INTERNAL PACKAGE  
FORMING PEARL FOAM




WEIGHT: 51KG/CARTON  
SIZE(LXWXH): 570X512X240MM



1 CARTON=1 UNIT



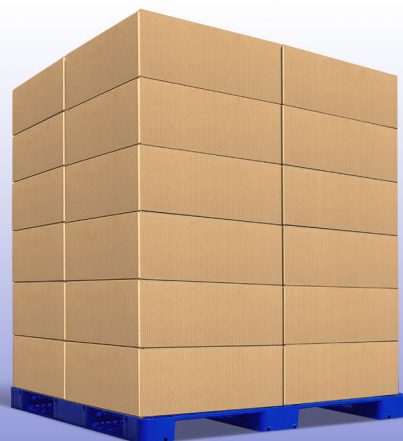WEIGHT: 1239KG/PALLET  
SIZE(LXWXH)=1.2X1X1.6M \* 1.9CBM



1 PALLET= 24 CARTONS





Abyss Battery®

Tel: 1+(855)-719-1727

E-mail: [Info@abyssbattery.com](mailto:Info@abyssbattery.com)

Address: 1920 W Bay Dr, Largo, FL 33770



[WWW.ABYSSBATTERY.COM](http://WWW.ABYSSBATTERY.COM)