Surprise Popping Cake Stand


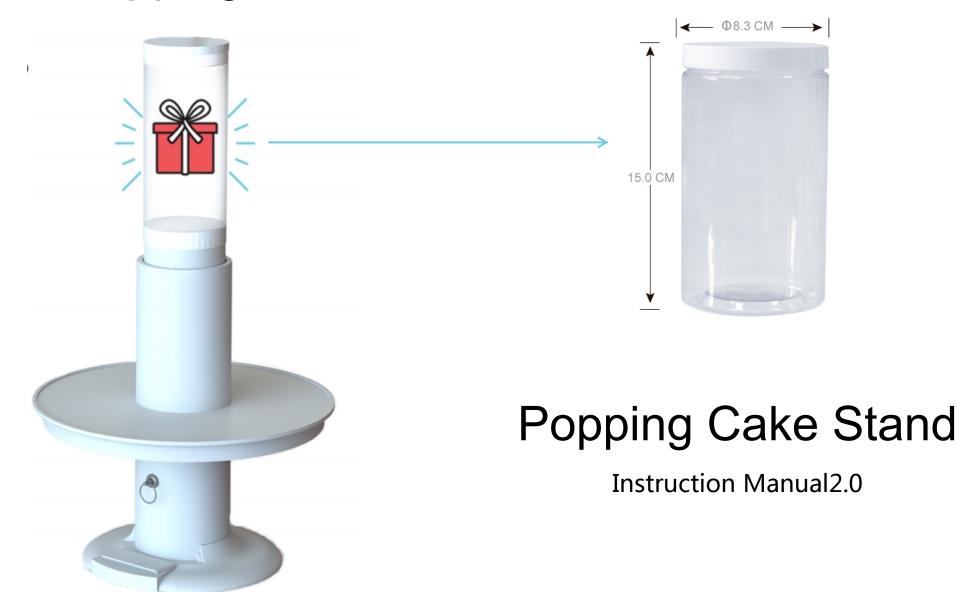


Table of Contents

| Parts | 1 |
|------------------------|-----|
| Popping Stand Assembly | 2-3 |
| Cake Prep Guide | 4-5 |

Parts

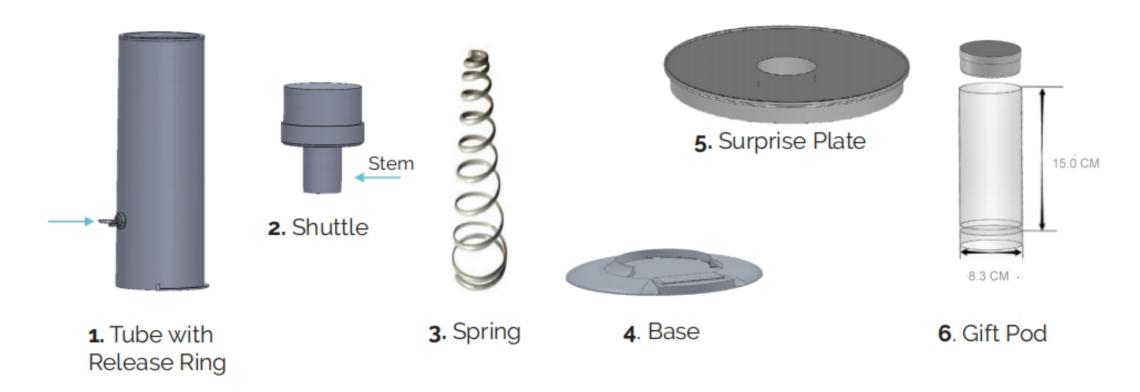

All parts are hand washable.

WARNING: The Popping Stand is NOT a toy! Excessive pulling on the Release Ring may cause damage. Adult supervision required.


Popping Stand Assembly

Step 1 - Insert Shuttle and Spring



Position Tube with lip facing upwards.


Insert wide end of Shuttle into lip end of Tube. *Gently* pull Release Ring to let Shuttle slide through.

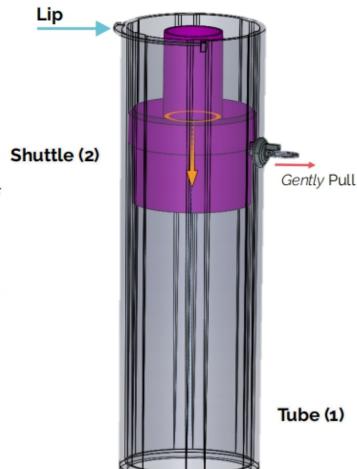

2


Insert small end of Spring into lip end of Tube.

Position Spring around stem of Shuttle.

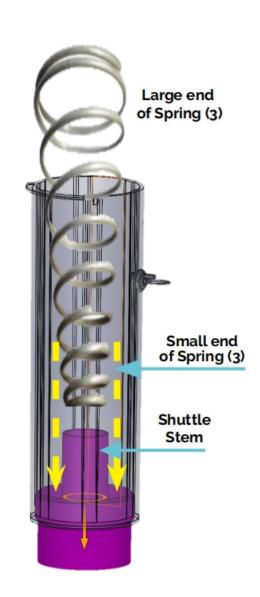

Popping Stand Assembly

Step 2 -Lock Tube to Base

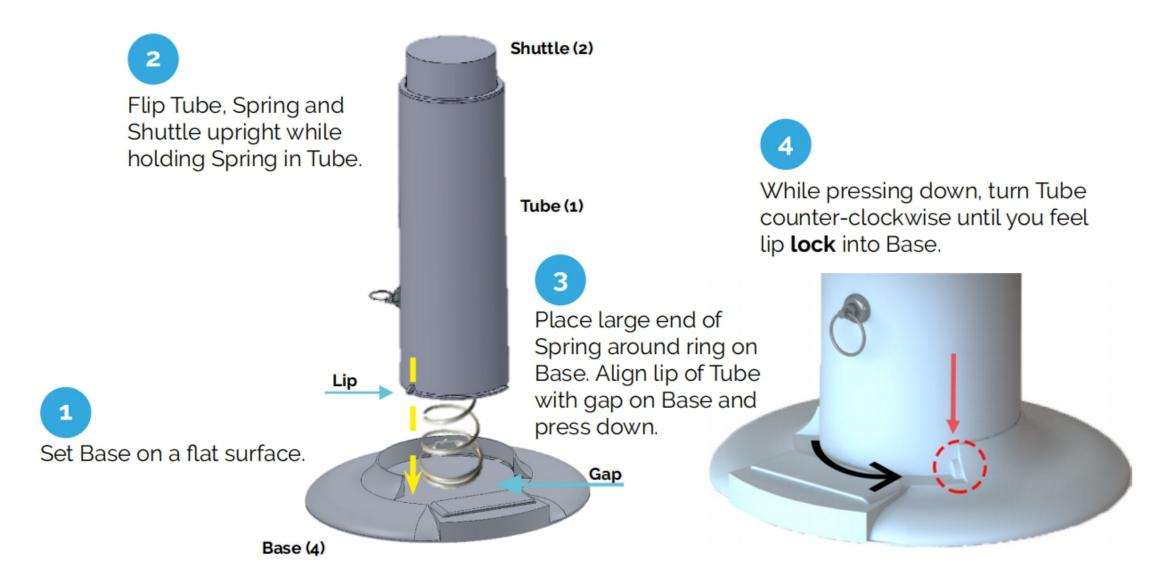


Cake Preparation Guide



Place your gift into Gift Pod and cover. Max. gift weight **1lb (.5kg)**.

Do not deform Gift Pod by overstuffing.

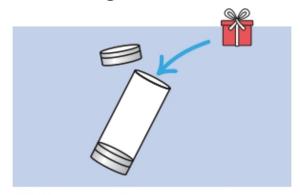


 Remove plastic wrap from Gift Pod.






While gently pulling Release Ring, push Gift Pod *completely* into Tube. Let go of Release Ring to lock Gift Pod in Tube.

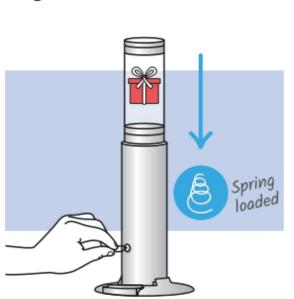



Position cake onto center of Surprise Plate.

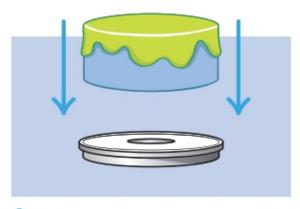


- Cake may be store-bought or homemade
- Max. cake dimensions: Diameter: 10.25" (26 cm) Height: 6" (15.24 cm)

Cake Preparation Guide




Use Cake Corer to remove cake center.

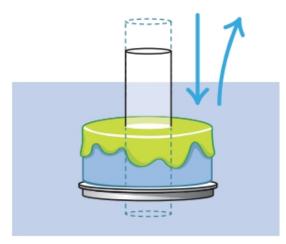

Weep cake center for a mini-cake!



Place Surprise Plate with cored cake onto Tube. Level top of cake with top of Tube. Tighten Thumb Screws under Surprise Plate.

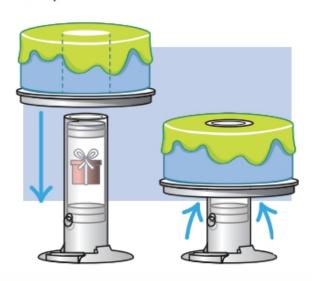



Lightly cover cake center with skim coat of frosting [1/4 inch (6mm) or less], sprinkles, or other lightweight toppings or decoration.



- · Do NOT cover center with fondant. Gift Pod will NOT break through.
- Cake should be at or close to room temperature before trigger is activated. Gift Pod cannot break through cold or frozen frosting/cake.
- Do not use sanding sugar or any other small objects to cover center. These may jam Gift Pod.
- · Stand should not be used as a turntable. Rotating stand may cause it to malfunction.