

PRODUCT SPECIFICATION

46/PF001	Chrome
46/PF006	Black
46/PF003	Gold
46/PF005	Copper




Features & Benefits

- 2 Year Warranty*
- 4 Second count pour speed/with flow control
- Refreshable cork fins
- Completely disassembles for cleaning
- Replaceable parts
- Constructed from Food Grade ABS/TPR

*see www.uberbartools.com for warranty details

SPECIFICATIONS	
Item Number	46/PF001, 46/PF006, 46/PF003, 46/PF005
Dimensions	
A - Length	95 mm (3.7 in)
B - Width	N/A
C - Height	N/A
D - Diameter	33 mm (1.3 in)
Weight	33 grms (0.07 lbs)
Construction	ABS/TPR
Custom Logo Area	
E - Length	20 mm (0.78 in) (Logo must be positioned on the rear of the ProFlow TM)
Decoration Technique	Pad printed

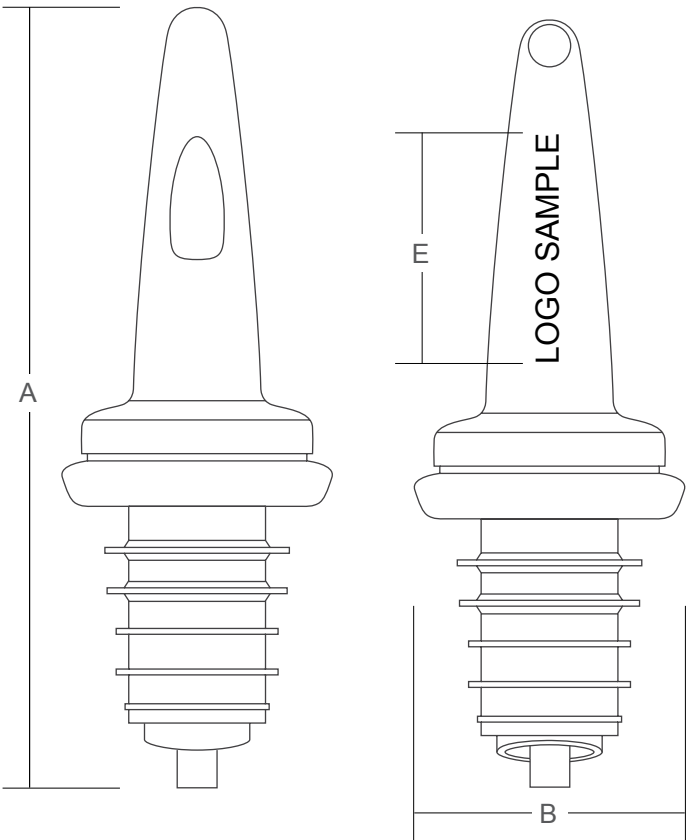

Des.Reg.Pat.

PRODUCT CARE GUIDE

Anatomy	How To Use (4 sec. Pour)	Refreshing corks
<div><div>1</div><div>To disassemble hold the collar/cork whilst twisting the pour spout anti-clockwise</div><div><div>A</div><div>A. Pour Spout</div><div>B</div><div>B. Collar & Cork</div></div><div><div>Place Snap-On measure onto collar/cork to protect from insects/flies</div><div>Alternatively the dust cover may be used by removing the pour spout. Place onto collar/cork and press down firmly until it clicks into place</div><div>Note: Snap-On Measure/ Dust Cover sold separately</div></div></div>	<div><div>2</div><div><div>1. Lift bottle, cover intake</div><div>2. Positioning bottle over jigger, air intake closed</div><div>3. Air intake opened, alcohol released, pouring starts</div><div>4. Air intake closed, pouring finished, return bottle</div></div></div>	<div><div>3</div><div><div>All ProFlowTM parts can be cleaned in warm/soapy water</div><div>Alternatively all ProFlowTM parts can be cleaned in soda water</div></div><div><div>After extended use the cork fins may bend upwards</div></div><div><div>To refresh, place collar/cork in hot water for 5 seconds</div><div>The cork fins will return to normal position</div></div></div>

WARNING

NEVER CLEAN WITH ABRASIVE MATERIAL OR HARSH CLEANING CHEMICALS/SOLVENTS THOROUGHLY DRY AFTER CLEANING

WARNING

NEVER PLACE ANY PART INTO A GLASS WASHER, DISH WASHER OR BOILING WATER

NOTE: After prolonged use should fins not reset, the collar/cork will need to be replaced as part of normal wear and tear