

Thank you for purchasing this product. Please read this user manual carefully before using to ensure proper installation and operation.

Please keep this USER MANUAL properly for future reference.

CONTENTS

SAFETY PRECAUTIONS	1
NAME AND FUNCTION OF EACH COMPONENT	3
External Structure	3
Internal Structure	3
Quick Control Buttons	4
Instructions of Quick Control Buttons	5
Touchscreen Controller Instructions	6
FEATURES	7
PRELIMINARY CHECKS	8
Installation Methods	8
Installation Site	11
Floor Protection	11
Moving Methods	13
Connect to Power	13
Commissioning	14
Inspections Before Sitting	14
Leg Extends/Retracts	15
After Operation	15
CARE AND MAINTENANCE	16
TROUBLE SHOOTING	17
PRODUCT SPECIFICATIONS	17

TROUBLE SHOOTING

No.	Symptoms	Possible Causes	Possible Solutions
1	Tapping or humming sound is heard	This sound is normal and comes from the air pump motor or other mechanical parts rubbing against the cloth cover	No need to take any measures
2	Massage Chair does not start	The power cord is not secured into the socket	Insert the power plug properly into the power socket
		Power switch is off	Turn on the switch
		The fuse is blown	Replace only with a fuse of same type and rating
3	No music comes from the speaker	The volume is turned to the lowest	Adjust the speaker volume from the mobile devices
		Bluetooth is off	Switch on bluetooth
		Bluetooth didn't connect with music device Bluetooth connected with other device	Reconnect Bluetooth
4	Backrest or footrest can not raise or recline	Excessive load has been pressed on the backrest or legrest	Reduce the load and try again

If problem remains, please contact the dealer for maintenance.

Important: Do not attempt to repair this product yourself, our company shall not be liable for the injury or damage caused by any servicing without authorization.

PRODUCT SPECIFICATIONS

Name: Deluxe Multi-function Massage Chair

Model: RT8900

Rated Voltage: 220-240V~

Rated Frequency: 50/60Hz

Rated Power: 180W

Safety Design: Class I

CARE AND MAINTENANCE

Care and Maintenance Instructions

- ▶ To treat stains on back panel, armrest, footrest, plastic parts or air hose, spot clean with mild detergent foam, then wipe it with a dry cleaning cloth.
- ▶ To treat stains on controller, power box, spot clean with a dry cleaning cloth.
- ▶ To treat stains on back cushion or pillows, use a water-based upholstery cleaner only, wipe it with moist cloth, then air dry.
- ▶ To clean the foot/calf unit covers, remove it from the chair, hand wash with a mild detergent, then line dry.

CAUTION

- ▶ Pull out the power cord from the power strips before care and maintenance. To avoid electrical shock or injury, do not touch the power cord with wet hands. Make sure no detergent enters into the power box while cleaning.
- ▶ Do not use benzene, thinner or other solvents on your product, it may cause fading or damage to the product.
- ▶ Do not iron the upholstery

Storage Methods

- ▶ Keep the product free from dust. Cover the product with a dust-free cloth to prevent collection of dust if not in use of a long period of time.

CAUTION

- ▶ Do not leave this product exposed to direct sunlight for long periods of time. This may cause fading or damage

Warm Tips

During daily use, please check for the following symptoms:

- ▶ Burnt smell
- ▶ The product experiences unusual power ON/OFF when touching the power cord.
- ▶ Hot power cord
- ▶ Other abnormal symptoms

CAUTION



- ▶ Please stop using the product to avoid breakdowns or accidents if any above symptom spotted.
- ▶ Switch off the power button and disconnect the plug, contact the local distributors or supplier for repair.
- ▶ All other servicing except above care and maintenance should be serviced by an authorized dealer or service center.

WARNING

Pull out the power cord from the power strips before care and maintenance. To avoid electrical shock or injury, do not handle the power cord with wet hands. Do not try to dismantle or repair the product yourself, please send your massage chair to the authorized service center.

SAFETY PRECAUTIONS


- ▶ Precautions listed below will help to ensure proper use of this appliance.
- ▶ The hazard that may cause by incorrect use are classified into “WARNING” and “CAUTION”, please ensure that you read all instructions before using the massage chair.

 WARNING	Improper operation may cause severe personal injury or substantial property damage.
 CAUTION	Improper operation may cause personal injury or product damage.


	Prohibited		No Disassemble
---	------------	---	----------------

Not Suitable For Below Persons


We recommend that those with any of the following conditions should consult your physician before using.

 WARNING	<ul style="list-style-type: none">◆ Those who are using electronic medical instrument embedded in the body, such as cardiac pacemaker.◆ Those undergoing treatment, especially those who are not feeling well.◆ Those with malignant tumors or malignant abscesses. (Need to be supervised)◆ Women who are pregnant or menstruating.◆ Those with osteoporosis or fracture spine.◆ Those with skin disease or those whose skins are injured.◆ Those with high fever.◆ Close supervision is necessary when this product is used by, on, or near children, invalids, or disabled persons◆ The appliance has a heated surface. Persons insensitive to heat must be careful when using the appliance.◆ This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.◆ Children shall not play with the appliance.◆ Cleaning and user maintenance shall not be made by children without supervision.
--	--

Control Buttons Precautions


 CAUTION	<ul style="list-style-type: none">◆ Do not operate the control buttons with wet hands.◆ Do not spill water or other liquid onto the control buttons to avoid fault.
--	--

Cautions Regarding the Adapters and Cord



 CAUTION	<ul style="list-style-type: none">◆ Always unplug this appliance from the electrical outlet immediately after using and before cleaning.◆ An appliance should never be left unattended when plugged in. Unplug from outlet when not in use.◆ Unplug from outlet during thunder or lightening storms, and before putting on or taking off parts.◆ Never operate this appliance if it has a damaged cord or plug, if it is not working properly, if it has been dropped or damaged, or dropped into water. Return the appliance to a service center for examination and repair.◆ Check that the power voltage stated on the rating label corresponds to your local electricity supply.◆ Do not use a damp hand to unplug the cord to avoid electric shock.◆ Do not drag the cord, reach to the front plastic end to unplug it.◆ Do not squeeze, over bend, pull hard, twist the cord.◆ Keep the cord away from heated surfaces.◆ Do not carry this appliance by supply cord or use cord as a handle.◆ To disconnect, turn all controls to the off position, then remove plug from outlet.◆ The appliance is only to be used with the power supply unit provided with the appliance.◆ It must only be supplied at safety extra low voltage corresponding to the marking on the appliance.◆ If the supply cord is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.
--	--

SAFETY PRECAUTIONS

Best Circumstances



 CAUTION	<ul style="list-style-type: none"> ◆ Do not operate under blanket or pillow. Excessive heating can occur and cause fire, electric shock, or injury to persons. ◆ Do not use this appliance where temperature is over 40 C. ◆ Do not use this appliance in humid or dusty environment, or when any part of the body is in contact with plumbing or any similar ground. ◆ Never operate the appliance with the air openings blocked. Keep the air openings free of lint, hair, and the like.
	<ul style="list-style-type: none"> ◆ Do not use outdoors. ◆ Do not operate where aerosol (spray) products are being used or where oxygen is being administered. ◆ Please place the product on the flat level floor. ◆ Do not store near heat or open flame. ◆ Connect this unit to a properly grounded outlet only. See Grounding Instructions.

 
Best Practices For Safe Use

 CAUTION	<ul style="list-style-type: none"> ◆ Only for users weighs below 120kg. ◆ Use this product only for its intended use as described in this manual. Do not use attachments not recommended by the manufacturer. ◆ Do not use the product for therapeutic treatment purpose. ◆ Appliance should only be used by one person, do not use by two or more persons at the same time to avoid damage to the products. ◆ Do not use the product right after meal, it may cause discomfort. ◆ Remove the accessories from the arms and empty the pockets while use the massage services. ◆ Check the upholstery under the cushions and other spots, if any damages are present, do not use it and refer to a qualified service professional for servicing. ◆ If you feel any abnormal discomfort during the operation of this product, turn off the power immediately and do not use the product. ◆ Use the appliance for 20 minutes each time is highly recommended ◆ Make sure there is no obstacles behind the chair and there is enough clearance before adjusting the backrest or legrest angle. ◆ Make sure no other excessive load pressed on the backrest or legrest besides the user. ◆ Make sure there is no children, pets or other objects under the backrest or legrest. ◆ Please be seated properly while using the appliance. ◆ Do not drag or push the chair or roll on its caster on wood floor or carpet to avoid damage.
	<ul style="list-style-type: none"> ◆ Do not stand on or stack heavy objects on the footrest. ◆ Do not fall into sleep while the product is operating. ◆ Avoid using the product under the influence of alcohol. ◆ Never drop or insert any object into any openings. ◆ If there is any smoke or unusual smell while using, stop using immediately, unplug the power cord.
 PROHIBITED	<ul style="list-style-type: none"> ◆ Do not disassemble this product yourself to avoid failure. ◆ Do not dismantle, fix or modify the yourself, Please contact authorized dealer or service agent.

PRELIMINARY CHECKS

Leg Extends/Retracts

- ▶ Press and hold “” or “” button to extend or retract the footrest to the length you desire for better massage experience, release the button to fix the position.

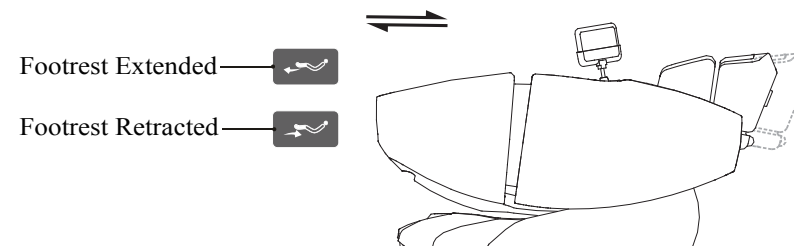

- ▶ A footrest sensor is set at the bottom of footrest, the footrest will adjust the length automatically once the chair started.

WARNING

- ▶ Do not play on the massage chair or operate it improperly.
- ▶ Ensure there is no obstruction when raising or reclining the backrest and footrest.
- ▶ Do not place foot, fingers or any other objects in the space between the seat and the backrest/footrest when it is in the reclining or raising motion.
- ▶ Ensure massage chair is restored back to its original position before getting off the massage chair.

 
After Use

- ▶ Always unplug the massage chair from the electrical outlet immediately after use.
- ▶ Secure the center console onto the holder.
- ▶ Turn off the power switch and unplug the massage chair from the electrical outlet while not in use to avoid children power on the massage chair accidentally.
- ▶ When not in use for a long period of time, we recommend that the chair be covered, the power cord be coiled and that the unit be placed in an environment free of dust and moisture.

► PRELIMINARY CHECKS

Commissioning

- Use the quick access button to recline the backrest to its lowest position, raise and extend the footrest to its top position, make sure there is enough clearance before commissioning.
- Return the backrest and footrest back to its default position after commissioning and turn off the power switch.
(To choose the massage program, please check the Instructions of Quick Access Buttons and Instructions of Center Console for reference.)

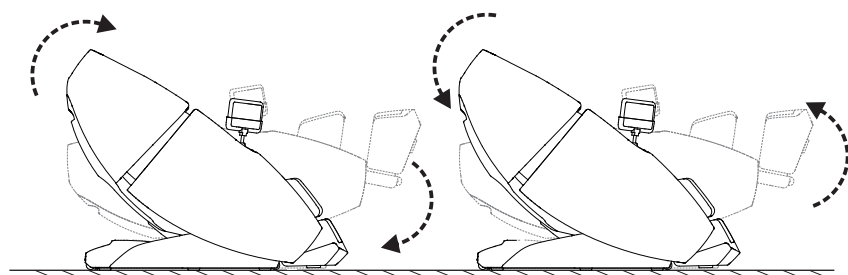

Inspections Before Sitting

 
- Ensure the footrest is well assembled before sitting on the massage chair.
- Ensure the massage chair is returned to its original position before sitting on it. If there is any part not in default position, please turn off the massage chair to allow it to restore.

CAUTION


- Do not take seat while the footrest is lifted.
- Do not put excessive load on the footrest to avoid damage.

► NAME AND FUNCTION OF EACH COMPONENT

External Structure

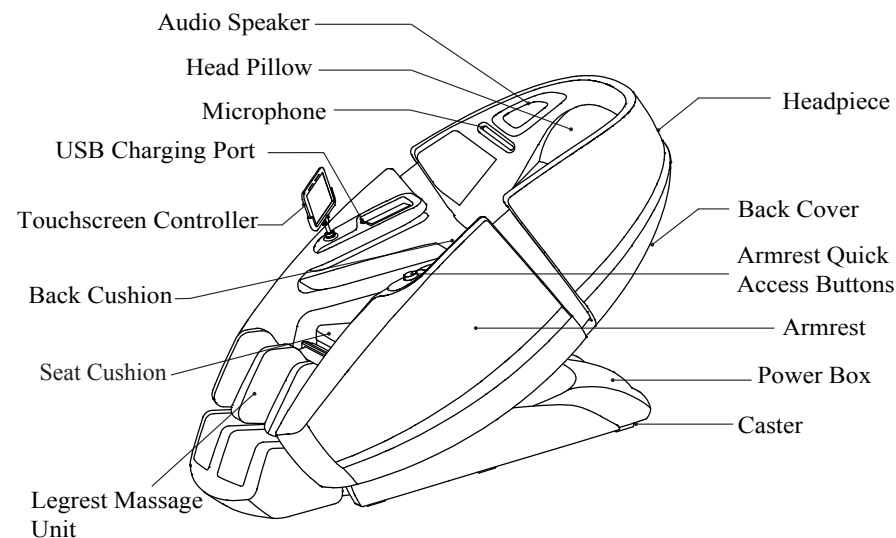


Internal Structure

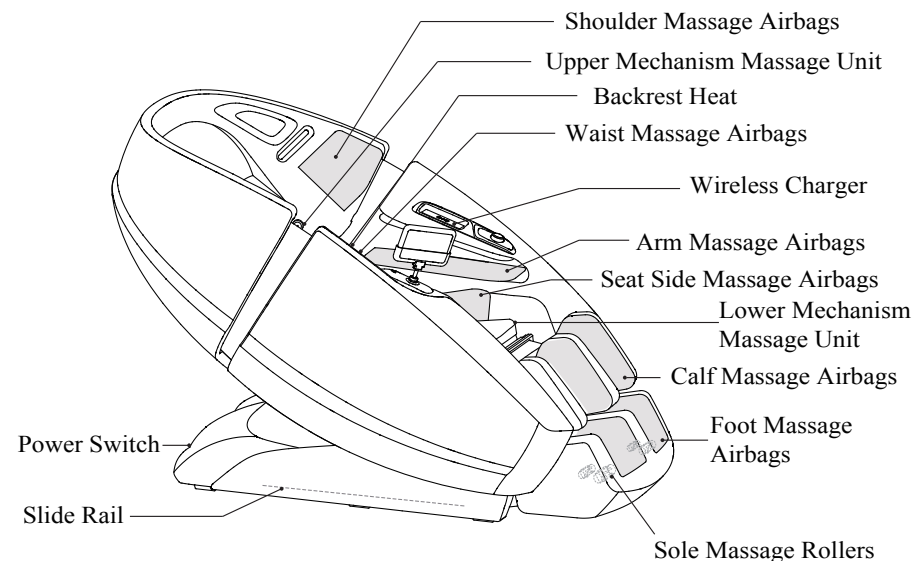 

► NAME AND FUNCTION OF EACH COMPONENT

 
Quick Control Buttons

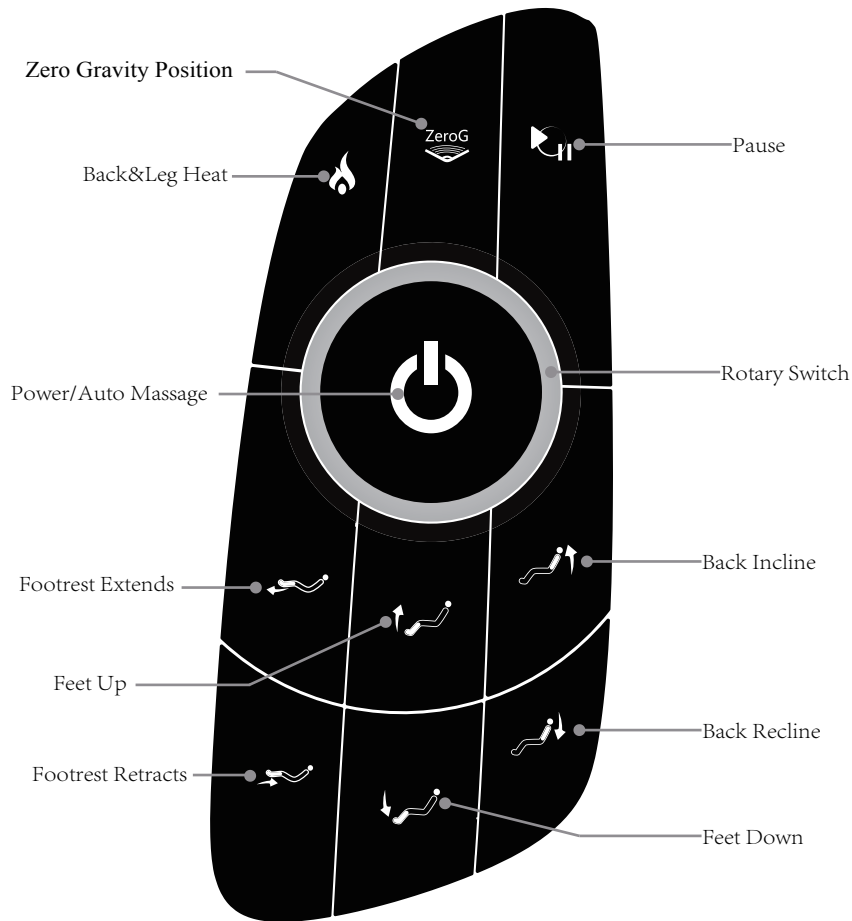

► PRELIMINARY CHECKS

Moving Methods

 - Roll the chair on its casters to the desired location.
- Incline the backrest to upright position.
- Turn off the power switch and unplug the appliance from the electrical outlet.
- Using two people, push down on the backrest and lift up on the front side by grabbing the moving Holder located to the front bottom of the armrest, roll the chair on its casters to the desired location (check the sketch for reference).

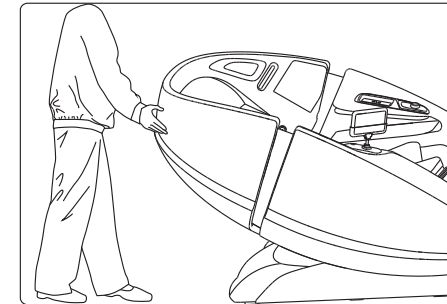


⚠ CAUTION

- Do not move the chair when there is user inside.
- To carry this product, do not lift by the footrest or armrest, hold the chassis and steady the backrest (have 4 or more people to carry the product).

Connect to Power

 - Connect this appliance to a 3-wire properly grounded outlet.
- Turn on the main power switch by the right hand side of the massage chair.

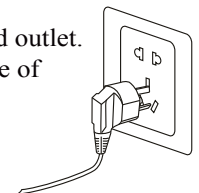

⚠ CAUTION

- Please verify that there is no damage to the supply cord before switching on the massage chair.
- Please verify that the main power switch is turned off before connecting to power.

▶ PRELIMINARY CHECKS

WARNING



Do not use the massage chair in high moisture environment such as near swimming pool or bathroom to prevent electric shock accident.



Please keep the massage chair away from heated surfaces to prevent fire hazard or damage to the product.

DANGER



This product must be grounded, the plug must be plugged into an appropriate 3-wire grounded outlet that is properly installed and grounded in accordance with all local codes and ordinances to reduce risk of electrical shock.

▶ NAME AND FUNCTION OF EACH COMPONENT

Instructions of Quick Control Buttons



Power/Auto Massage

▶ Quick press rotary switch to toggle auto massage programs.



Rotary Switch

▶ Rotate clockwise/counterclockwise to increase/decrease 3D massage intensity;



Zero Gravity Position

▶ Press to position the chair in Zero Gravity Position, press again to restore to default position.



Footrest Extends

▶ Press and hold to extend the footrest; release the button to stop.
(Make sure there is no obstruction in advance)



Footrest Retracts

▶ Press and hold to retract the footrest; release the button to stop.



Pause

▶ Press to pause massage chair function.
press this button again to continue.



Feet Up

▶ Press and hold to raise the footrest; release the button to stop.



Feet Down

▶ Press and hold to lower the footrest; release the button to stop.



Back&Leg Heat

▶ Press to turn on Back&Leg Heat, press again to turn off Back&Leg Heat.

► NAME AND FUNCTION OF EACH COMPONENT



Back Incline

► Incline: Press and hold to incline the backrest to upright position; Release the button to stop.



Back Recline

► Recline: Press and hold to recline the backrest; Release the button to stop. When the backrest reclines to its third quarter position, it will stop and wait for the lower mechanism to reach a safe clearance before it continues to recline.

Touchscreen Controller Instructions

 
- See the “Touchscreen Controller Instructions” at Touchscreen Controller display.

► PRELIMINARY CHECKS

Installation Site


Clearance space for the massage chair:

- Ensure there is an adequate clearance for the installation: It needs 10cm clearance for the recline of the backrest; It needs 60cm clearance space for the extension of footrest and sliding forward of the chair.
- Keep it 1 meter away from the TV, radio or other audio & video appliance to avoid signal interference.

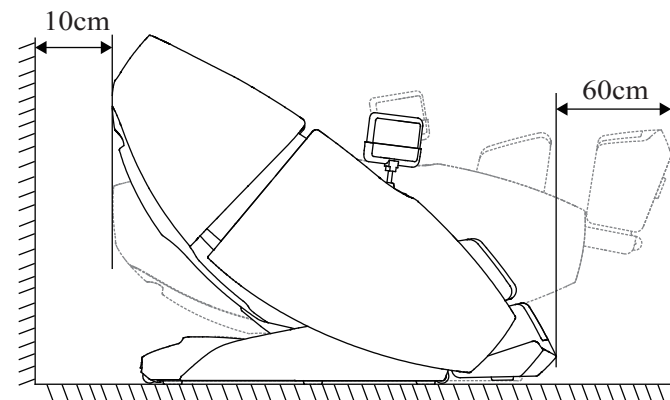


Floor Protection

 - We recommend to place a piece of carpet or soft mat underneath it to avoid damaging the floor.

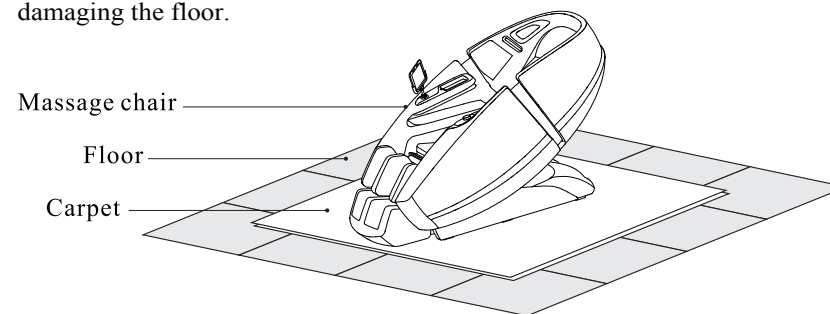


► PRELIMINARY CHECKS

 - Put the Legrest Hanger Sleeve into the Legrest Hanger, attach the Legrest Hanger onto the Legrest Rotation Shaft, then attach a DK Circlip to the end of the Legrest Rotation Shaft to hold the legrest in place, then zip the footrest and main chair together.

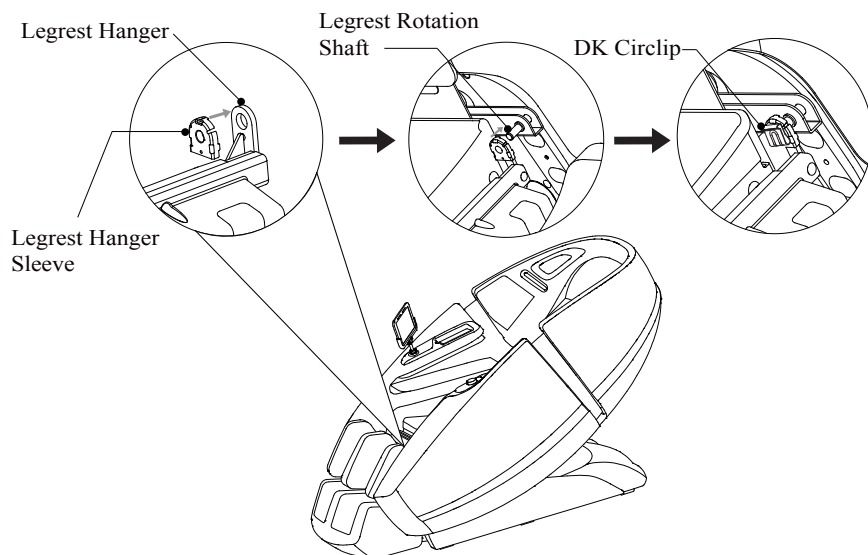

Step 5: Other Accessories

 - Connect the power cable to the product power socket located at the power box of the product.
- Switch ON the power located at the back of power box, raise the backrest of the product to fully upright position.

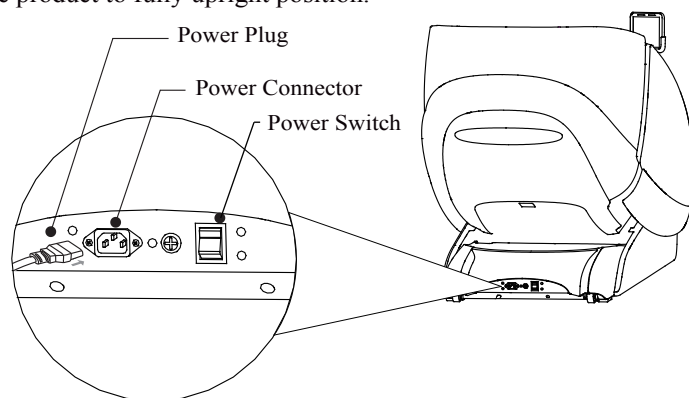


► FEATURES

1. One Press Control Sliding Forward

It will slide forward by 28cm and recline afterwards.

 Glider recliner linkage mechanism to save space and provide utmost relaxing position.

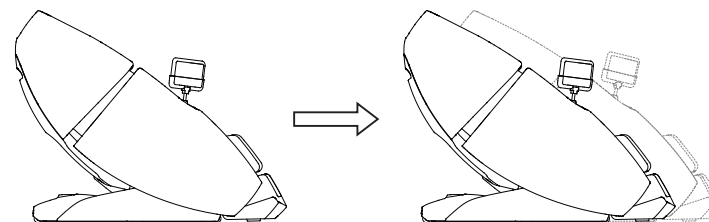

2. Zero Gravity Position

At such a weightless position that the height of the legs slightly higher than the upper body, the weight of body can evenly distributed throughout, reducing the pressure of the spine and joints both physically and mentally.

3. Auto/Manual Footrest Extension

The upper footrest can extend by 7cm and lower footrest can extend by 15cm automatically for various users with different stature.

4. Whole Body Air Pressure Massage

Whole Body Air Pressure Massage for shoulders, arms, back, waist, hips, legs and feet.

5. Roller Massage

3 underfoot rollers provide all-direction pressure massage for the reflex zone.

6. Versatile Massage Techniques

Mimic human hand kneading, knocking, sync, tapping, shiatsu massage techniques with extra calf rubbing massage for custom-tailored relaxation.

► PRELIMINARY CHECKS

 
Installation Methods

Step 1: Take all massage chair units out of the cartons


- Unpack the cartons: take out all upholstery unit, accessories out of the cartons.
- Before beginning installation, please verify that all components are included (check with the packing list carefully).

Step 2: Install Armrest Unit

- Connect the numbered air hose to the matching numbered nozzle on the armrest and plug in the air valve connector.
(There are 2 air valve plugs at the other side armrest)

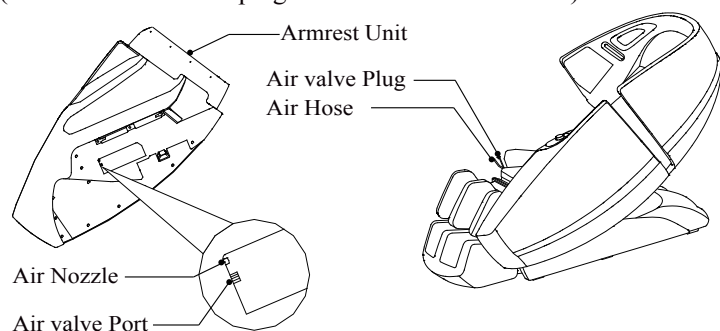

 
- Hold the armrest unit up and hook the hanger 2 onto the carrier groove, slowly push the armrest unit back into the chair linkage until hanger 2 aligns completely with hanger 4, insert hanger 1 into hanger 3, use a screw to secure the armrest into place. (Same installation method with the other side)

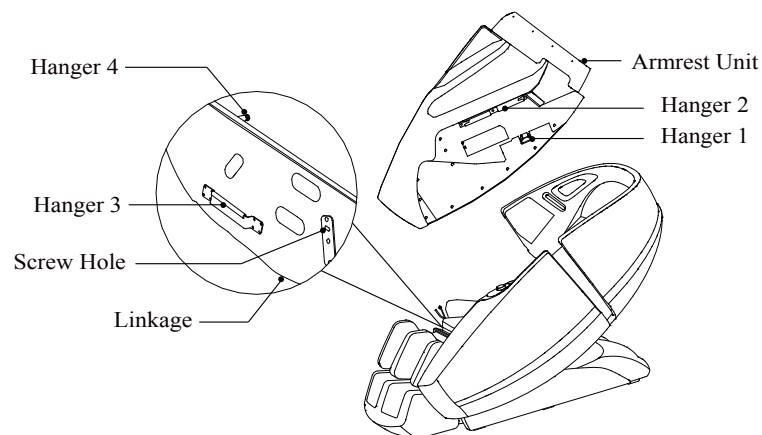

► PRELIMINARY CHECKS

Step 3: Install Touchscreen Controller Holder

 - Insert the lower end of Touchscreen Controller holder into the socket, turn the nut clockwise to secure the holder into place.

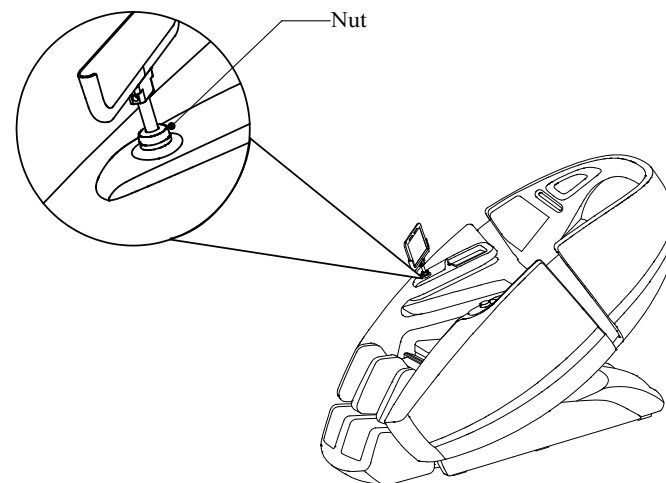

Step 4: Install the Footrest Unit

- Raise the Legrest unit, thread the Air Hose into the air nozzle, and fit the Air Valve Plug into the Air Valve Port which located at the face side of seat base, make sure they are well secured.

