

# **Wireless Security Alarm**



# **About Pairing**

Pair the first remote

Let the alarm power off for 30s (remove the battery). Long press  $\triangle$  button of the remote control to enter the pairing mode, press the  $\bigcirc$  button of the remote control, the pairing is successful.

### Add another remote

Long press <u>a</u> button of the PAIRED remote control to enter the pairing mode, press the <u>a</u> button of the NEW remote control, the pairing is successful.

Delete all pairing of the remote

Long press <u>a</u> button of the remote control to enter the pairing mode, press the <u>button</u> button of the remote control, the remote won't control.

# **About Setting**

Long press (LOCK) button of the remote control to enter the setting mode, Press (UNLOCK) button to adjust the sensitivity, from the tone "DO" to "SI", 7 levels; where "DO" is the highest sensitivity, "SI" is the lowest sensitivity.

Press  $\neq$  button to turn on/off the SOS function.

Press <u>A</u> button to adjust the volume, including 3 levels.

#### **Specifications**

Shell Material	PC	Volume	113dB (Test distance is 30cm)
Remote control distance	30~60m (98~196ft)	Working frequency	433.92MHz
Working temperature	-20~60°C	Storage temperature	-30°C ~+70°C
Battery(Alarm)	3x AAA alkaline batteries	Battery(Remote)	1x 12V/27A alkaline battery