

MEGAWISE

**CURLING IRON**  
USER MANUAL



Model: KL-2011



## ACTIVATE YOUR 12-MONTH WARRANTY & GET AN EXCLUSIVE FREE GIFT

Register within 7 days after receiving your new product.

Scan QR Code & Start Chatting



Use your phone camera to scan me  
& start chatting

or visit:

[m.me/MegaWiseUSA](https://m.me/MegaWiseUSA)



Or Visit:

[megawise.com/warranty](https://megawise.com/warranty)



**NOTE**

1. DO NOT place the device near water to prevent it getting wet.
2. Always unplug the unit after use.
3. Keep your skin away from hot surfaces.



## IMPORTANT SAFETY INSTRUCTIONS

Please read this instruction manual before using your MegaWise product and keep it in a safe place for future reference. If you pass the appliance on to anyone else, please include this manual.

Always follow these safety precautions, including the following:

### DANGER

1. Always unplug the appliance immediately after use.
2. Do not use this appliance near basins and other vessels containing water or while taking a shower.
3. Do not place or store appliance where it can fall or be pulled into a basin or bath.
4. Do not place in, or drop into, water or other liquids.
5. If an appliance falls into water, unplug it immediately.

### WARNING

To reduce the risk of burns, electrocution, fire, or injury to persons:

1. Do not leave the appliance unattended when it is in use. Always ensure that the appliance is turned off by switching off and unplugging the appliance when not in use.
2. Do not pull, twist, or wrap the cord around the appliance.
3. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

4. This product is intended for household use only. Use it only for its intended use, as described in this manual. Attachments are not recommended to use with this appliance by the manufacturer.
5. If the power cord or plug is damaged do not use the appliance. Return the appliance to an authorized service center for examination and repair.
6. Keep the cord away from heated surfaces.
7. To protect against electric shock, do not immerse the power cord, plug or appliance in water or any other liquids.
8. Do not use outdoors or operate where aerosol (spray) products are being used or where oxygen is being administered.
9. Do not use an extension cord with this appliance.
10. Avoid all contact with ears, eyes, and face. Never touch the heating tongs.
11. Do not use on hair extension with any synthetic hair.
12. Place the appliance on a smooth, flat, dry surface. When the appliance is hot, keep it on a heat-resistant surface and never cover the appliance with anything, such as a towel or clothing.
13. Do not touch hot surfaces of the appliance, use handles or knobs.

## SPECIFICATIONS:

Model: KL-2011

Power: 65W

Dual voltage: 100-240V-, 50-60Hz

Heater: Dual PTC

Heat setting: 150°C-220°C(300°F-430°F)

Auto shut-off: 60+/2Min

Barrel size: 1.5 inches

Anti-scald Grip

1 1/2-inch Barrel

Sturdy Safety Stand

LCD Display

On/Off/Temp Control



## HOW TO USE

1. Plug the appliance into a standard electrical outlet.
2. Press the power button, the appliance will be turned on with the display showing default temperature set at 300°F/150°C.
3. Keep pressing the power button to choose the temperature setting that is suitable for your hair. The temperature display will increase or decrease the current temperature.
4. Start to style when the desired temperature is reached.

TEMPERATURE SETTINGS	HAIR TYPES
300-340°F/150-170°C	Fine, thin, normal textured hair
340-395°F/170-200°C	Wavy or curly hair
395-430°F/200-220°C	Coarse, very thick hair

5. To turn off the iron, press and hold the power button for 3 seconds.

## LOCK & UNLOCK

1. The temperature will flash before reach the setting temperature and automatically locks the appliance after temperature reached.  
For the purpose of accidental wrong operation during styling. "LOC" reminder will be shown on the display screen when any button is pressed. Quickly double press the power button to UNLOCK.
2. The appliance automatically shuts off in 1 hour.



## FOR BEST RESULT

### PREPARING YOUR HAIR

Dry your hair before using it. Comb your hair to remove any tangles that may have occurred while you were blow-drying. Turn on and choose a heat setting. If you have thick hair, choose a higher temperature, and if you have thinner hair, pick a low temperature. Do not touch the metal part with your hand or scalp while the iron is heating, wait for it to heat up completely before styling.

### USING THE CURLING IRON

1st Way: Open the clamp and place the middle of a section of hair (no more than 1 inch wide) between the clamp and the wand. Close the clamp and wrap the hair around the clamp and wand.

2nd Way: Open the clamp and place the end of a section of hair (no more than 1 inch wide) between the clamp and the wand. Close the clamp and rotate the wand to wrap the hair. Wait a few seconds to heat then release your beautiful curls. Repeat this motion on each of the remaining sections of your hair. It is important not to let the barrel touch your scalp or neck. The high temperature is capable of burning and scarring your skin.

## MAINTENANCE

Keep all vents and openings clear of dust, dirt, and hair spray. Turn off the appliance before cleaning and disconnect the plug from the power outlet. Let it cool down, and wipe the exterior with a cloth.

If any abnormal condition occurs, unplug the unit, allow it to cool down, and return it for repair to an authorized service representative only. No repairs should be performed by the consumer.

## CAUTION

NEVER allow the cord to be pulled or twisted.

Never wrap the cord around the unit, this may cause the cord to fracture.

Inspect the cord frequently for damage.

Stop use the appliance immediately in case of malfunction or if the damage is visible.

## STORAGE

Allow the unit to cool down, store it in a cool, dry location, away from children and pets. To disconnect the power cord, pull it out by plug (not by the cable).

**WARNING:  
ALWAYS UNPLUG  
THE APPLIANCE  
WHEN IT IS NOT  
IN USE.**

## **KEEP AWAY FROM WATER**

Everyone knows that electricity and water are a dangerous combination, but did you know that an electrical appliance is still electrically live even if the switch is off? If the plug is in, the power is on. Thus keep your appliance unplugged if it is not in use.



### **WARNING**

Do not use this appliance near bathtubs, showers, basins or other vessels containing water.

## CUSTOMER SERVICE



Scan the QR-code & start live chatting with our customer service:



Use your phone camera  
scan me & start chatting  
or visit:

[m.me/MegaWiseUSA](https://m.me/MegaWiseUSA)



[m.me/MegaWiseUSA](https://m.me/MegaWiseUSA)



[support@megawise.com](mailto:support@megawise.com)



[megawise.com](https://megawise.com)

---

 **24/7 LIVE CHAT  
SUPPORT**

Made in China