




THE DINOMAZING EGG DECORATOR®

Ages 3+

INSTRUCTIONS

ADDITIONAL DINOSAUR EGGS
SOLD SEPARATELY

IT'S DINOMAZING!

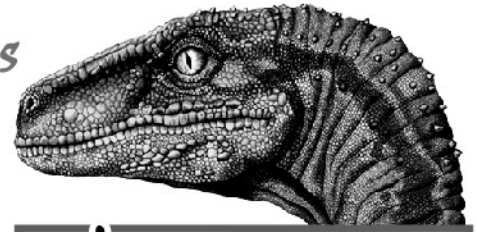

IMPORTANT:

- * Requires 3 AA Batteries (not included)
- Remove screw from battery cover and insert 3 AA batteries.
- Replace the battery cover and tighten screw.

HOW TO ENJOY YOUR NEW DINOMAZING EGG DECORATOR!

- STEP 1:** Place Dinosaur Egg in the opening.
- STEP 2:** Turn on the Dinomazing Egg Decorator®. On/off switch is located on the right side.
- STEP 3:** Remove lid/cap from non-toxic marker and touch the tip of the marker to the spinning DinoMazing egg to create colorful designs.
- STEP 4:** After decorating, crack the Dinosaur Egg open and reveal Non-Sticky Slime and Mystery Dinosaur!

HELPFUL HINTS:

- If tracking occurs from excessive decorating fun, use rubbing alcohol to clean wheels. *more details on our website.
- After decorating, make sure marker lids/caps are put back on non-toxic markers to ensure longer usage.
- Go to www.heybuddyheypal.com for cleaning and decorating designs and tips

- * Do not mix alkaline, standard (carbon-zinc), or rechargeable (nickel-cadmium) batteries.
- * Do not mix old and new batteries.



⚠ WARNING:

CHOKING HAZARD - Small Parts.
Not for children under 3 years.
ENTANGLEMENT HAZARD - Keep hair,
loose clothing, and jewelry away from
opening and all moving parts.



FROM THE
CREATORS OF THE
TREMENDOUS!



Patent #11,235,348
Hey Buddy Hey Pal Investments, LLC.
5402 Winners Circle
Amarillo, TX 79110
www.heybuddyheypal.com
info@heybuddyheypal.com