



THE EGGMAZING EGG DECORATOR® INSTRUCTIONS

AGE 3+

IT'S EGGMAZING!



IMPORTANT: Before Use: FOLLOW USDA GUIDELINES FOR SAFE EGG HANDLING. www.usda.gov

* Requires 3 AA Batteries (not included)

Remove screw from battery cover and insert 3 AA batteries.

Replace the battery cover and tighten screw.



How to enjoy your new EggMazing Decorator!®

STEP 1: Place egg in the opening.

STEP 2: Turn on the Eggmazing Egg Decorator®. On/off switch is located on the right side of the unit.

STEP 3: Remove lid/cap from non-toxic marker and touch the tip of the marker to the spinning egg to create colorful designs.

STEP 4: Let the fun begin!

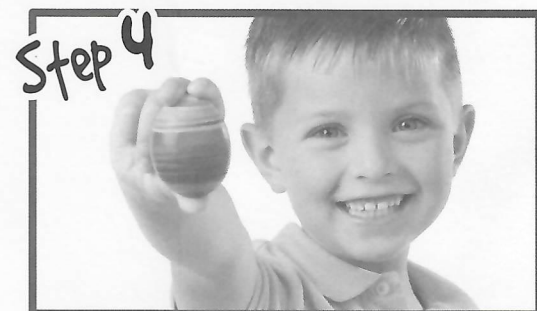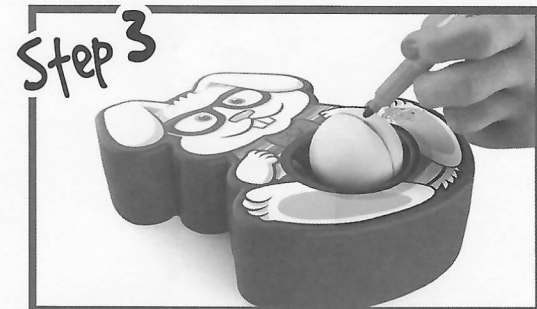

HELPFUL HINTS:

- Follow USDA guidelines on safe egg handling. www.usda.gov
- For best decorating results, use dry, room temperature eggs.
- After decorating, make sure marker lids/caps are put back on non-toxic markers to ensure longer usage.
- Go to www.heybuddyheypal.com for cleaning, decorating, designs, and tips.

* Do not mix alkaline, standard (carbon-zinc), or rechargeable (nickel-cadmium) batteries.

* Do not mix old and new batteries.



WARNING:

CHOKING HAZARD - Small Parts.

Not for children under 3 years.

ENTANGLEMENT HAZARD - Keep hair, loose clothing, and jewelry away from opening and all moving parts.



FROM THE
CREATORS OF THE
TREMENDOUS!



Patent #11,235,348

Hey Buddy Hey Pal Investments, LLC.

5402 Winners Circle

Amarillo, TX 79110

www.heybuddyheypal.com

info@heybuddyheypal.com