




# THE DINOMAZING EGG DECORATOR®

Ages 3+

## INSTRUCTIONS

ADDITIONAL DINOSAUR EGGS  
SOLD SEPARATELY

IT'S DINOMAZING!

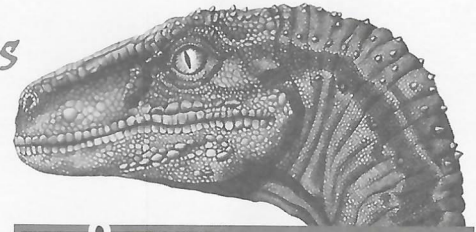

### IMPORTANT:

- \* Requires 3 AA Batteries (not included)
- Remove screw from battery cover and insert 3 AA batteries.
- Replace the battery cover and tighten screw.

## HOW TO ENJOY YOUR NEW DINOMAZING EGG DECORATOR!

- STEP 1:** Place Dinosaur Egg in the opening.
- STEP 2:** Turn on the Dinomazing Egg Decorator®. On/off switch is located on the right side.
- STEP 3:** Remove lid/cap from non-toxic marker and touch the tip of the marker to the spinning DinoMazing egg to create colorful designs.
- STEP 4:** After decorating, crack the Dinosaur Egg open and reveal Non-Sticky Slime and Mystery Dinosaur!

### HELPFUL HINTS:

- If tracking occurs from excessive decorating fun, use rubbing alcohol to clean wheels. \*more details on our website.
- After decorating, make sure marker lids/caps are put back on non-toxic markers to ensure longer usage.
- Go to [www.heybuddyheypal.com](http://www.heybuddyheypal.com) for cleaning and decorating designs and tips

- \* Do not mix alkaline, standard (carbon-zinc), or rechargeable (nickel-cadmium) batteries.
- \* Do not mix old and new batteries.

## WARNING:

CHOKING HAZARD - Small Parts.  
Not for children under 3 years.  
ENTANGLEMENT HAZARD - Keep hair,  
loose clothing, and jewelry away from  
opening and all moving parts.



FROM THE  
CREATORS OF THE  
TREMENDOUS!



Patent #11,235,348  
Hey Buddy Hey Pal Investments, LLC.  
5402 Winners Circle  
Amarillo, TX 79110  
[www.heybuddyheypal.com](http://www.heybuddyheypal.com)  
[info@heybuddyheypal.com](mailto:info@heybuddyheypal.com)

