



THE EGGMAZING EGG DECORATOR® INSTRUCTIONS

Ages 3+

IT'S EGGMAZING!



IMPORTANT: Before Use: FOLLOW USDA GUIDELINES FOR SAFE EGG HANDLING. www.usda.gov

* Requires 3 AA Batteries (not included)

Remove screw from battery cover and insert 3 AA batteries.

Replace the battery cover and tighten screw.


How to enjoy your new EggMazing Decorator!®

STEP 1: Place egg in the opening.

STEP 2: Turn on the Eggmazing Egg Decorator®. On/off switch is located on the right side of the unit.

STEP 3: Remove lid/cap from non-toxic marker and touch the tip of the marker to the spinning egg to create colorful designs.

STEP 4: Let the fun begin!

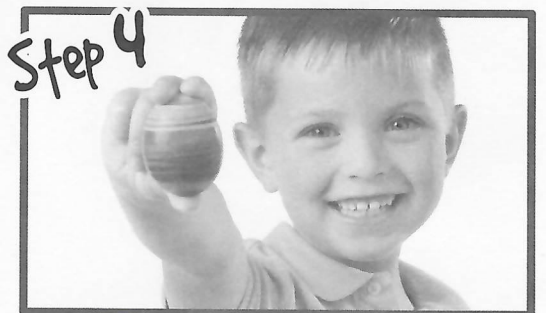

HELPFUL HINTS:

- Follow USDA guidelines on safe egg handling. www.usda.gov
- For best decorating results, use dry, room temperature eggs.
- After decorating, make sure marker lids/caps are put back on non-toxic markers to ensure longer usage.
- Go to www.eggmazing.com for cleaning and decorating designs and tips

* Do not mix alkaline, standard (carbon-zinc), or rechargeable (nickel-cadmium) batteries.

* Do not mix old and new batteries.

⚠ WARNING:

CHOKING HAZARD - Small Parts.
Not for children under 3 years.

ENTANGLEMENT HAZARD - Keep hair,
loose clothing, and jewelry away from
opening and all moving parts.



FROM THE
CREATORS OF THE
TREEMENDOUS!
CHECK OUT OUR
OTHER PRODUCTS AT
WWW.THETREEMENDOUS.COM



Patent Pending
Hey Buddy Hey Pal Investments, LLC.
3611 S. Soncy Suite 6B
Amarillo, TX 79119
www.eggmazing.com
info@heybuddyheypal.com