



The TreeMendous Ornament Decorator®

Ages 3+

INSTRUCTIONS

IMPORTANT: Before Use: * Requires 3 AA Batteries (not included)
Remove screw from battery cover and insert 3 AA batteries.
Replace the battery cover and tighten screw.

How to enjoy your new TreeMendous Decorator!

STEP 1: Remove silver cap. Align slotted groove on ornament with black lines on TreeMendous green connector.

STEP 2: Push firmly to secure ornament into the TreeMendous.



STEP 3: Turn on the TreeMendous Ornament Decorator®. On/off switch is located on the left side.

STEP 4: Remove lid/cap from marker and touch/apply the tip of the marker to the spinning ornament to create colorful designs. When finished decorating, allow 60 seconds to dry.

STEP 5: Remove ornament and replace silver cap.
Your TreeMendous Ornament is complete!

HELPFUL HINTS:

- After decorating, make sure marker lids/caps are securely put back on markers to ensure a long usage.
- Remove batteries when storing The TreeMendous Ornament Decorator®.
- Please enjoy The TreeMendous Ornament Decorator® with friends and family.
- * Do not mix alkaline, standard (carbon-zinc), or rechargeable (nickel-cadmium) batteries.
- * Do not mix old and new batteries.

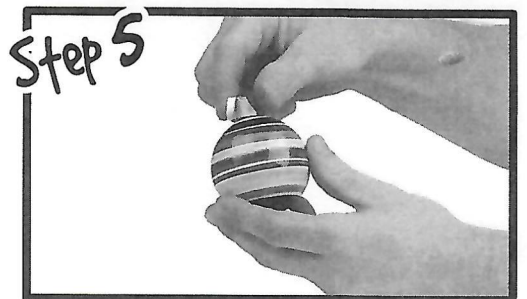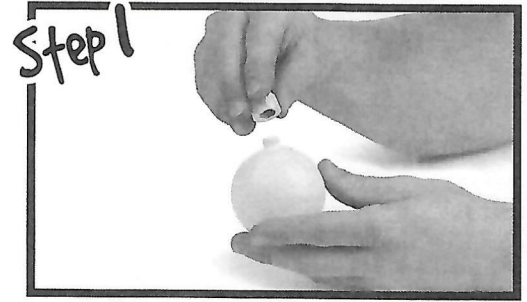

WARNING:

CHOKING HAZARD - Small Parts.
Not for children under 3 years.
ENTANGLEMENT HAZARD - Keep hair,
loose clothing, and jewelry away from
opening and all moving parts.



From the Creators
of The
EggMazing!
check out our
other products at
www.eggmazing.com



Patent # 10,531,749
Hey Buddy Hey Pal Investments, LLC.
3611 S. Soncy Suite 6B
Amarillo, TX 79119
www.thetremendous.com
info@heybuddyheypal.com