


This is a custom vector drawing based on Marantz original schematic, made by my own. The size is ISO A2 (594x420 mm) but may be scaled to any size for printing and/or viewing. You may download to a local hard disk extracts and/or print this document for personal (non commercial) and educational use only. Commercial copying, hiring, lending of this document or any part of this document is prohibited. You may not distribute or commercially exploit the content. Nor may you transmit it or store it in any other website or other form of electronic retrieval system. In all cases this notice must remain intact. Copyright © 7/2018, by Mrki, AK member (www.audiokarma.org)

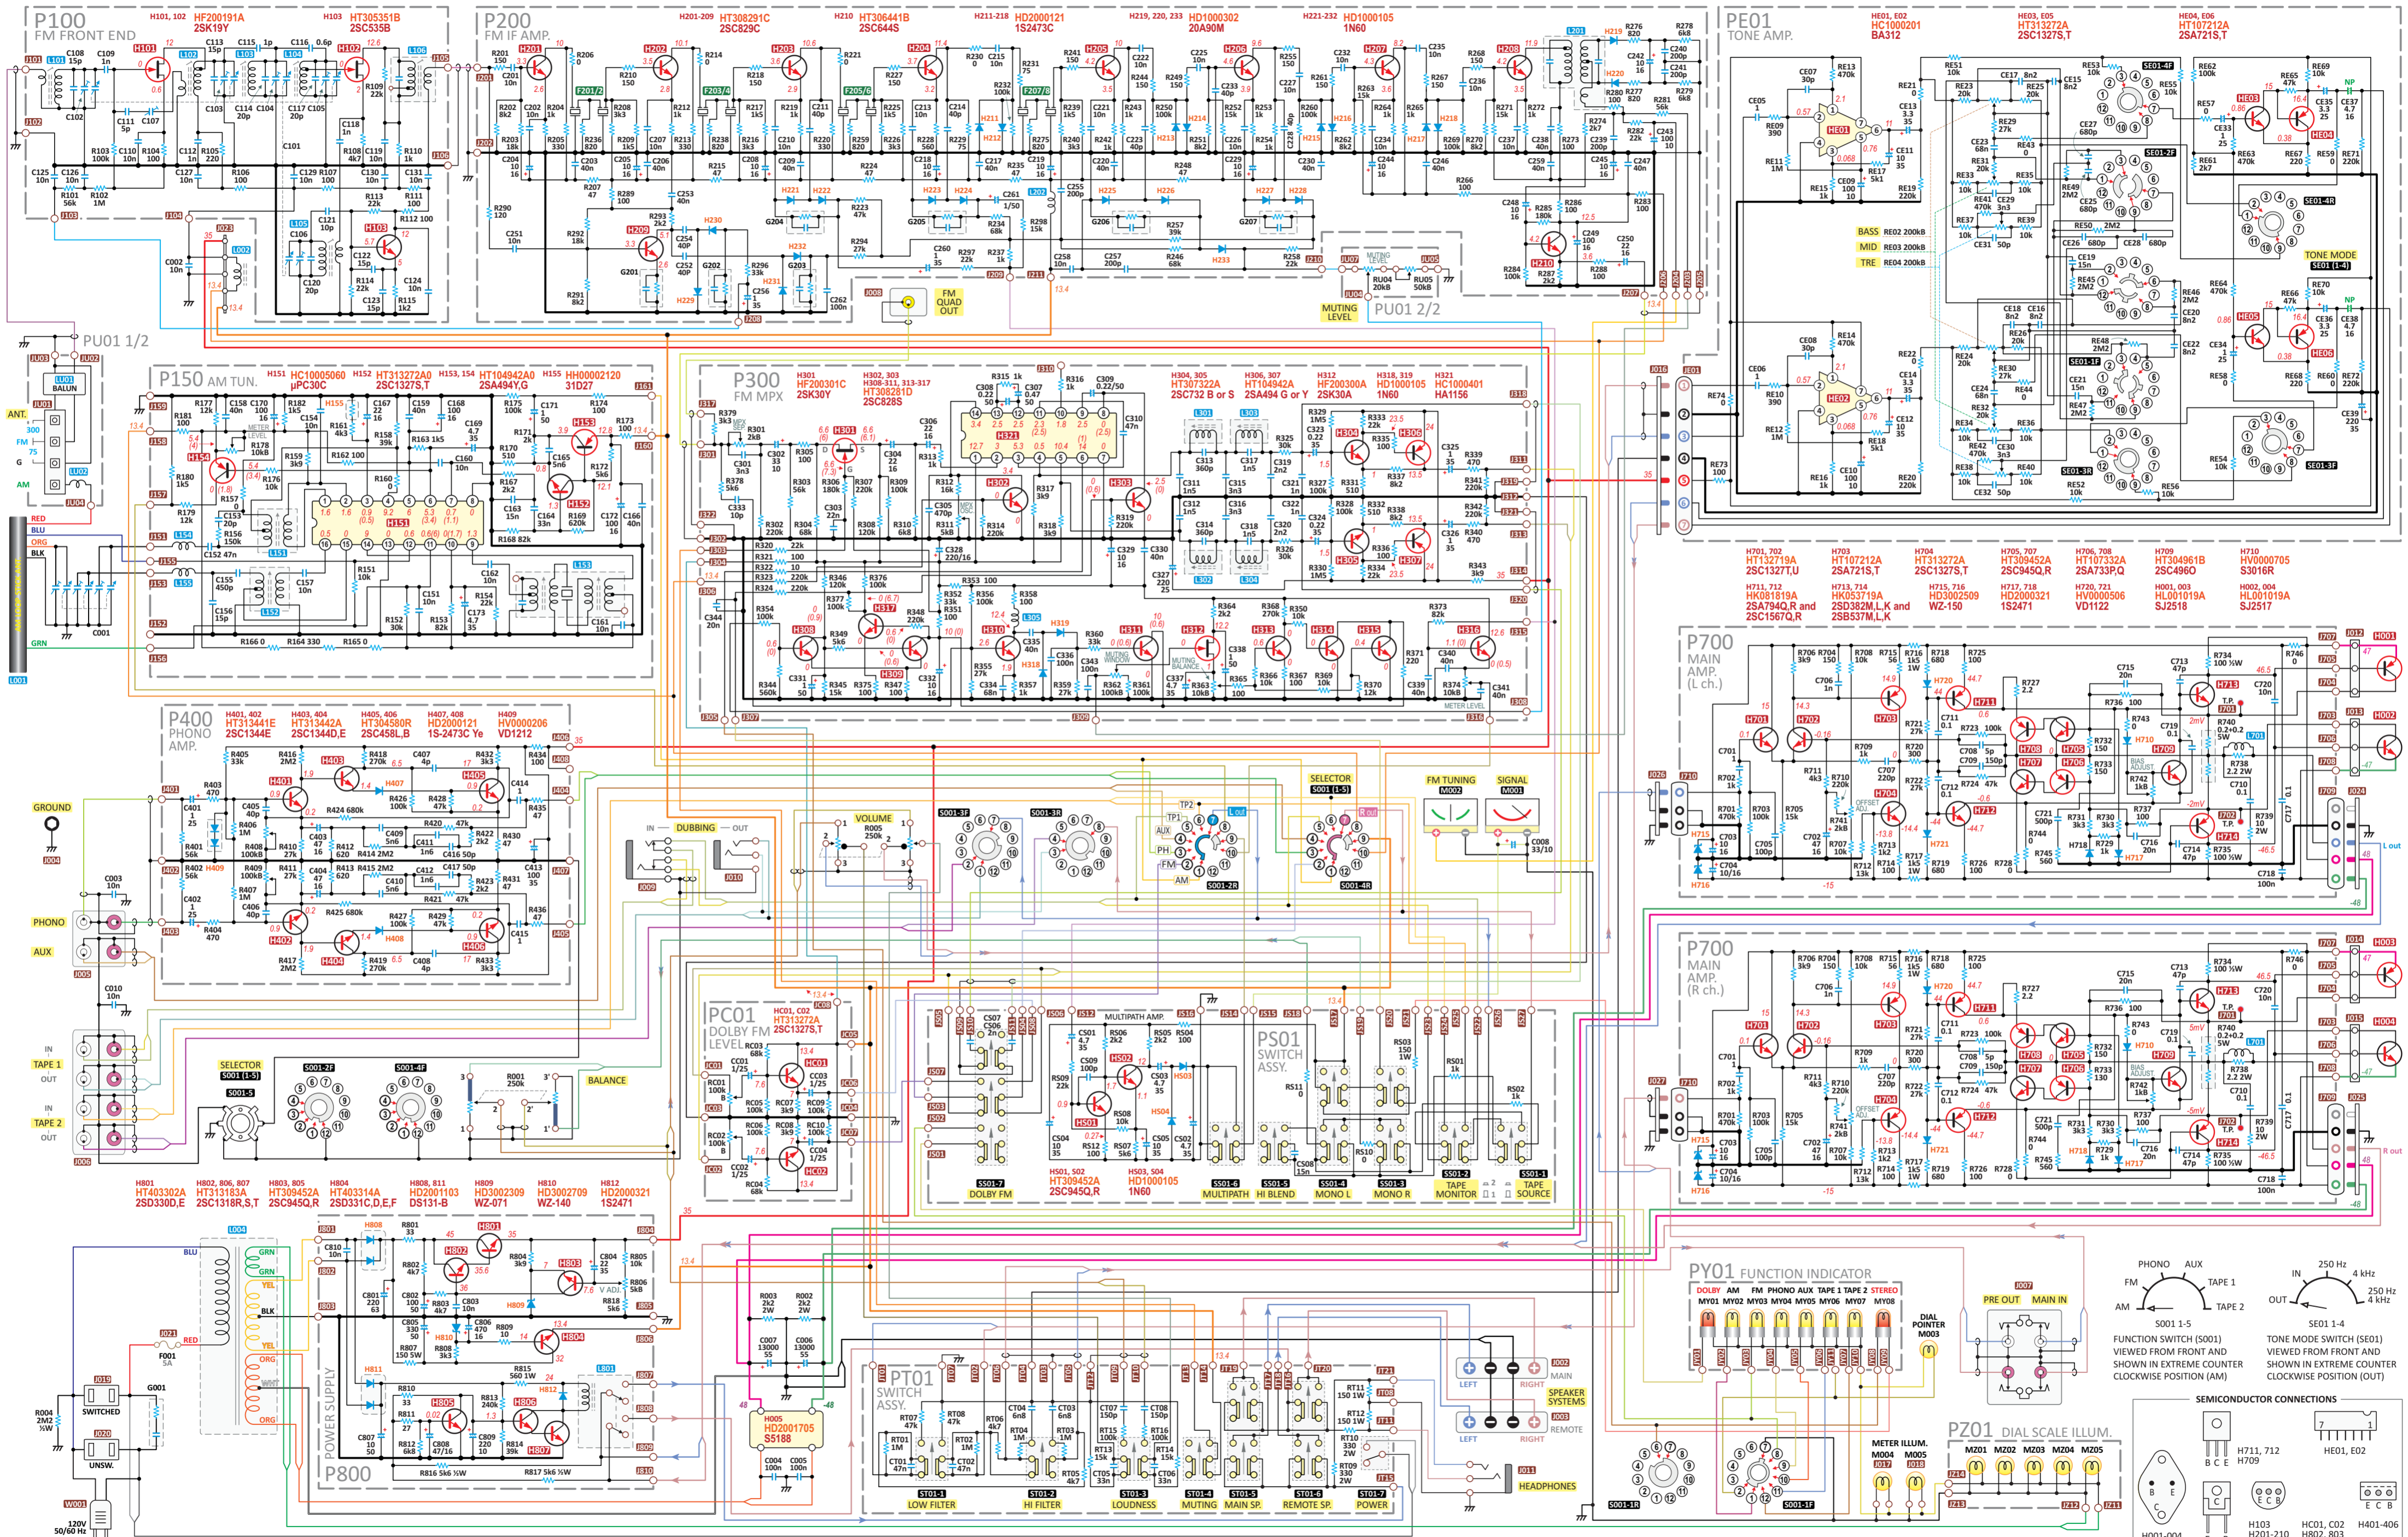

NOTE: Your use of this document is entirely at your own risk, for which I shall NOT BE LIABLE. This, that assumes or undertakes NO LIABILITY for any loss or damage suffered as a result of the use, misuse or reliance on the information and content on this document. All of the information provided in this document is provided "AS-IS" and with NO WARRANTIES.

NOTE: Capacitors values are in micro Farads (µF) unless otherwise specified. Resistor values are in Ohms unless otherwise specified.


NOTE: Voltages shown are measured to ground by using a VTVM at no signal. Voltages in () are measured by 1 mV input signal in FM STEREO mode.

ATTENTION: The following parts have different values in the Schematic as compared to those listed in the Part List of the Service Manual.

Part No	Schem	Part List	CE19 21	15n	8n2
R810	33k	CE23,24	68n	6n8	relevant, and may be partially or completely different from those mentioned left.
R811	27k	RS12	100	56	
REZ3-26	20k	CS04,05	10/35	10/16	

Therefore, values of the parts located on device's PCBs are only relevant, and may be partially or completely different from those mentioned left.

This is a custom vector drawing based on Marantz original schematic, made by my own. The size is ISO A2 (594x420 mm) but may be scaled to any size for printing and/or viewing. You may download to a local hard disk extracts and/or print this document for personal (non commercial) and educational use only. Commercial copying, hiring, lending of this document or any part of this document is prohibited. You may not distribute or commercially exploit the content. Nor may you transmit it or store it in any other website or other form of electronic retrieval system. In all cases this notice must remain intact. Copyright © 7/2018, by Mrki, AK member (www.audiokarma.org)

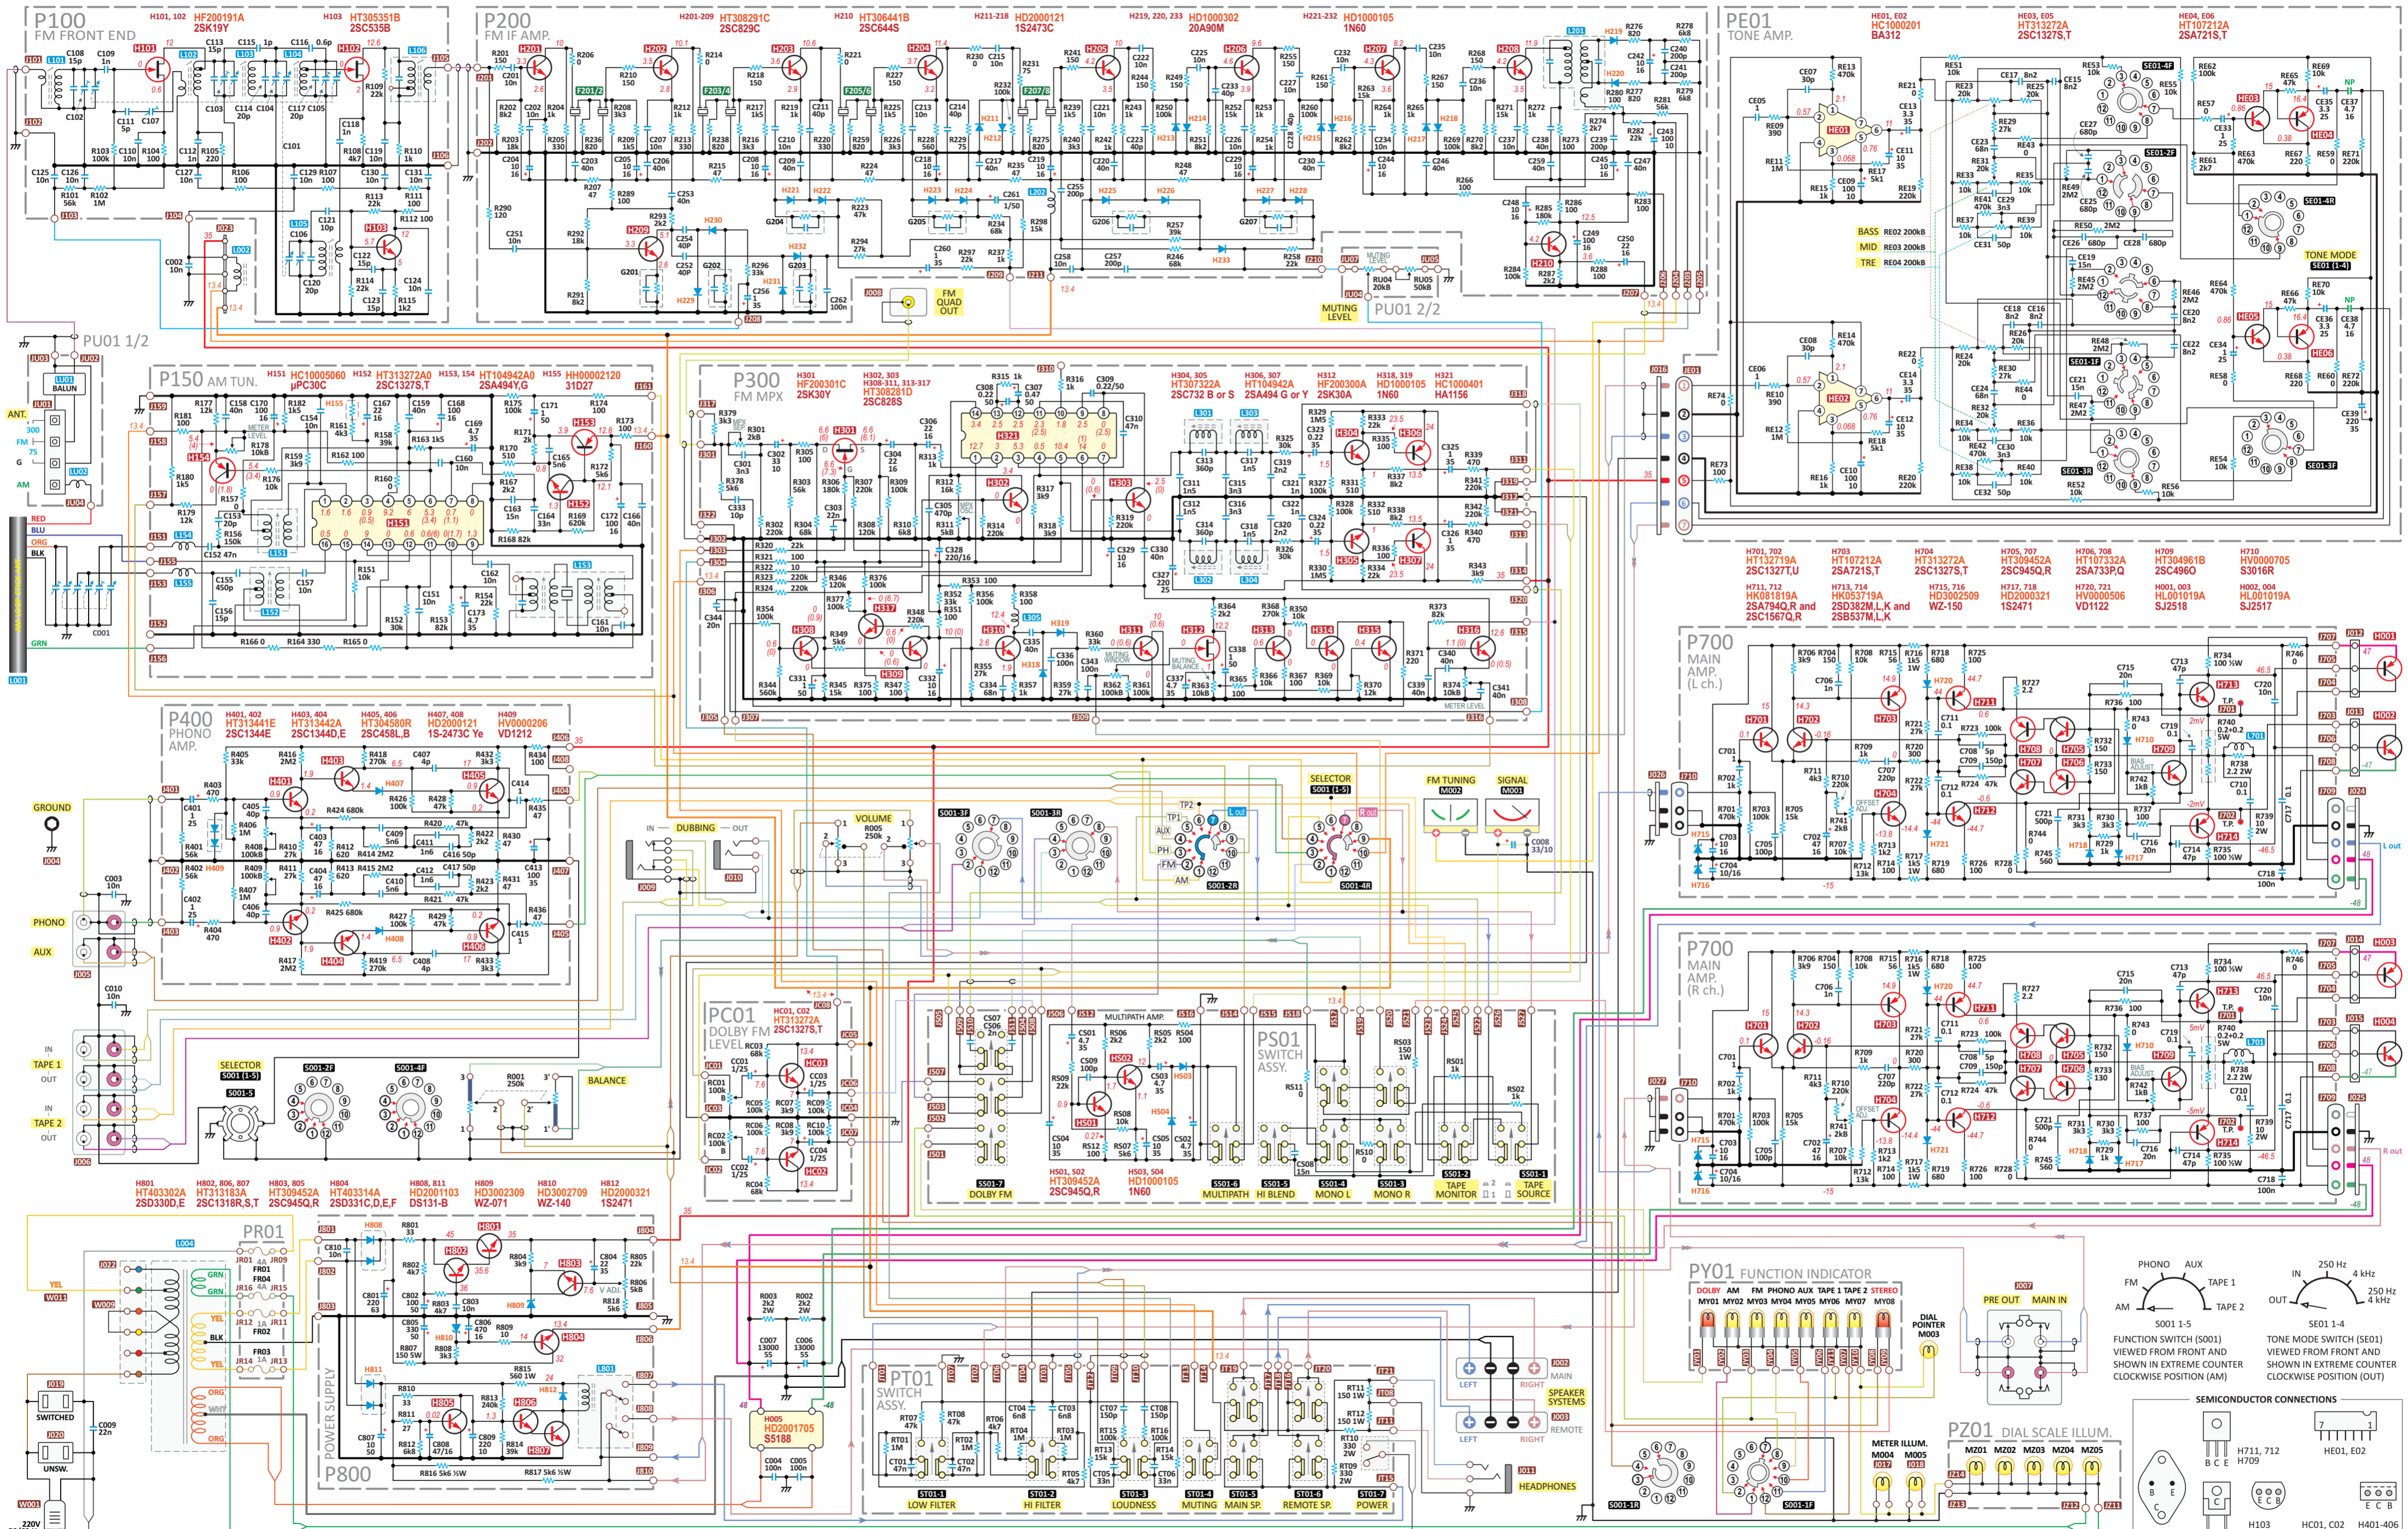

NOTE: Your use of this document is entirely at your own risk, for which I shall NOT BE LIABLE. This, that assumes or undertakes NO LIABILITY for any loss or damage suffered as a result of the use, misuse or reliance on the information and content on this document. All of the information provided in this document is provided "AS-IS" and with NO WARRANTIES.

NOTE: Capacitors values are in micro Farads (µF) unless otherwise specified. Resistor values are in Ohms unless otherwise specified.

NOTE: Voltages shown are measured to ground by using a VTVM at no signal. Voltages in () are measured by 1 mV input signal in FM STEREO mode.

ATTENTION: The following parts have different values in the Schematic as compared to those listed in the Part List of the Service Manual.

Part No	Schem	Part List	CE19 21	15n	8n2	Therefore, values of the parts located on device's PCBs are only relevant, and may be partially or completely different from those mentioned left.
R810	33	33k	CE23 24	68n	6n8	
R811	27	27k	RS12	100	56	
REZ3 26	20k	27k	CS04 05	10/35	10/16	

FUNCTION SWITCH (S001) VIEWED FROM FRONT AND SHOWN IN EXTREME COUNTER CLOCKWISE POSITION (AM)

TONE MODE SWITCH (SE01) VIEWED FROM FRONT AND SHOWN IN EXTREME COUNTER CLOCKWISE POSITION (OUT)

SEMICONDUCTOR CONNECTIONS

H001-004	H103	HC101, C02	H401-406
	H201-210	H802, 803	
	H302-311	H805-807	
	H13-316	H501, 502	
H713, 714	H701-706	HE03-E06	

Ver. 1.0