


# SPORTS AUTOMATIC - 42MM

Your Henry London watch is designed in England & manufactured to the very highest of standards. These instructions are provided to ensure your watch gives you excellent service, please read them carefully & retain them for future reference.

To start timekeeping the watch must be given an initial manual wind of 40 revolutions by rotating the crown clockwise. When fully wound, your timepiece has a power reserve of approx. 40 hours, you cannot over wind your automatic watch. The Henry London automatic movement features a built-in rotor powered by the motion of your wrist, no battery is required.

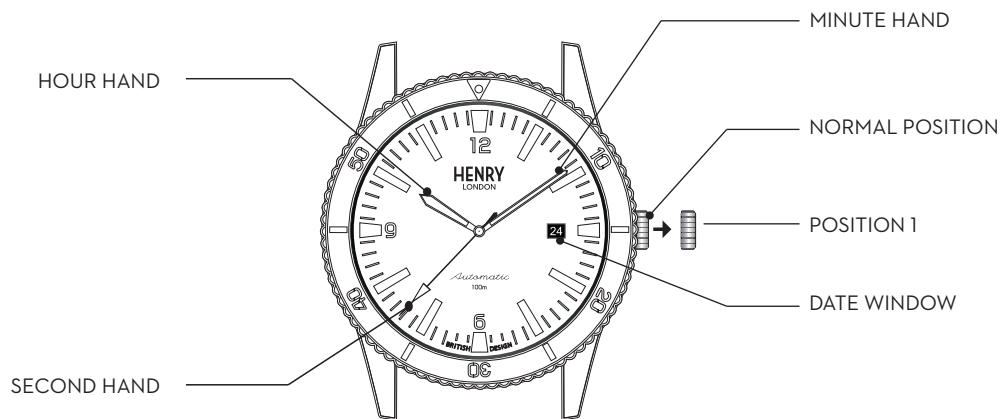

## SETTING THE TIME

1. Pull the crown out.
2. Turn the crown to set hour and minute hands.
3. Push the crown back into its normal position.

## NOTES

As the automatic watch movement is powered by regular motion of the wrist, NOT wearing your timepiece for several consecutive days will exhaust the power reserve. If your watch stops the power reserve will be run down, to reinstate manually, wind 40 times by rotating the crown clockwise.

Your automatic watch has a time keeping tolerance of between -20 and +40 seconds per day.

# SPORTS AUTOMATIC - 42MM

---

## CARE & MAINTENANCE

All watch maintenance requires specialist tools and expertise so should only be undertaken by a qualified technician, any repairs not carried out by a qualified technician may cause damage to your watch and invalidate the guarantee.

All Henry London **Sports** Automatic watches are manufactured to 10ATM water resistance which means they are water resistant to up to 100 meters (330ft). Appropriate water related uses are washing hands, showering, bathing and swimming. Our exceptional silicone straps demonstrate the latest in fashion technology. Expertly treated, the straps ensure the timepiece is completely water resistant all the while exhibiting a premium leather appearance.

However, to ensure water does not enter the watch and cause damage to it, please follow the instructions listed below:

- Do not adjust the crown while the timepiece is in contact with water.
- Ensure the crown is in the closed position before contact with water.
- Exposure to extreme atmospheres is not recommended (i.e. hot water, saunas or steam rooms).
- Avoid exposure to water moving with force as this will put extra pressure on the watch.
- Avoid long exposure to salt water. After contact with salt water, rinse watch under tap water and wipe dry with a soft cloth.

Your Henry London watch is guaranteed for two years and in the unlikely event your watch develops a fault please contact the retailer where your watch was purchased. If you purchased your watch from the Henry London online store, please contact our helpful customer service team at [customerservice@henry-london.com](mailto:customerservice@henry-london.com) or call +44 (0)121 524 1400 during our business hours of Monday - Friday, 8.30 - 5.00 GMT.

## TERMS & CONDITIONS

Your 24 month guarantee does not cover the following: 1. Damage resulting from accidents, or mishandling to any part of the watch. 2. Replacement straps or bracelets (unless due to fault). 3. Damage to lens. 4. Water penetration or damage. 5. Tarnishing of the watch bracelet or case. Your statutory rights are not affected.