


# HERITAGE CHRONOGRAPH WITH DATE

Your Henry London watch is designed in England & manufactured to the very highest of standards. These instructions are provided to ensure your watch gives you excellent service, please read them carefully & retain them for future reference.

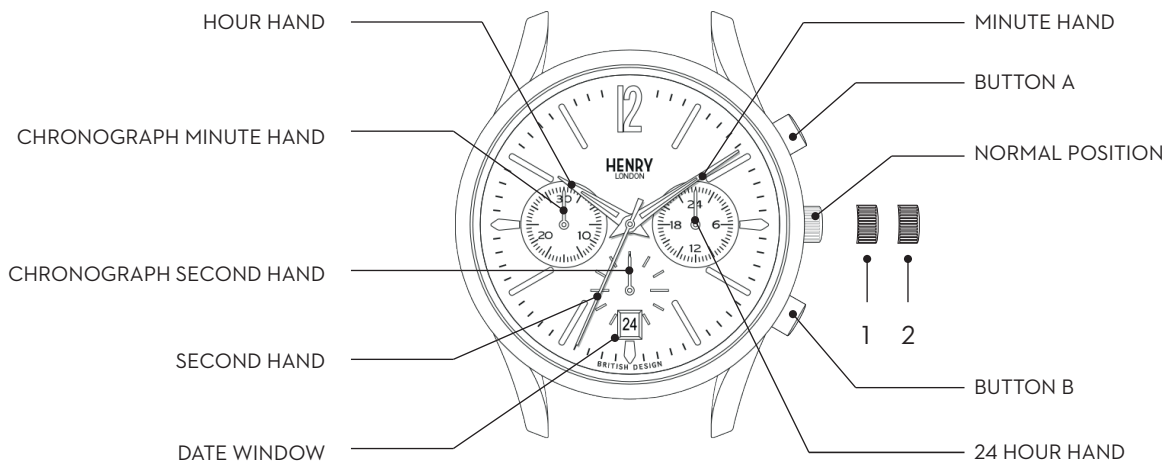

## SETTING THE TIME

1. Pull the crown out to position 2, the second hand will stop.
2. Turn the crown clockwise to set hour and minute hands.
3. Push the crown back into its normal position. The second hand will then resume.

## SETTING THE DATE

1. Pull the crown out to position 1.
2. Turn the crown anti-clockwise to set the date.  
**Note** - Do not attempt to set the date by turning the crown counter clockwise as this will affect function. The date changes between the hours of midnight & 5.30am.
3. After the date has been set, push the crown back into its normal position.

## USING THE CHRONOGRAPH

To start the chronograph press button A. The chronograph hands will start moving. To stop the chronograph press button A again. The chronograph hands stop to indicate the elapsed time. Press button B to reset the chronograph. All the chronograph hands will be reset to the '0' position. The chronograph can measure up to 30 minutes and then the chronograph stops. The chronograph can be restarted by pressing button A. During chronograph operation, button B is inoperable.

## CHRONOGRAPH RESET


This procedure should be performed when the stopwatch second & minute hand does not return to the zero. Pull the crown out to the 2nd position. Press the button "A" to set the stopwatch second hand forward. Press the button "B" to set the stopwatch second hand back. The stopwatch minutes hand is synchronised with stop watch second hand. The stopwatch second hand can be advanced rapidly by continuously pressing button "A" or "B". Once the hand has been zeroed, reset the time and return the crown to its normal position. Follow these instructions to reset your chronograph after battery replacement.

# HERITAGE CHRONOGRAPH WITH DATE

---

## MESH BRACELET ADJUSTMENT

If your Henry London watch has a mesh bracelet, please follow these instructions to ensure you get a perfect fit. Unlock clamp plate by using an appropriate tool. Move the entire clasp to adjust length by sliding along the bracelet. Adjust length while wearing the watch to make sure you get a good fit. Make sure the clasp locates into a molded indent on back of bracelet. Lock clamp plate in position by pressing it into place using your thumb. Do not use retaining bar to gain leverage as this will cause damage preventing the clasp to lock.

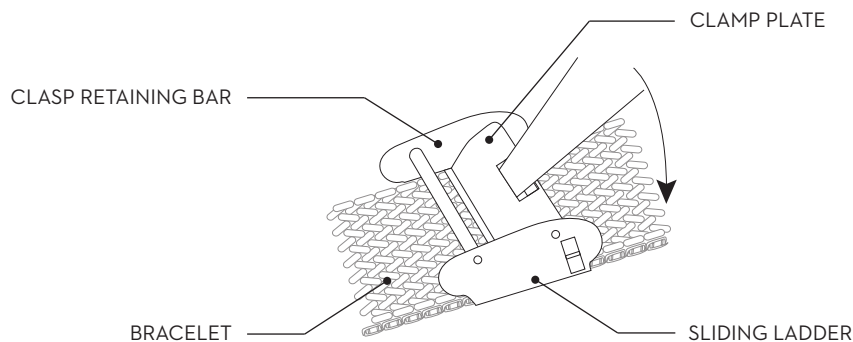

---

## CARE & MAINTENANCE

All watch maintenance, including battery replacement requires specialist tools and expertise so should only be undertaken by a qualified technician, any repairs not carried out by a qualified technician may cause damage to your watch and invalidate the guarantee.

If your watch is marked 3ATM on the caseback, then it is designed to withstand accidental water damage. Limited exposure to water, such as accidental water splashes will not damage your watch, but it is not suitable for showering, bathing or swimming. If your watch is not marked 3ATM, then due to the nature of it's construction, it is not water resistant. Care should be taken to avoid exposure to water.

Clean your watch regularly with a soft cloth to maintain good condition. Keep your watch dry and away from wet surfaces, do not use chemical cleaners on your strap and avoid contact with cosmetic products. Visit our website for more information.

Your Henry London watch is guaranteed for two years and in the unlikely event your watch develops a fault please contact the retailer where your watch was purchased. If you purchased your watch from the Henry London online store, please contact our helpful customer service team at [customerservice@henry-london.com](mailto:customerservice@henry-london.com) or call +44 (0)121 524 1400 during our business hours of Monday - Friday, 8.30 - 5.00 GMT.

## TERMS & CONDITIONS

Your 24 month guarantee does not cover the following: 1. Replacement batteries. 2. Damage resulting from accidents, or mishandling to any part of the watch. 3. Replacement straps or bracelets (unless due to fault). 4. Damage to lens. 5. Water penetration or damage. 6. Tarnishing of the watch bracelet or case. Your statutory rights are not affected.