



# 5 GALLON WET/DRY VACUUM

## USER MANUAL



IMPORTANT: READ ALL INSTRUCTIONS CAREFULLY BEFORE ASSEMBLY AND USE.  
This product is intended for Household use only. If used Commercially warranty is VOID.

## IMPORTANT SAFETY INSTRUCTIONS SAVE THESE INSTRUCTIONS

READ ALL SAFETY WARNINGS AND INSTRUCTIONS BEFORE USING THIS PRODUCT.

### WARNING: To reduce the risk of fire, electric shock, or injury:

- Do not run vacuum unattended.
- Do not use to pick up flammable or combustible liquids, such as gasoline, or use in areas where they may be present.
- Do not vacuum, or use this vacuum near flammable liquids, gases, or explosive vapors like gasoline or other fuels, lighter fluids, cleaners, oil-based paints, natural gas, hydrogen, or explosive dusts like coal dust, magnesium dust, grain dust, or gun powder. Sparks inside the motor can ignite flammable vapors or dust.
- To reduce the risk of health hazards from vapors or dusts, do not vacuum toxic materials.
- Do not use or store near hazardous materials.
- Do not pick up anything that is burning or smoking, such as cigarettes, matches, or hot ashes.
- Do not expose to rain. Store indoors.
- If vacuum is not working as it should, has been dropped, damaged, left outdoors, or dropped into water, return it to a service center.
- Do not unplug by pulling on cord. To unplug, grasp the plug, not the cord.
- Do not use with damaged cord or plug.
- Do not pull or carry by cord, use cord as a handle, close a door on cord, or pull cord around sharp edges or corners.
- Keep cord away from heated surfaces.
- Do not run the vacuum over cord.
- Do not handle plug or vacuum with wet hands.
- Do not use without dust bag and/or filters in place.
- Do not allow to be used as a toy. Close attention is necessary when used by or near children.
- To reduce the risk of injury from accidental starting, unplug power cord before changing or cleaning filter.

- Do not leave vacuum when plugged in. Unplug from outlet when not in use and before servicing.
- Turn off all controls before unplugging.
- Unplug before connecting or disconnecting hose, or any other accessories.
- Do not put any object into openings. Do not use with any opening blocked; keep free of dust, lint, hair, and anything that may reduce air flow.
- Keep hair, loose clothing, fingers, and all parts of body away from openings and moving parts.
- Use extra care when cleaning on stairs.
- Use only as described in this manual. Use only manufacturer's recommended attachments.
- This vacuum is provided with double insulation. Use only identical replacement parts.

### DOUBLE INSULATION INSTRUCTIONS.

- Local regulations or bylaws may determine the minimum age for using the device.
- Children must be supervised in order to ensure that they do not play with the equipment.
- Do not lift or transport the tool while the motor is running. Turn the tool off and wait for the tines to stop moving, then disconnect the tool from the mains before changing the area you are working on.
- If the connecting cable to this equipment is damaged, it must be replaced by the manufacturer, the customer service of the same, or a similarly qualified person in order to avoid hazards.

**CAUTION:** To reduce the risk of injury from moving parts—Unplug before servicing.

**WARNING:** To reduce the risk of electric shock—Unplug before cleaning or servicing.

### WHEN USING AS BLOWER:

- Direct air discharge only at work area.

- Do not use Wet/Dry Vacuum as a sprayer.
- Do not direct air at bystanders.
- Keep children away when blowing.
- Wear safety goggles.

### DOUBLE INSULATION INSTRUCTIONS

This Wet/Dry Vacuum is double insulated, eliminating the need for a separate grounding system. Use only identical replacement parts. Read the instructions for Servicing Double-Insulated Wet/Dry Vacuums before servicing. Use this vacuum as described in this manual. Observe the following warnings that appear on the motor housing of your vacuum.

 
**DOUBLE INSULATED—Grounding not required—When servicing use only identical replacement parts.**

**WARNING:** To reduce the risk of electric shock—Do not expose to rain. Store indoors.

**WARNING:** For your own safety, read and understand the operator's manual. Do not run unattended. Do not pick up hot ashes, coals, toxic, flammable, or other hazardous materials. Do not use around explosive liquids or vapors.

**CAUTION:** Do not vacuum drywall dust, fireplace soot, or ash with standard wet/dry filter. This type of dust is very fine which may not be captured by the filter and cause damage to motor.

**WARNING:** Servicing of double-insulated wet/dry vacuum—With a double-insulated wet/dry vacuum, two systems of

insulation are provided instead of grounding. No grounding means is provided on a double-insulated appliance, nor should a means for grounding be added. Servicing a double insulated wet/dry vacuum requires extreme care and knowledge of the system and should be done only by qualified service personnel. Replacement parts for a double-insulated wet/dry vacuum must be identical to the parts they replace. Your double-insulated wet/dry vac is marked with the words 'DOUBLE INSULATED' and the symbol  (square within a square) may also be marked on the appliance.

## DO NOT RETURN TO STORE

Contact Dirt Devil® Support for assistance with your pressure washer.



**Chat with us!**

[dirtdevil.com/pages/ddcontact](https://dirtdevil.com/pages/ddcontact)

Every day 8am-8pm EST

## EXTENSION CORDS

When using an extension cord with your Wet/Dry Vacuum refer to the following table to determine the required A.W.G. wire size. Before using the vacuum make sure the power cord and extension cord are in good working condition. Make repairs or replacements before using the vacuum cleaner. Only use extension cords that are rated for outdoor use.

120V		Length of Extension Cord			
		25ft (7.62m)	50ft (15.24m)	100ft (30.48m)	150ft (45.72m)
Ampere rating		A.W.G. Wire Size			
More than	Not more than				
0	6	18	16	16	14
6	10	18	16	14	12
10	12	16	16	14	12
12	16	14	12	Not recommended	

## SYMBOLS

The following signal words and meanings are intended to explain the levels of risk associated with this product.

SYMBOL	SIGNAL	MEANING
	<b>DANGER:</b>	Indicates a hazardous situation, which, if not avoided, will result in death or serious injury.
	<b>WARNING:</b>	Indicates a hazardous situation, which, if not avoided, could result in death or serious injury.
	<b>CAUTION:</b>	Indicates a hazardous situation, that, if not avoided, may result in minor or moderate injury.
	<b>NOTICE:</b>	(Without Safety Alert Symbol) Indicates information considered important, but not related to a potential injury (e.g. messages relating to property damage).

## UNPACKING & CHECKING CARTON CONTENTS

 
Fully assemble product prior to use.

Remove all contents from the box. Remove the power head and take out any contents inside the collection tank. Check each item against the carton contents list.

### CARTON CONTENTS LIST:

Key	Description	Qty
A	Vacuum Assembly	1
B	Handle	1
C	Hose	4
D	2-in-1 Utility Nozzle	1
E	Caster	2
F	Extension Wand	1
G	Floor Brush/Squeegee Nozzle	1
H	Noise Diffuser	1
I	Reusable Cloth Filter	1
J	Foam Wet Filter	1
K	2 Screws (Bag)	1
L	Operator's Manual	1

**NOTE:** The hose and accessories for this vacuum are 1-1/4" (3.2 cm) diameter.

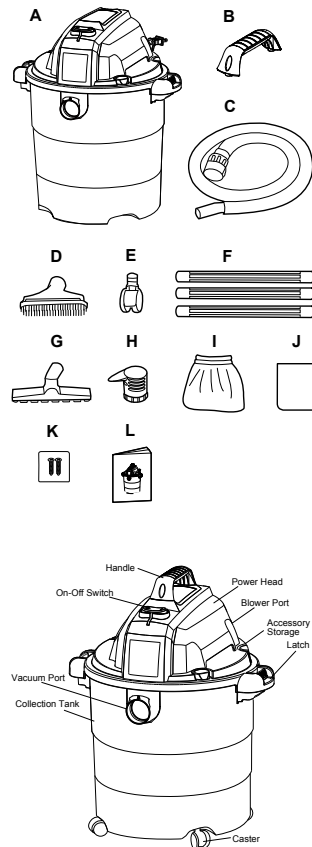


## GENERAL ASSEMBLY INSTRUCTIONS




A Philips head screw driver is required.

 
**WARNING:** DO NOT PLUG THE POWER CORD INTO A POWER OUTLET. MAKE SURE THE PLUG IS DISCONNECTED BEFORE ASSEMBLING THE WET/DRY VACUUM. TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT EXPOSE TO RAIN.

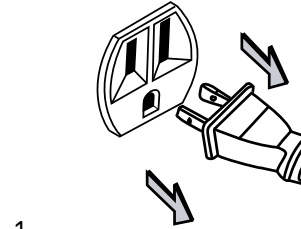

 
1. Verify that the power cord is disconnected from the outlet.

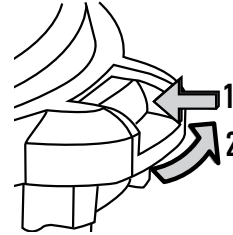

 
2. Undo the latches.

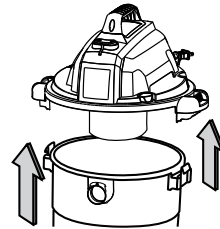

 
3. Lift the power head off the collection tank.

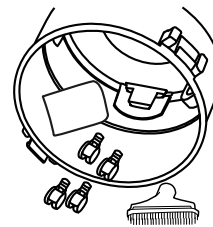

 
4. Remove the contents from inside the collection tank. Make sure you have all contents.

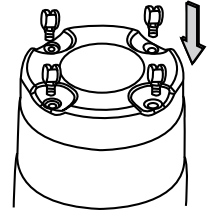

 
5. Turn the collection tank upside down and insert the four casters into the slots on the bottom of the collection tank. Ensure each caster is aligned straight into the collection tank and apply pressure until the casters snap into place.

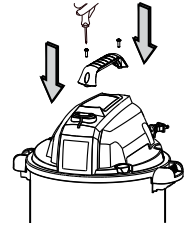

 
6. Insert the handle into the slots located on the top of the power head and secure it with the screws provided. Do not over-tighten the screws.

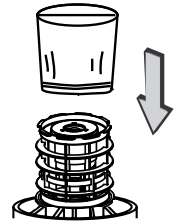

 
7. Your vacuum comes ready for dry vacuum cleaning. If the reusable cloth filter is not installed.

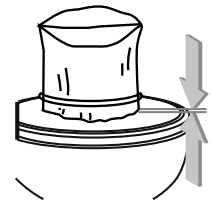

 8. For wet vacuum cleaning, remove the reusable cloth filter, and install the supplied foam wet filter. Refer to the foam wet filter installation instructions.

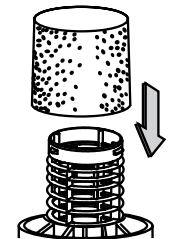


 9. Place the power head back on the collection tank, aligning the top section with the latches, and snap into place.

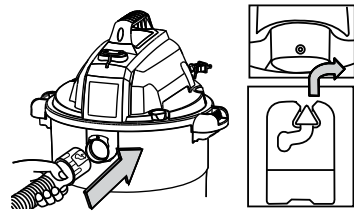

10.

 Insert the locking end of the hose into the vacuum port on the collection tank and turn clockwise to lock into place.

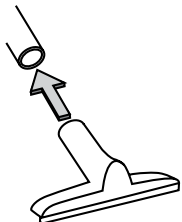

11.

Choose the desired attachment and insert onto the end of the hose or extension wand.

#### NOISE DIFFUSER

For quiet operation, install the noise diffuser into the blower port by inserting the locking end of the diffuser into the blower port and turning clockwise to lock into place.

#### POLARIZED PLUG

To reduce the risk of electrical shock, this appliance has a polarized plug (one blade wider than the other). This plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician to install the proper outlet. Do not change the plug in any way. Double insulation eliminates the need for the three-wire grounded power cord and grounded power supply system.

 
## DRY VACUUM OPERATION

### DRY VACUUMING

**WARNING:** BE SURE TO READ, UNDERSTAND, AND APPLY INFORMATION ENTITLED "IMPORTANT SAFETY INSTRUCTIONS". DO NOT VACUUM IN AREAS WITH FLAMMABLE GASES, VAPORS, OR EXPLOSIVE DUSTS IN THE AIR. FLAMMABLE GASES OR VAPORS INCLUDE BUT ARE NOT LIMITED TO: LIGHTER FLUID, SOLVENT TYPE CLEANERS, OIL-BASED PAINTS, GASOLINE, ALCOHOL, OR AEROSOL SPRAYS. EXPLOSIVE DUSTS INCLUDE BUT ARE NOT LIMITED TO: COAL, MAGNESIUM, GRAIN, OR GUN POWDER. TO REDUCE THE RISK OF HEALTH HAZARDS FROM VAPORS OR DUST, DO NOT VACUUM TOXIC MATERIALS.


**WARNING:** DO NOT PLUG THE POWER CORD INTO A POWER OUTLET. MAKE SURE THE PLUG IS DISCONNECTED BEFORE CHANGING THE FILTERS.

**CAUTION:** DO NOT VACUUM DRYWALL DUST, OR FIREPLACE SOOT, OR ASH WITH STANDARD WET/DRY FILTER. THIS IS A VERY FINE DUST WHICH WILL NOT BE CAPTURED BY THE FILTER AND MAY CAUSE DAMAGE TO MOTOR. WHEN VACUUMING FINE DUST USE A FINE DUST FILTER (SOLD SEPARATELY).

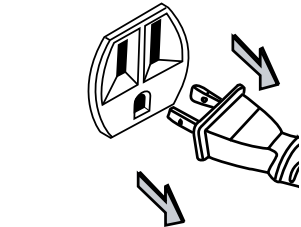


1.

 Verify that the power cord is disconnected from the outlet.

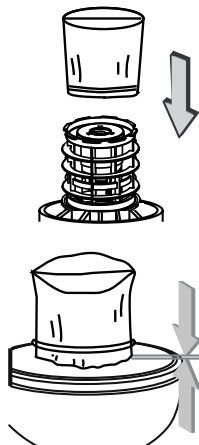

2.

 In order to prepare your vacuum for dry vacuuming, make sure the reusable cloth filter completely covers the filter cage. Your wet/dry vacuum comes with the reusable cloth filter pre-installed. For installation instructions, see INSTALLING & CLEANING REUSABLE CLOTH FILTER.

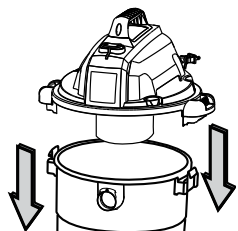


3.

Place the power head back on the collection tank and secure it in place using the latches.

### OPERATING INSTRUCTIONS: DRY VACUUMING

 
4.

Insert the locking end of the hose into the vacuum port on the collection tank and lock into place.

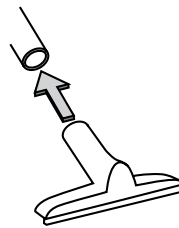


5.

 Push the required attachment onto the free end of the hose or extension wand.

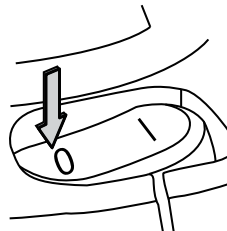


6.

 Verify that the switch is in the 'O' OFF position before plugging the power cord into the power outlet.

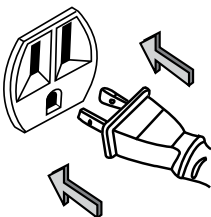


7.

 Plug the power cord into the outlet.

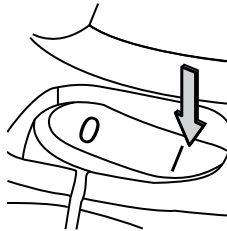

8.

 Turn the motor on by flipping the on/off switch to the 'I' ON position and begin vacuuming.

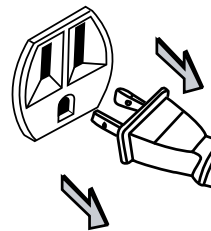

9.

Once you have completed vacuuming, flip the on/off switch to the 'O' OFF position and unplug the power cord from the outlet.


O = OFF I = ON

**DO NOT USE THE REUSABLE CLOTH FILTER FOR LIQUID VACUUMING.**
 
## LIQUID VACUUM OPERATION


**WARNING:** BE SURE TO READ, UNDERSTAND, AND APPLY INFORMATION ENTITLED "IMPORTANT SAFETY INSTRUCTIONS". DO NOT VACUUM IN AREAS WITH FLAMMABLE GASES, VAPORS, OR EXPLOSIVE DUSTS IN THE AIR. FLAMMABLE GASES OR VAPORS INCLUDE BUT ARE NOT LIMITED TO: LIGHTER FLUID, SOLVENT TYPE CLEANERS, OIL-BASED PAINTS, GASOLINE, ALCOHOL, OR AEROSOL SPRAYS. EXPLOSIVE DUSTS INCLUDE BUT ARE NOT LIMITED TO: COAL, MAGNESIUM, GRAIN, OR GUN POWDER. TO REDUCE THE RISK OF HEALTH HAZARDS FROM VAPORS OR DUST, DO NOT VACUUM TOXIC MATERIALS.

**WARNING:** DO NOT PLUG THE POWER CORD INTO A POWER OUTLET. MAKE SURE THE PLUG IS DISCONNECTED BEFORE CHANGING THE FILTERS.

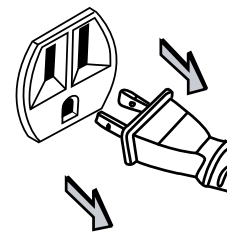

1.

 Verify that the power cord is disconnected from the outlet. Make sure that the collection tank is clean and free of dust and dirt.

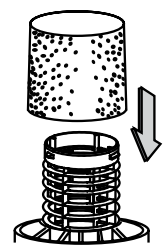

2.


Remove the reusable cloth filter, then carefully install the foam wet filter over the filter cage and place the power head back on the collection tank. For foam wet filter installation instructions, see INSTALLING & CLEANING FOAM WET FILTER.

**DO NOT USE THE CARTRIDGE FILTER FOR LIQUID VACUUMING.**
 
### OPERATING INSTRUCTIONS: WET VACUUMING



3.

Insert the locking end of the hose into the vacuum port on the collection tank and lock into place.

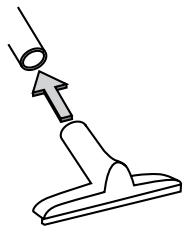


4.

  Push the required attachment onto the free end of the hose or extension wand.

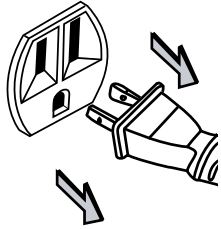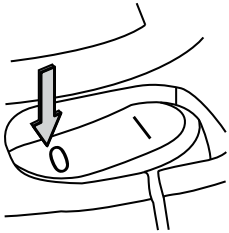

5.

 Verify that the on/off switch is in the 'O' OFF position before plugging the power cord into the power outlet. Plug the power cord into the outlet.

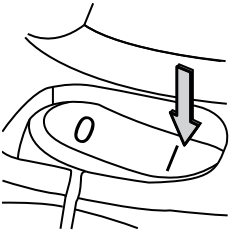

6.

Turn the motor on by flipping the switch to the 'I' ON position.

7.

Once you have completed vacuuming, flip the on/off switch to the 'O' OFF position and unplug the power cord from the outlet.



8.

After use, empty the collection tank, clean and dry the inside and outside the collection tank.

**IMPORTANT:** When vacuuming large quantities of liquids, do not immerse the nozzle completely in the liquid; leave a gap at the tip of the nozzle opening to allow air inflow. The machine is fitted with a float valve that stops the suction action when the collection tank reaches its maximum capacity. You will notice an increase in motor speed. When this happens, turn off the machine,

disconnect from power supply, and empty the liquid into a suitable receptacle or drain. To continue vacuuming, refit the power head to the collection tank. After wet vacuuming, turn the machine off and remove plug from power supply. Empty the collection tank, clean, and dry the inside and outside before storage.

**REMEMBER:** The foam wet filter must be removed after wet vacuuming and the reusable cloth filter must be installed before dry vacuuming again.


## BLOWER OPERATION

 This Wet/Dry Vacuum has blowing capabilities. To use the blower feature, follow the instructions listed.

**WARNING:** ALWAYS WEAR SAFETY GOGGLES COMPLYING WITH ANSI Z87.1 (OR IN CANADA, CSAZ94.3) BEFORE USING BLOWER.

**CAUTION:** KEEP BYSTANDERS CLEAR FROM BLOWING DEBRIS.

**WARNING:** WEAR A DUST MASK IF BLOWING CREATES DUST THAT MIGHT BE INHALED.

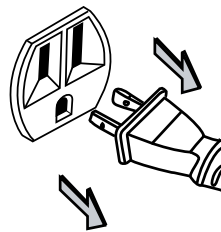


1.

Verify that the power cord is disconnected from the outlet.


2.

 Make sure the collection tank is empty before using as a blower. Clear all dirt and debris from the hose and collection tank.

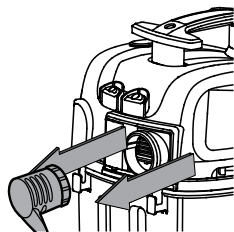


3.

 Remove the hose from the vacuum port. Remove noise diffuser from blower port.

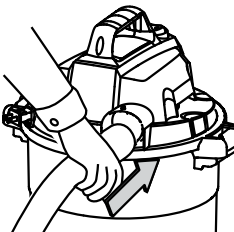



4.

 Secure the larger end of the hose into the blower port on the back of the power head and lock into position.

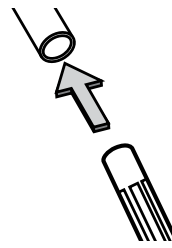


5.

  Fit the desired attachment onto the hose.

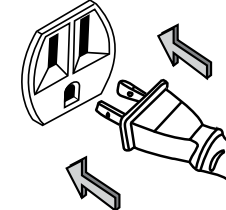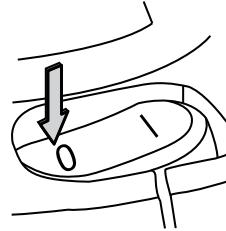


6.

 Verify that the on/off switch is in the 'O' OFF position before plugging the power cord into the outlet. Plug the power cord into the outlet.

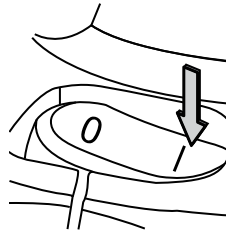

7.

 Before turning on the vacuum, firmly hold loose end of the hose. Turn the motor on by flipping the switch to the 'I' ON position.

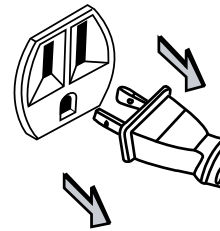


8.

Once you have completed blowing, flip the on/off switch to the 'O' OFF position and unplug the power cord from the outlet.

## MAINTENANCE

 
### EMPTYING THE COLLECTION TANK

**WARNING:** ALWAYS DISCONNECT THE PLUG FROM THE POWER OUTLET BEFORE REMOVING THE POWER HEAD FROM THE COLLECTION TANK.

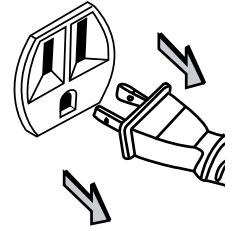


1.

 Verify that the power cord is disconnected from the outlet.

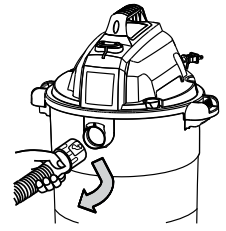

2.

 Disconnect the hose from the vacuum.

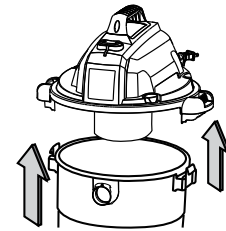

3.

Undo the latches and remove the power head from the collection tank. Place power head on a soft, clean surface upside down.



4.

Clear all dirt or debris from the collection tank and hose into a proper waste container.

5.

Clean or replace the filters.

6.

Check the hose, attachments, and power cord to ensure that they have not been damaged.

7.

Place the power head back on the collection tank and secure latches.

**IMPORTANT:** Clean or change the filter regularly for best performance. **"ALWAYS USE THE REUSABLE CLOTH FILTER FOR DRY VACUUMING"**. If the machine is used without the reusable cloth filter, the motor will burn out and the warranty will be voided. Always keep spare filters on hand.

**NOTICE:** The filters included are made of high-quality materials designed to stop small dust particles. The reusable cloth filter should be used for dry pick-up only. A dry reusable cloth filter is necessary to pick up dust. If the reusable cloth filter is wet, it will clog quickly and be very difficult to clean. Handle the filter carefully when removing it for cleaning or replacing. Check the filters for tears or small holes. A small hole can let dust pass through and out of the filter. Do not use a filter with holes or tears; replace it immediately.

#### STORAGE

 
Before storing your vacuum, the collection tank should be emptied and cleaned. The accessories should be cleaned and stored so they can be readily available when needed. Store the wet/dry vacuum indoors.

#### REPAIRS


Repairs for this wet/dry vacuum should be performed only by qualified service personnel using only identical replacement parts.

## INSTALLING & CLEANING REUSABLE CLOTH FILTER

### INSTALLATION AND CLEANING OF THE REUSABLE CLOTH FILTER

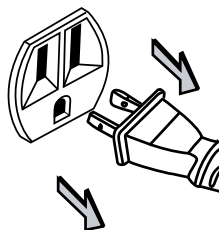


 1. Verify that the power cord is disconnected from the outlet.
2. Remove the power head and place in an upside-down position.

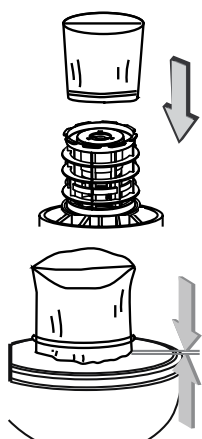

3. Install the reusable cloth filter over the filter cage making sure the cage is completely covered.
4. Place the power head back onto the collection tank.

### REMOVING & CLEANING REUSABLE CLOTH FILTER

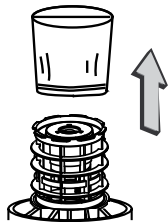 


1. With the removed power head in an upside-down position, carefully remove the reusable cloth filter from the filter cage.
2. Clean the reusable cloth filter by gently tapping or brushing dirt off. Cleaning should not be done indoors in living areas. For optimal performance, a new filter is recommended.




3. Use a mild soap and water solution to wash reusable cloth filter and rinse with clean water.
4. Allow the wet filter to air dry for 24 hours before installing onto the filter cage.

## INSTALLING & CLEANING FOAM WET FILTER
 
### INSTALLING FOAM WET FILTER

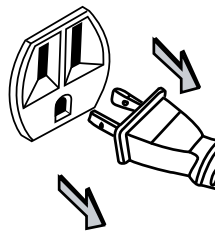


 1. Verify that the power cord is disconnected from the outlet.
2. Remove the power head and place in an upside-down position. Follow instructions to remove the reusable cloth filter at INSTALLING & CLEANING REUSABLE CLOTH FILTER.

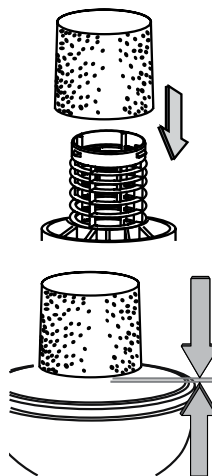


3. Carefully slide the foam wet filter down over the filter cage making sure the cage is completely covered.
4. Place the power head onto the collection tank.

### CLEANING FOAM WET FILTER

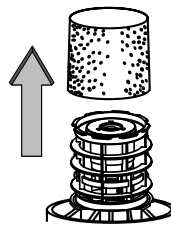 

 1. With the removed power head in an upside-down position, carefully remove the foam wet filter.

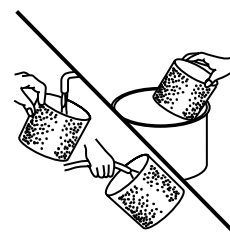

2. Use a mild soap and water solution to wash the foam wet filter and rinse with clean water.
3. Allow the wet filter to air dry for 24 hours before installing onto the filter cage.

# SERVICE PARTS

PART	PART NUMBER
Standard Cartridge Filter	AD41000
Wet Foam Filter	AD43000
Dust Collection Bags (2PK)	AD11000

## TROUBLESHOOTING

**WARNING:** To reduce the risk of electric shock, unplug before troubleshooting.

PROBLEM	POSSIBLE CAUSE	POSSIBLE SOLUTION
The wet/dry vacuum will not operate.	1. No power supply.	1. Check the power supply, cord, breakers, and fuses.
	2. Faulty power cord.	2. Unplug and check the power cord. If damaged, have it repaired by a professional.
	3. Collection tank is full.	3. Empty the collection tank.
	4. Switch in the wrong position.	4. Press the ON 'I' button on the power head.
The dust comes out from the motor cover.	1. The reusable cloth filter is missing or damaged.	1. Attach or replace the reusable cloth filter.
	2. Vacuum has been used to collect fine dust, such as dry wall dust, fireplace soot, or ash, without a fine dust filter.	2. Remove the reusable cloth filter and install the appropriate fine dust filter.
Reduced efficiency and motor/speed vibration.	1. There are blockages in the nozzle, hose, or the collection tank inlets.	1. Unplug and check nozzle, hose and collection tank inlets for blockages.
	2. The reusable cloth filter is clogged by fine dust.	2. Take off the filter and clean it or install a new reusable cloth filter.

## WARRANTY

### LIMITED WARRANTY FOR DIRT DEVIL® PRODUCT / 2 (TWO) YEARS LIMITED WARRANTY (DOMESTIC USE)

If this product is not as warranted, contact TTI Floor Care North America Customer Service at **1-800-944-9200**. Please have available the proof of purchase and model number for the warranted product.

Failure to register the product does not diminish product warranty rights.

**WHAT THIS WARRANTY COVERS:** This limited warranty provided by Royal Appliance Mfg. Co., doing business as TTI Floor Care North America (referred to hereafter as "Warrantor") applies only to products purchased in the U.S. (including its territories and possessions), a U.S. Military Exchange, or Canada. When used and maintained in normal household use and in accordance with the Owner's Guide, this product is warranted against original defects in material and workmanship for 2 (Two) years from the date of original purchase (the "Warranty Period"). If Warrantor determines that the issue you are experiencing is covered under the terms of this warranty (a "covered warranty claim"), we will, at our sole discretion and free of charge (subject to the cost of shipping), either (i) repair your product; (ii) ship you a replacement product, subject to availability; or (iii) in the event that the applicable parts or replacement are not reasonably available, ship you a similar product of equal or greater value. In the unlikely event that we are unable to repair your product or ship a replacement or similar product, we reserve

the right, at our sole discretion, to issue you a refund or store credit (if applicable) of the actual purchase price at the time of the original purchase as reflected on the original sales receipt. Parts and replacements may be new, refurbished, lightly used, or remanufactured, in Warrantor's sole discretion.

**WHO THIS LIMITED WARRANTY COVERS:** This limited warranty extends only to the original retail purchaser, with original proof of purchase from Warrantor or an authorized dealer of Warrantor products, in the U.S., U.S. Military Exchanges, and Canada.

**WHAT THIS WARRANTY DOES NOT COVER:** This warranty does not cover use of the product in a commercial operation (such as maid, janitorial, and equipment rental services, or any other income-generating activity); improper maintenance of the product; the product if it has been subject to misuse, negligence, neglect, vandalism, or the use of voltages other than that on the data plate of this product. This warranty does not cover damage resulting from an act of God, accident, owner's acts or omissions, service of this product by other than Warrantor or a Warrantor authorized service provider (if applicable), or other acts beyond the control of Warrantor. This warranty also does not cover use outside the country in which the product was initially purchased, or resale of the product by the original owner. Pick-up, delivery, transportation,

and house calls are not covered by this warranty. In addition, this warranty does not cover any product that has been altered or modified, or repairs made necessary by normal wear or the use of other products, parts, or accessories which are either incompatible with this product or adversely affect this product's operation, performance, or durability. Normal wear items are not covered under this warranty. Depending on the product, normal wear items may include, but are not limited to, belts, filters, brush rolls, blower fans, blower and vacuum tubes, and vacuum bags and straps.

**OTHER IMPORTANT TERMS:** This warranty is not transferable and may not be assigned; any assignment made in contravention of this prohibition is void. This warranty shall be governed and construed under the laws of the state of North Carolina. The Warranty Period will not be extended by any replacement of batteries, parts, or products or by virtue of any repair performed under this warranty.

THIS LIMITED WARRANTY IS THE EXCLUSIVE WARRANTY AND REMEDY, AND ALL EXPRESS AND IMPLIED WARRANTIES OTHER THAN THE LIMITED WARRANTY SET FORTH ABOVE, INCLUDING IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE EXPRESSLY DISCLAIMED. IN NO EVENT WILL WARRANTOR BE LIABLE FOR ANY SPECIAL, INDIRECT, INCIDENTAL OR CONSEQUENTIAL DAMAGES OF ANY KIND OR

NATURE TO OWNER OR ANY PARTY CLAIMING THROUGH OWNER, WHETHER BASED IN CONTRACT, NEGLIGENCE, TORT, OR STRICT PRODUCTS LIABILITY OR ARISING FROM ANY CAUSE WHATSOEVER, EVEN IF THIS WARRANTY FAILS OF ITS ESSENTIAL PURPOSE. TO THE EXTENT PERMITTED BY APPLICABLE LAW, NO WARRANTIES THAT ARISE BY OPERATION OF LAW, IF APPLICABLE, SHALL EXCEED THE DURATION OF THE LIMITED WARRANTY PROVIDED HEREIN. Warrantor's liability for damages to you for any costs whatsoever arising out of this statement of limited warranty shall be limited to the amount paid for this product at the time of original purchase.

Some states do not allow the exclusion or limitation of incidental or consequential damages, disclaimers of implied warranties, or limitations on the duration of implied warranties, so the above exclusions, disclaimers, and/or limitations may not apply to you. This warranty gives you specific legal rights, and you may also have other rights, which vary from state to state.

**GENUINE PARTS AND ACCESSORIES:** We recommend using only with genuine Dirt Devil® parts, and accessories. Damage caused by use with other than genuine Dirt Devil® parts, and accessories is not covered by and may void your warranty.