


# How to Remove and Replace the Hatch and Splash Covers

## Before starting

Remove power lead and pull tubes from the bottles and put them to one side

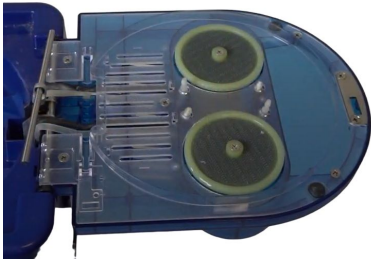

## What you'll need

Large Phillips screwdriver  
Small Flat screwdriver


## Instructions

With the lid in the open position slide the gas spring cover to the right and remove the lid bar that's connected to the gas spring. Open the lid to all the way back.

Remove all 7 phillips screws (5 in the splash cover and 2 in the hook plate) lift up and remove the cover and plate. Now remove the 2 screws in the centre of each pad holder. Do the same for the 2 screws holding the pad holder module in place and put all of these to one side

Now remove the tubes and lift up the blue hatch and slide this out.

N.B. There is a small magnet in the front of the hatch that is important. Also when it's put into the new hatch it must go the same way round.

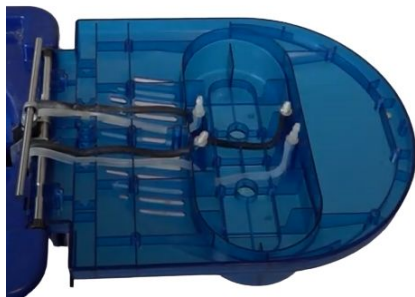

[Watch the Video](#)



[These parts are available through our website here](#)